

# AER Gluing Instructions

## What do you want to do?

Fix a cracked Wing .....Page 1

Fix a broken screwing thread.....Page 2

Fix a broken Bumper.....Page 3

## What you will need:

### ● UHU POR

available at:

- [amazon.com](https://www.amazon.com)
- [amazon.de](https://www.amazon.de)
- your local hardware or modeling store



### ● SUPER GLUE

(only if you broke your bumper)  
no specific brand, they all tend work the same




### ● PAPER WIPES



### ● 20 MINUTES OF YOUR TIME


# Fixing a damaged Wing

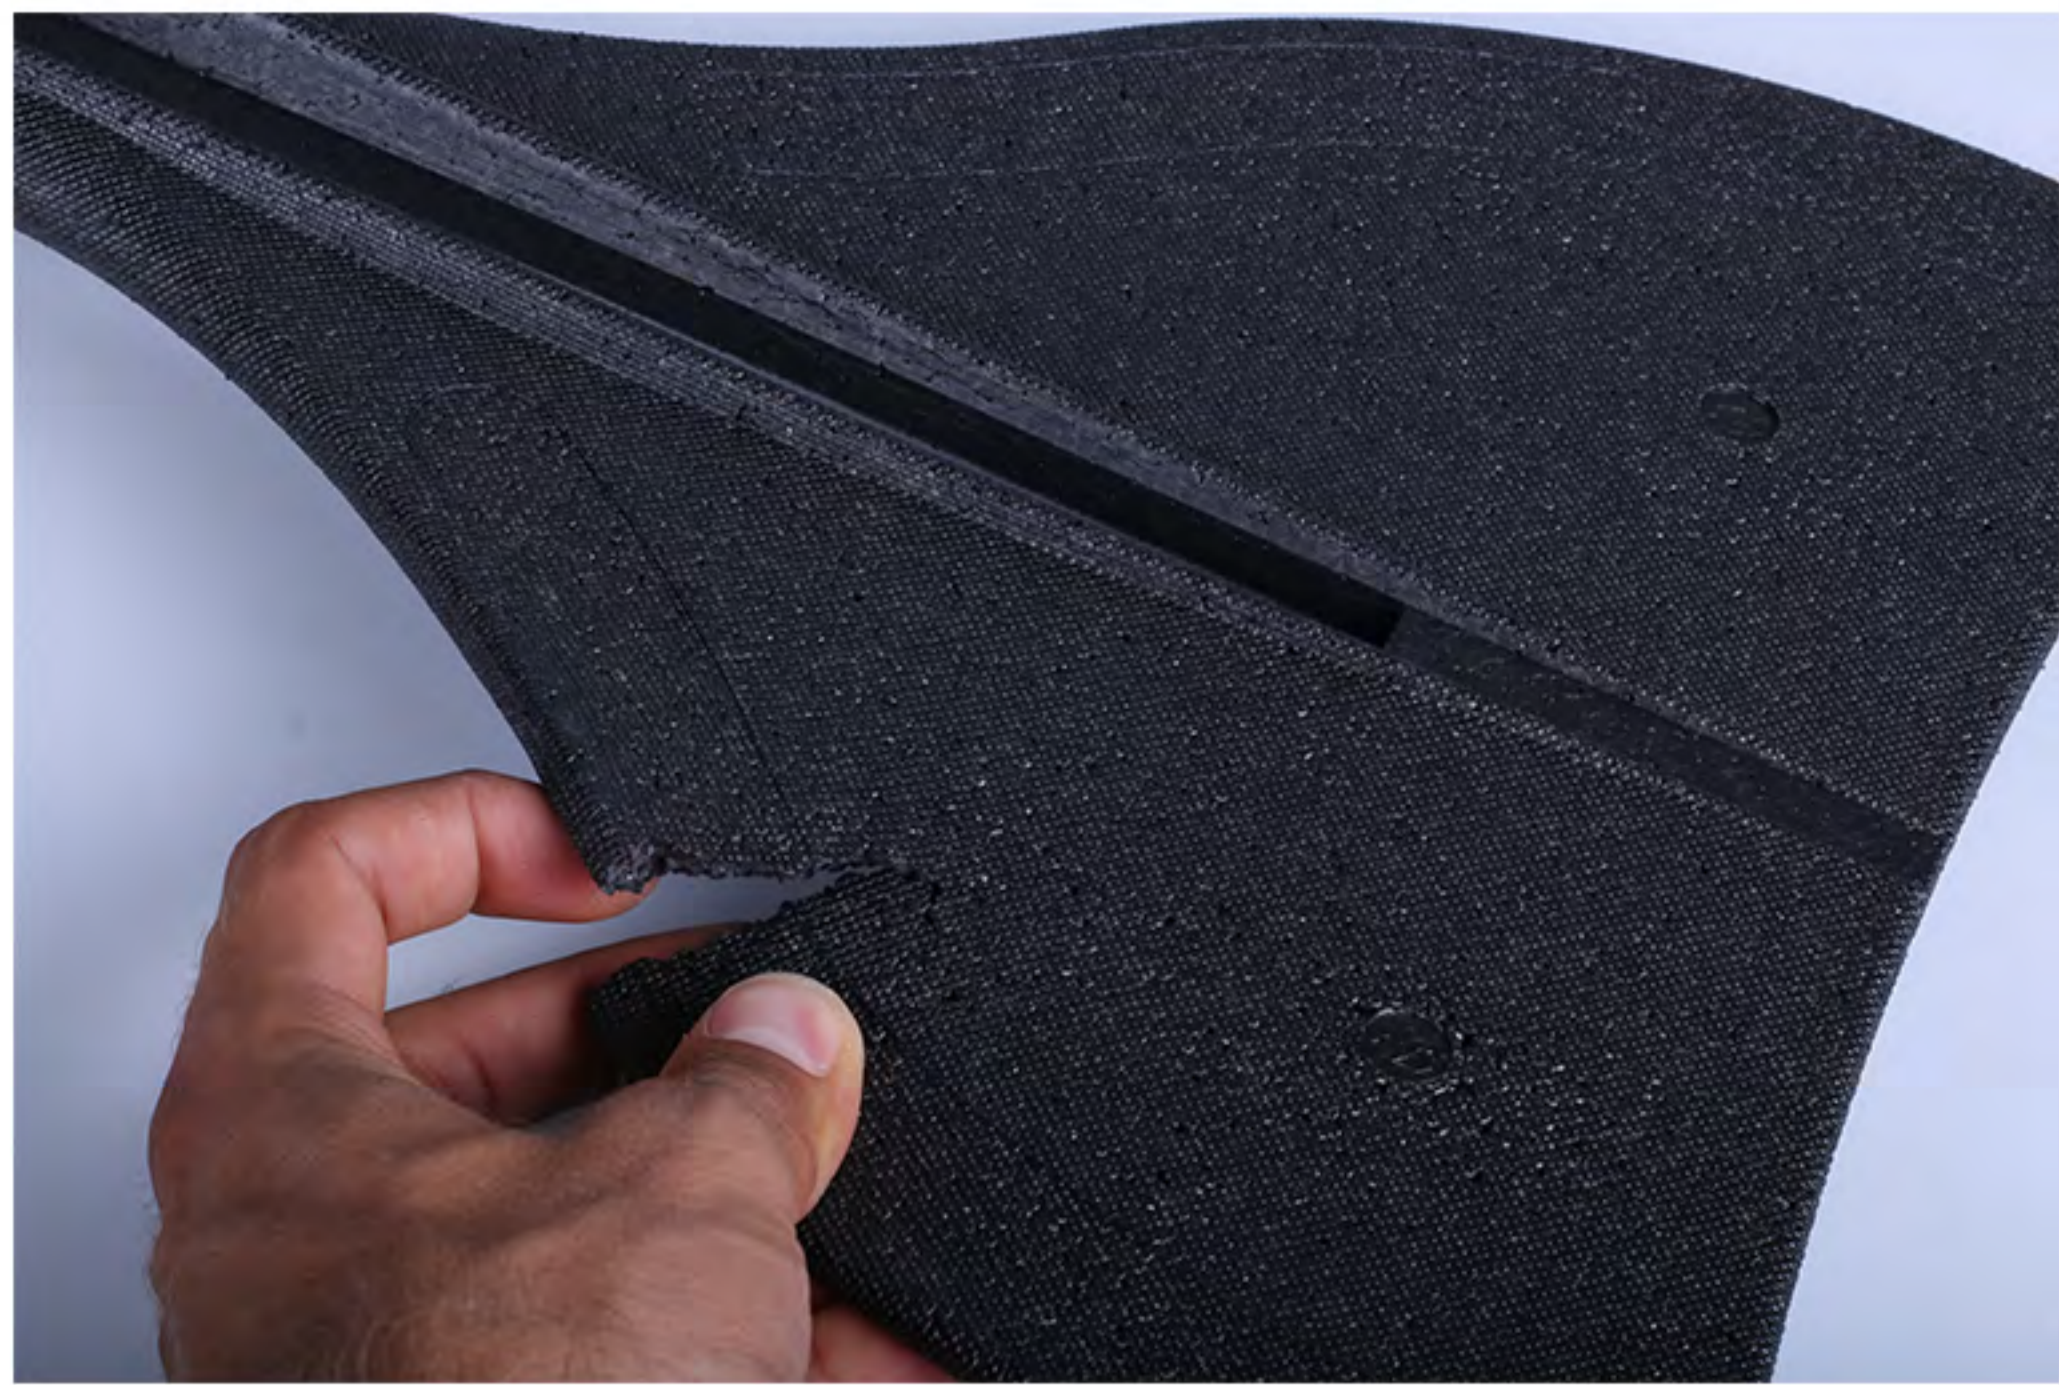

1. So, you broke your wing, no biggie!



2. Take your UHU POR

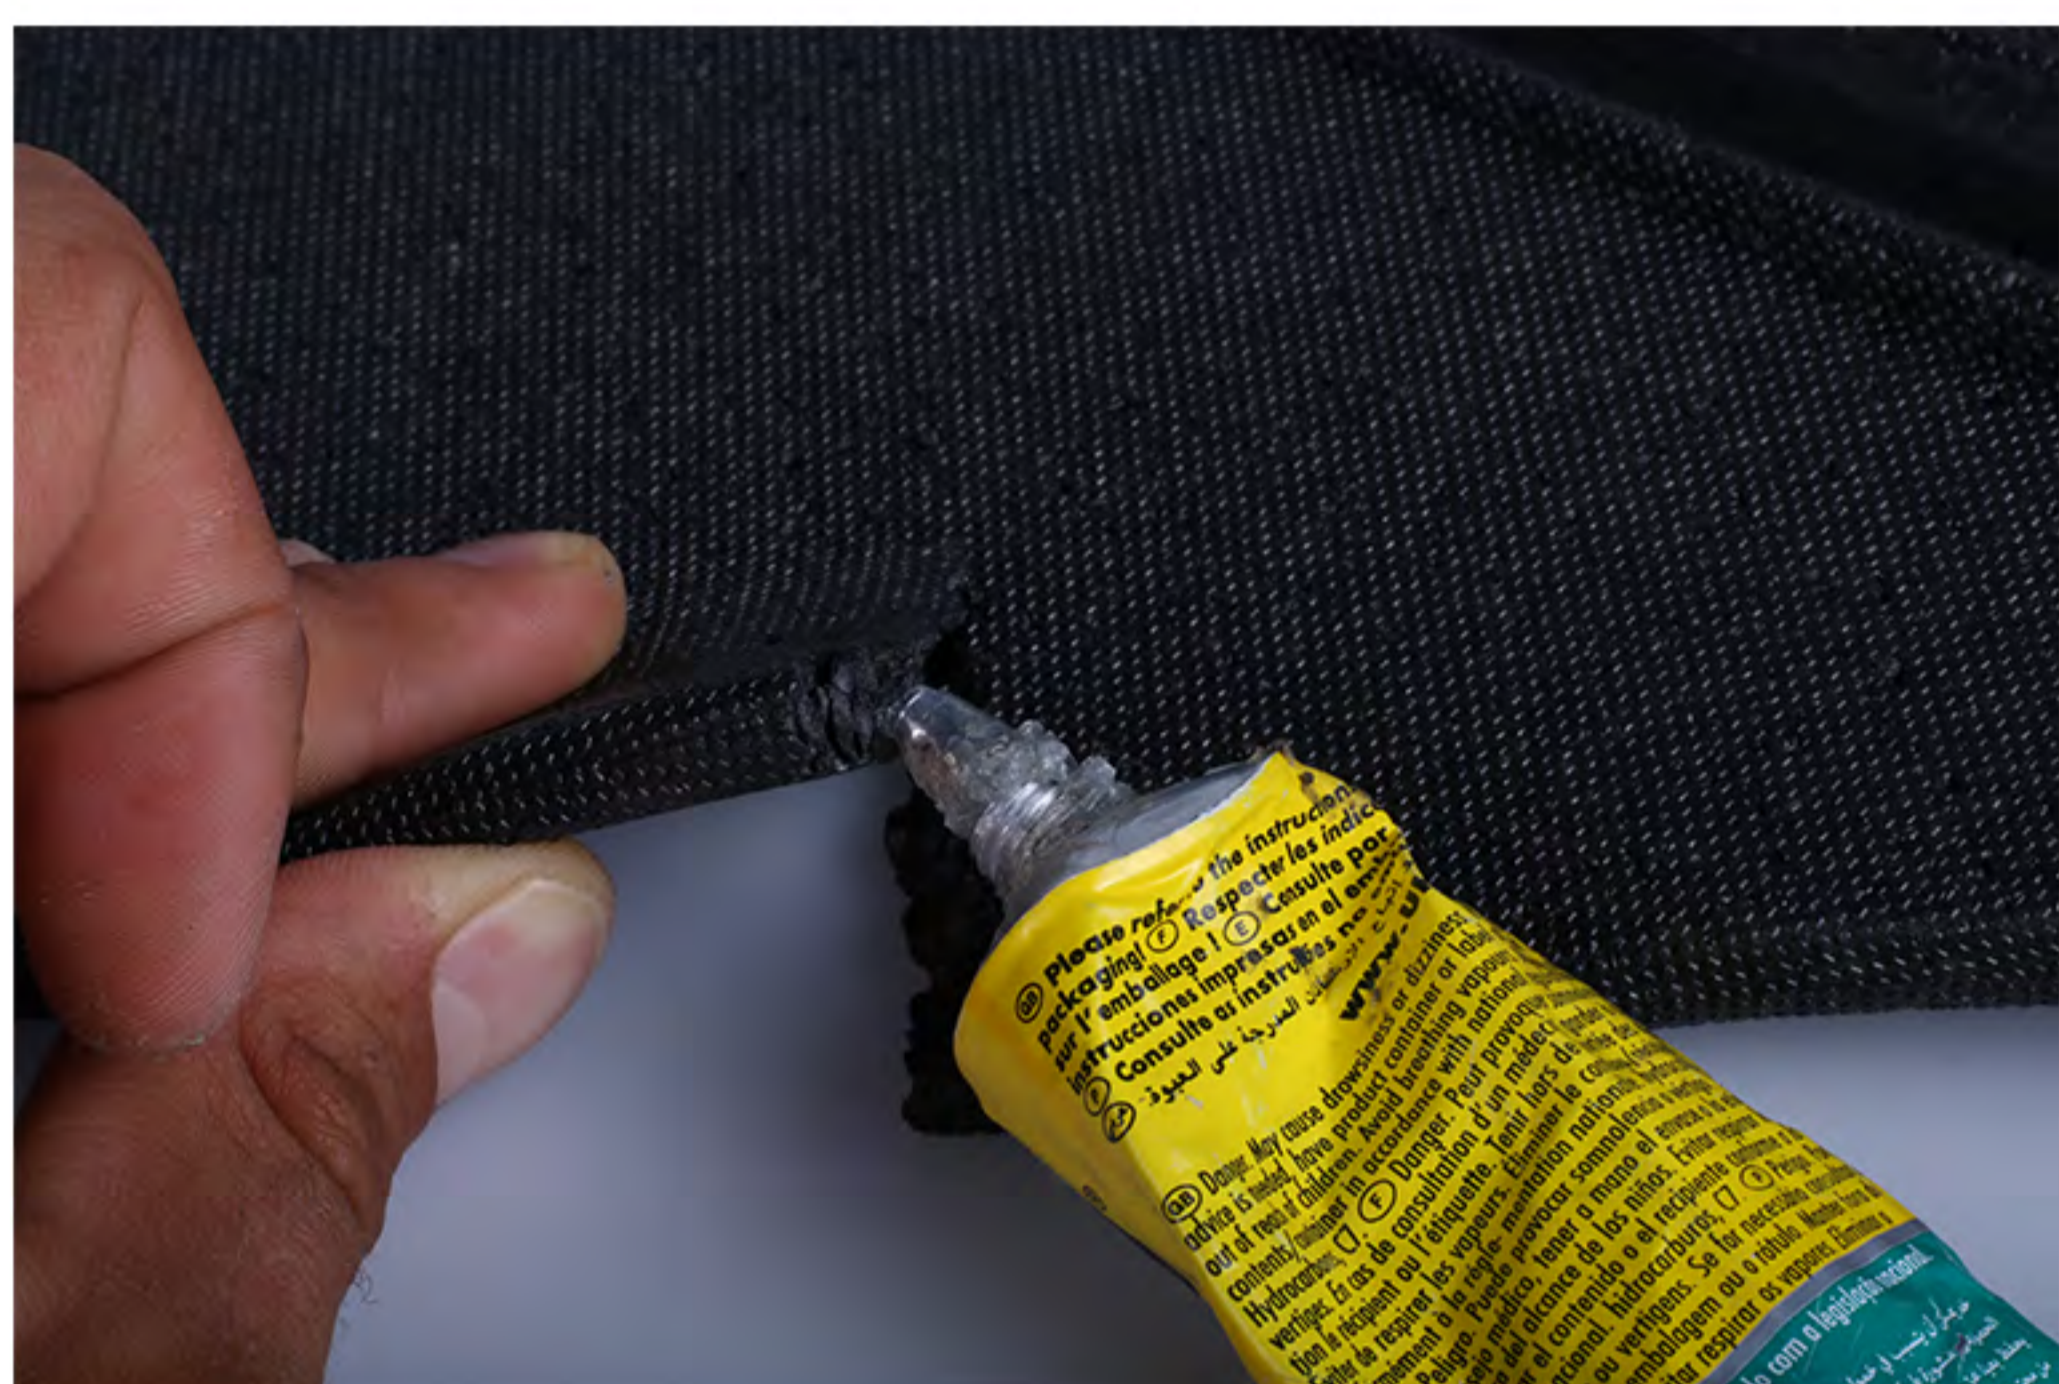

3. Spread UHU POR glue on both side of the crack



4. Hold the crack open for 10 minutes (you can also place something between both sides to save you the hassle)



5. Close the crack



6. Press both sides onto one-another tightly, hold for about one minute



7. Wipe off any glue stains, you AER should be as good as new!

# Fixing the screwing Thread




1. So, you broke your screwing thread, no biggie!



2. Take your UHU POR



3. Spread some glue on the thread

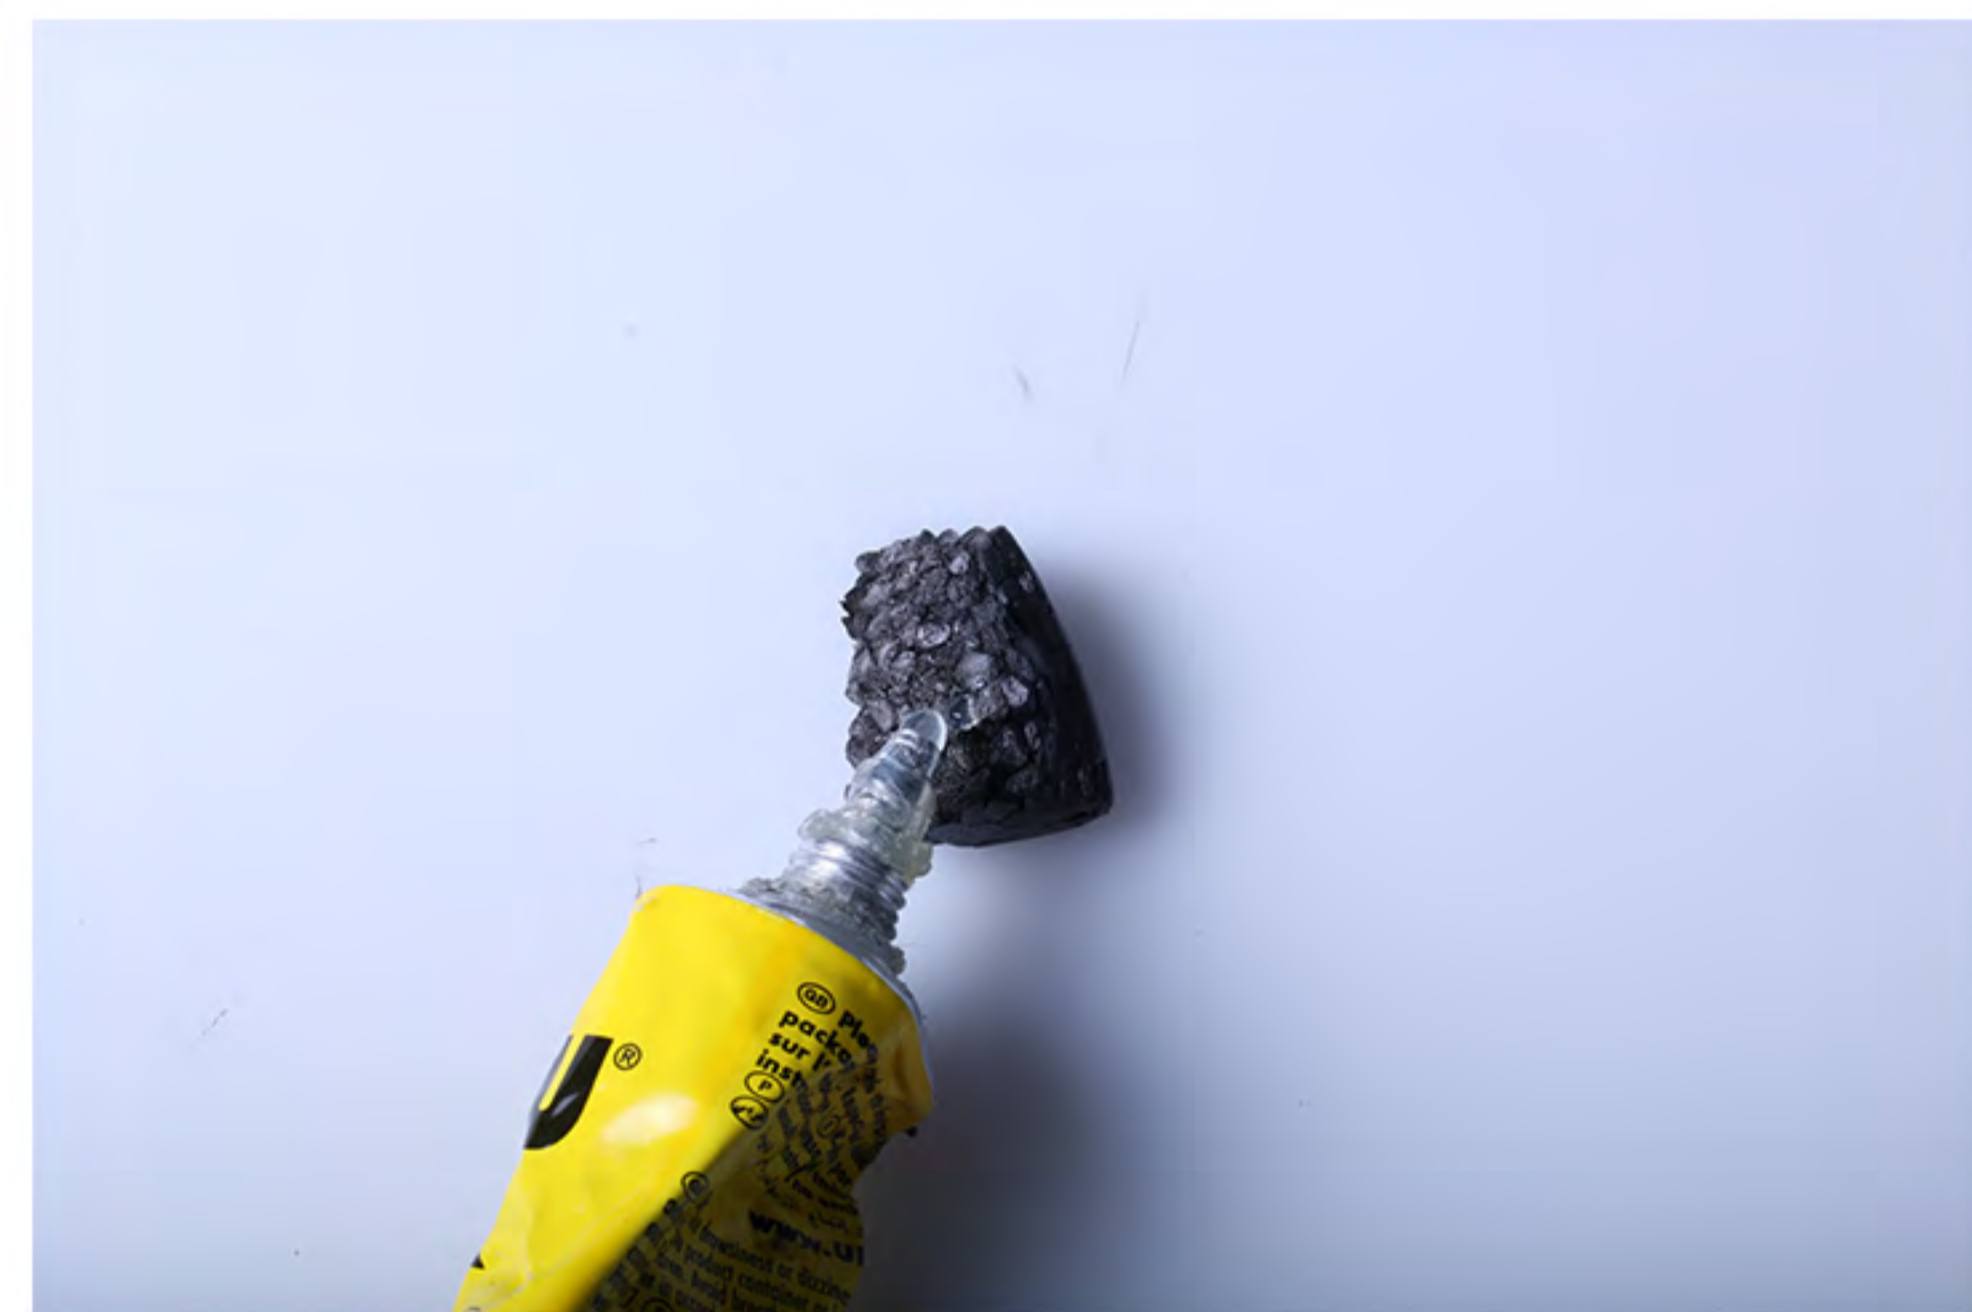

4. Spread some glue on the piece that broke off



5. Wait 10 minutes for both parts to dry



6. Place the broken off piece back on the thread and press tightly for one minute



7. Wipe off glue stains, your AER should be as good as new!

# Fixing the Bumper



1. So, you broke your bumper, no biggie!



2. Spread some UHU POR on the bumper (the black part)




3. ..and on the other side as well



4. Spread some UHU POR on the piece of bumper that broke off



5. .. And again, on the other side

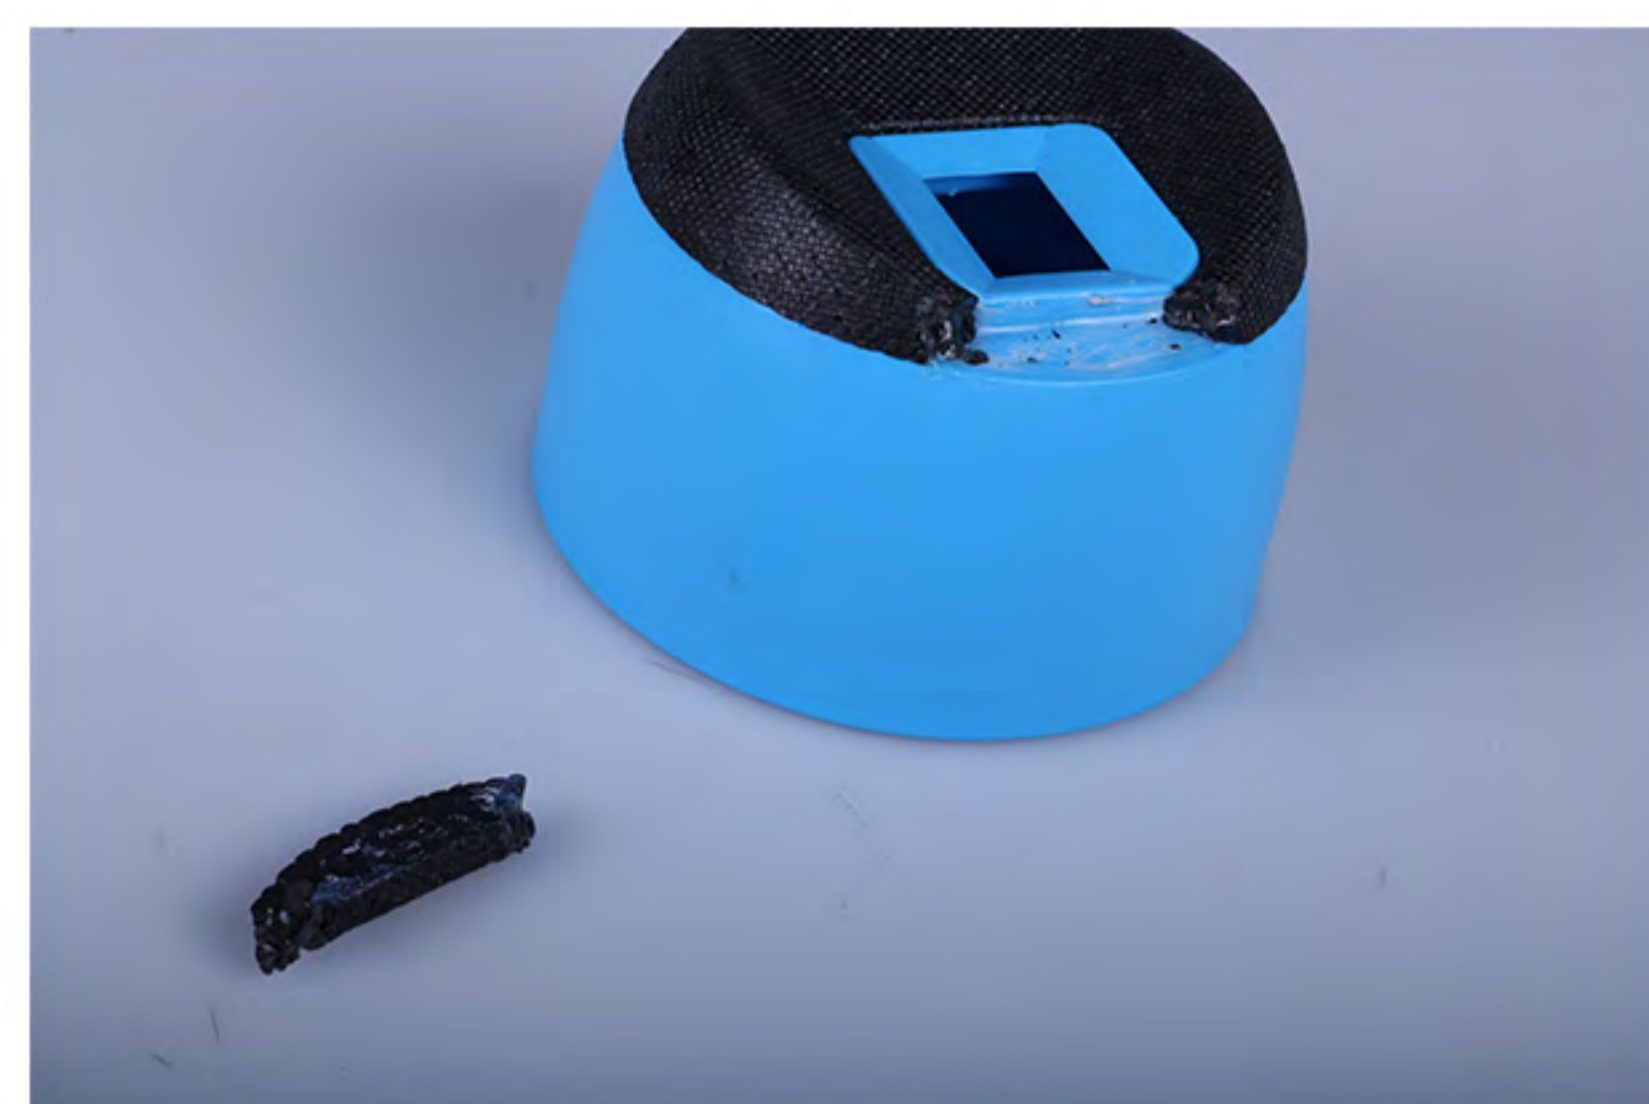


6. Let both parts dry for 10 minutes



7. Spread some SUPER GLUE on the head (the plastic part)



8. Carefully place back the piece which broke off

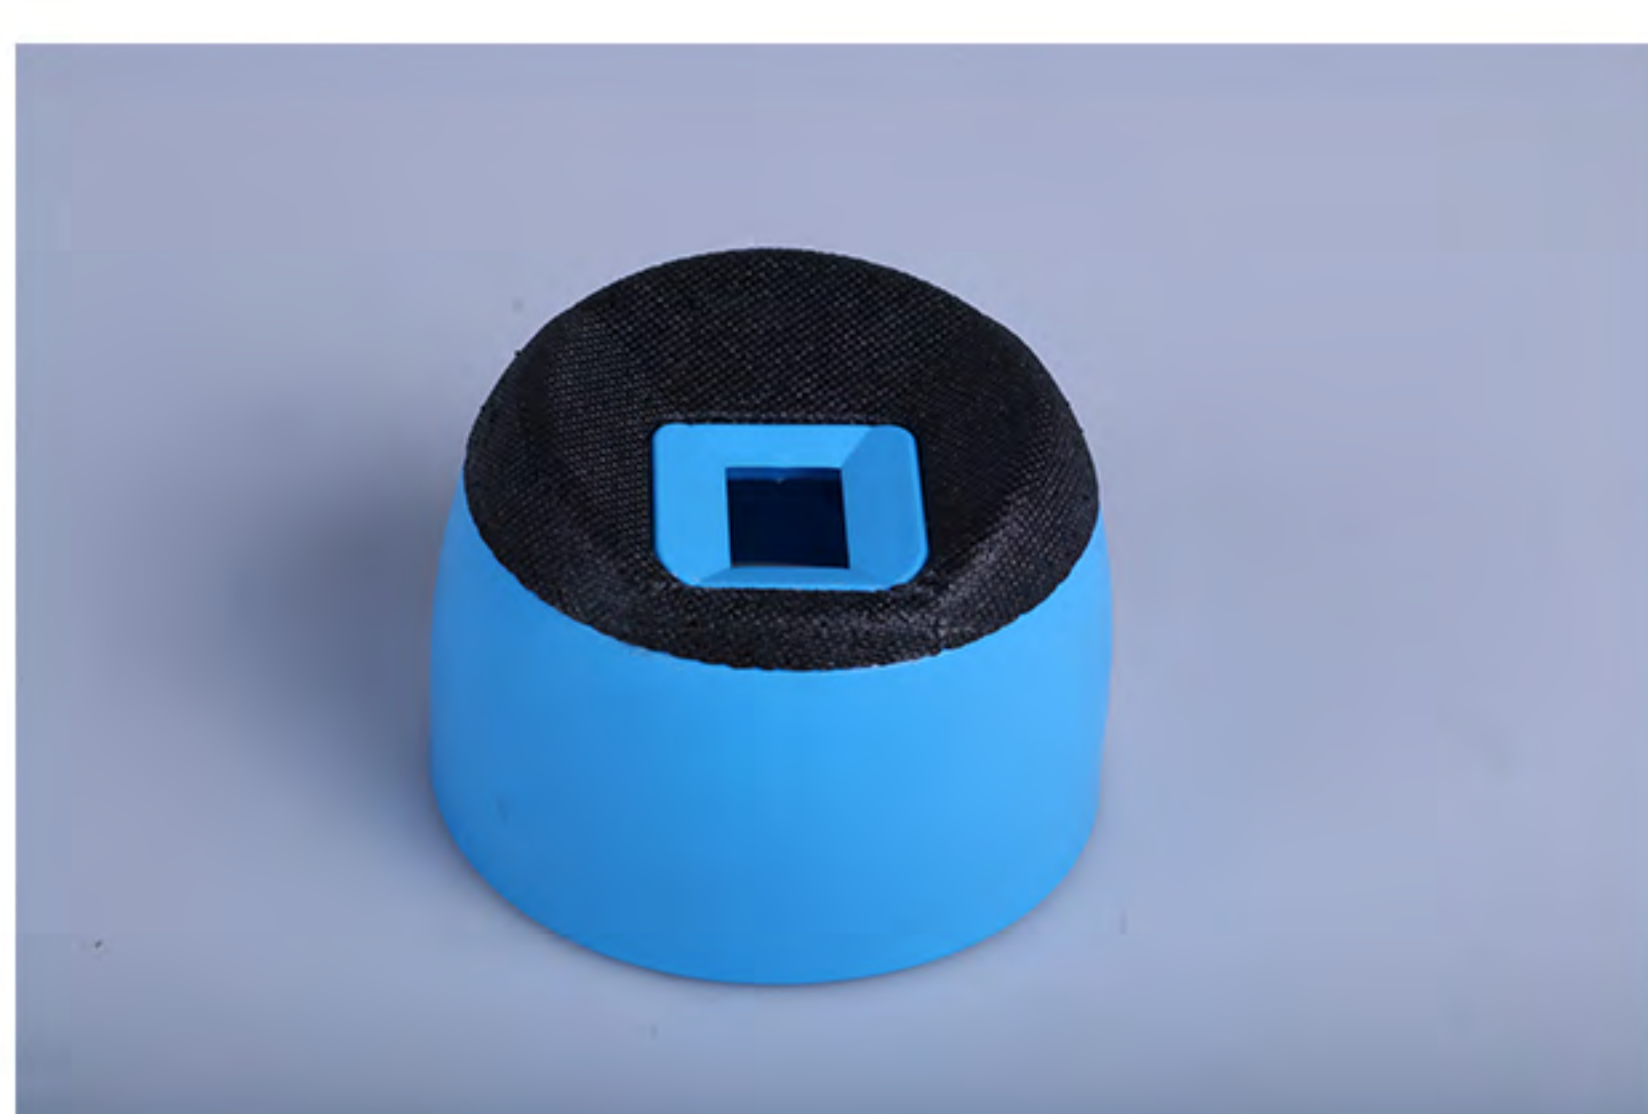

9. Press tightly and let dry for another minute



10. Wipe off glue stains, your AER should be as good as new!