



Contactless Optical Tool Presetter Aegis-i O Series



Simple and Compact! High-performance presetter - affordable price!

Tightening of a collet holder is possible on the presetter!




Mechanical Clamping

A pneumatic cylinder clamps the holder securely in place, guaranteeing excellent accuracy through repeated mounting of holders.



Product Movie


Easy-to-use Software with Tutorial Function

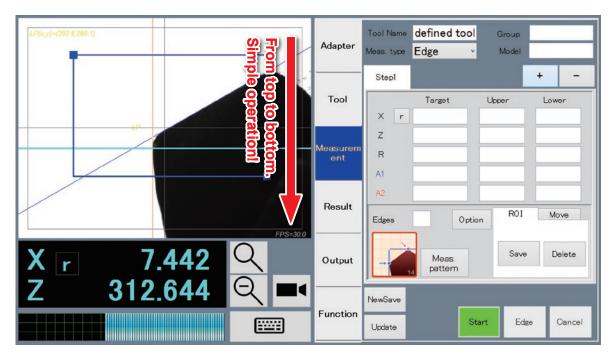

Operation screen lined up in working sequences! Quick operation by switching tabs. Well-thought-out layout of the operation screen minimizes operation time.


Measurement Functions

1) Drill Shoulder Measurement

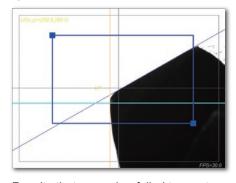


Results that passed or failed to meet the target values can be displayed in a list, or notified with a sound. Results may also be displayed as a graph.

2 Runout Measurement of the Cutting Edge

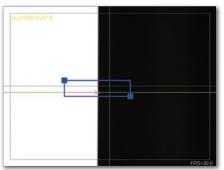


Capture the area you want to measure. Then, turn the spindle 360degrees.

3 Measuring Afterimage

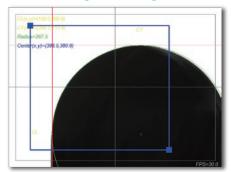


The cutting tool's profile is plotted by rotating the spindle 360 degrees.

4 Special Tolerance

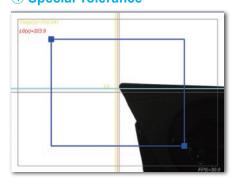


Easy diameter adjustment for boring bars with presetting target shown on the screen.

5 Measuring Step Drill

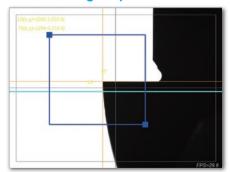

Each step can be measured separately.


6 Real Image of Cutting Edge

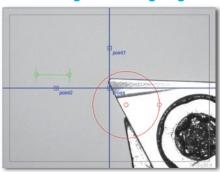

Wear and chipping on cutting edge can be inspected.

Options


1 Stop Measurement When Runout Exceeds Tolerances

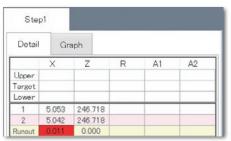

↑ Value that exceed runout tolerances will be displayed in red.


For multi-step measurements, the measurement will stop if runout exceeds the specified tolerances during the runout measurement step. This prevents measurements from running to completion with unacceptable runout.

2 Target Value Input

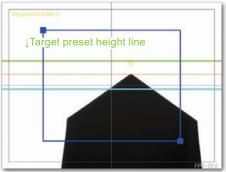

In "Adjustable Mode," the target preset height is displayed on the screen with a green line. Use to offset for cap compression when using collet holders, etc.

3 Import, Export

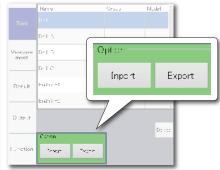

Tool data is imported and exported in the CSV file format. Use to move data to other equipment, or to synchronize tool data between multiple presetters.

(4) Switch the X-axis and Z-axis



XZ Switch OFF (Default Setting)

XZ Switch ON (Optional Setting)

Switch the Z-axis so it displays radial measurements instead of vertical, and the X-axis so it shows vertical measurements instead of radial. Use when machining with lathes, etc., in a non-standard direction

5 Base Stand



 Code
 4940 00041025

 Model
 SOTP-BASESTAND

 Size (mm)
 W : 900

 D : 600
 H : 760

There are mounting holes for SOTP unit and regulator.

Adapter (Sold Separately)

To measure tool holders other than BT50 shank size, adapters are necessary. Please contact NT TOOL for details.

For BT, CAT and SK



BT30, BT40, CAT40, SK40 **Please designate the type of retention stud in use.

For HSK



HSK32, HSK40, HSK50, HSK63, HSK100

For UTS



UTS6350, UTS10080

For C



C3, C4, C5, C6

Specifications of SOTP

External dimensions	750x490x880(WxDxH)
Weight	75kg
Power supply	100~240V AC, 50/60Hz
Power consumption	15W
Air pressure	0.4~0.6MPa
Measurement	X-axis ø300mm, Z-axis 400mm ^{*1}
Minimum reading	0.001mm
Spindle size	BT50 (Adapters for different spindle sizes available.)
Clamp method	Mechanical clamp (2000N)
Specifications of camera	0.33 million pixel CCD monochrome
Screen magnification ratio	11.5× Magnification
Display size	10.1"
Cutting edge measurement range	9.6 x 7.2 mm
Menu manipulation method	Touch panel
Language selection	English, Japanese
Accessories	Filter regulator, Stylus pen
Spindle Rotation Method	Manual

- 880 00 560 270 750 460
- *1 The measurement range of the Z-axis is narrowed by adapter's thickness.
- · Switchable between Inch and Metric display.
- · Specifications and design of the product are subject to change without notice.

Code	Model	Retention Stud	
4940 00040011	SOTP-400-1A	PSB-7, PSB-8, PSB-14, PSB-19	
4940 00040013	SOTP-400-1C	PSB-17	
4940 00040024	SOTP-400-2D	PSB-24	
4940 00040025	SOTP-400-2E	PSB-50P	
	4940 00040011 4940 00040013 4940 00040024	4940 00040011 SOTP-400-1A 4940 00040013 SOTP-400-1C 4940 00040024 SOTP-400-2D	

Accessories						
Code	Model	Note				
4944 10000014	AOTP-PRINT-BRO	Label printer	Sold Separately.			
4944 10000015	AOTP-PRINT-BRO-LA	Labels for printer	※ Sold Separately.			
4944 10000013	AOTP-DUST-C	Cleaning putty	※ Included with SOTP.			

Presetter Series

Contactless Optical Tool Presetter







Aegis-i O® Eagle (AOTP type)

- Spindle Rotation : Automatic (Option) • Measurement Range (X-Axis): 0~ø400mm
- Measurement Range (Z-Axis): 0~500mm



NTP-400

- Column Movement Method : Lever (Auto)
- Measurement Range (X-Axis): 0~ø400mm
- Measurement Range (Z-Axis): 50~500mm



NTP-300A

- Column Movement Method : Handle (Manual)
- Measurement Range (X-Axis): 0~ø300mm
- Measurement Range (Z-Axis): 50~500mm

HEAD OFFICE & FACTORY 1-7-10, Yoshikawa-cho, Takahama-City, Aichi, 444-1386 Japan

HEAD OFFICE: www.nttool.com (Web in English available)

Tel. 81-(0)566-54-0101 Fax. 81-(0)566-54-0111 E-mail: osb@nttool.co.jp

IIDA FACTORY 311-1, Osegi, Ilida City, Nagano, 395-0157 Japan SALES OFFICES in JAPAN (TOKYO / NAGOYA / OSAKA / HIROSHIMA) CHINA OFFICE

NT USA CORPORATION
NT TOOL DE MEXICO S.A. DE C.V.
NT TOOL EUROPE GmbH
NT TOOL (THAILAND) CO.,LTD.

Room503A, Xincheng building 167 Jiangning Rd., Jing'an District Shanghai 200041 P.R.China 318 Seaboard Lane Suite 301 Franklin TN, 37067 U.S.A. Blvd. Aeropuerto No.648, Local 5, Col. San Jose el Alto, Leon, Guanajuato, Mexico C.P. 37545 Siemensstrasse 17A, 61449 Steinbach / Ts., Germany 222 Moo 1, Hi-tech Industrial Estate, Banpho, Bang pa-in, Ayuthaya 13160, Thailand

Kawasan Industri Jababeka Tahap 6, Blok B 2A, Desa Jatireja, Kecamatan Cikarang Timur, Kabupaten Bekasi, 17530, Indonesia

Tel. 81-(0)265-25-5200 Fax. 81-(0)265-25-5225 E-mail: iidaplant@nttool.co.jp Tel. 86-(0)21-6361-9540 E-mail: nt-shanghai@nttool.co.jp Tel. 1-615-771-1899 Tel. 52-477-194-4585 Tel. 49-(0)6171-91639-0 Tel. 66-(0)3531-4180 E-mail: sales@nttoolusa.com
E-mail: sales@nttool.com.mx
E-mail: info@nttooleurope.com
E-mail: nt_thai@ksc.th.com Fax. 1-615-771-0121 Fax. 49-(0)6171-91639-90 Fax. 66-(0)3531-4182



TECHNO MAIL

technomail@nttool.co.jp

For techical question, please contact us by technomail



