



Instruction and Safety Manual

Silent Swivel Adjustable Hunting Chair MODEL: POSC-272



Thank you
very much
for choosing



We appreciate
your business!

⚠ WARNING ⚠

ONLY USE AT GROUND LEVEL.



Silent Swivel Adjustable Hunting Chair

MODEL: POSC-272

PARTS LIST


- A** 1 Seat.....Part # PS-272
- B** 1 Seat Base.....Part # PCB-272
- C** 2 Arm Rest.....Part # PAR-272

HARDWARE LIST

- D** 1 M8 Quickclip.....Part # 1815
- 26** 4 M6 x 30mm bolts w/washers.....Part # 1026
- 56** 2 M6 x 55mm bolts with knobs.....Part # 1056
- 61** 2 M6 x 60mm bolts with knobs.....Part # 1061



A Seat

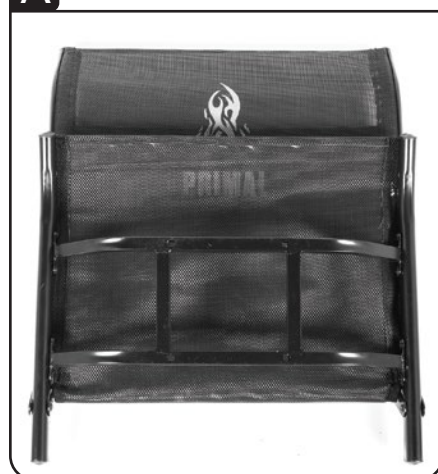

B Seat Base



C Arm Rest (2)



D M8 Quickclip




E Arm Rest 55mm
Bolts with knobs (2)



F Arm Rest 60mm
Bolts with knobs (2)




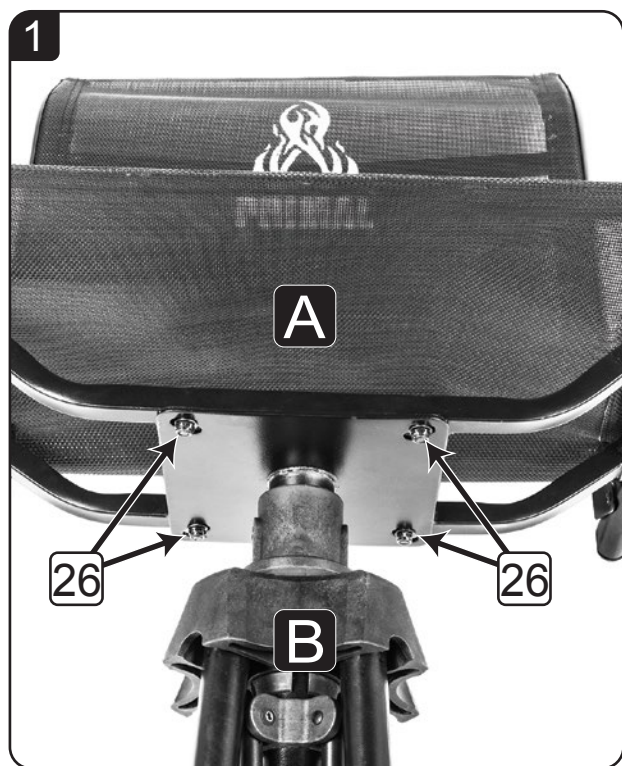

1 Attach the Seat **A** to the Seat Base **B** using 4 - M6 x 30mm bolts w/ metal washers **26**.



2 Stand Chair upright onto the legs. Raise the center post of the Seat Base to the desired height and insert the M8 Quickclip **D** as shown.

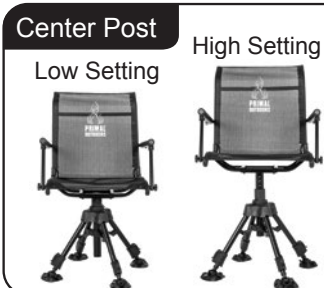

3 Attach the Arm Rest **C** to the Seat **A** using 1 - M6 x 60mm bolts **61** on the back rest of the Seat **A** and 1 - M6 x 55mm bolts **56** on the bottom of the Seat **A**. NOTE: Place the spacer in between the Seat **A** and Arm Rest **C**. Repeat these steps for other Arm Rest.



4 Use the lever lock as shown above to adjust the leg height of the chair.

⚠ WARNING ⚠
ONLY USE AT GROUND LEVEL.