


# THE THUNDERDOME

## Spring Steel Ground Blind PSSB-705

### **SET UP INSTRUCTIONS**

WARNING: Read all instructions and safety warnings and follow them thoroughly. Failure to follow these instructions may result in serious injury or death.

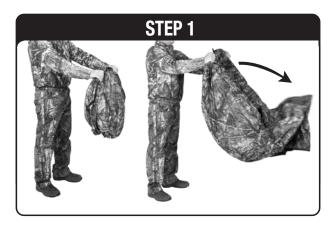





- Step 1: Remove blind from carry bag. While holding one of the three steel bands, let the other two open away from you.
- **Step 2:** Once unrolled, lay the blind on the ground and unfold.
- Step 3: Take hold of the top corner of the blind and put your foot on the bottom section of the blind and lift the top side.







- **Step 4:** Stand the blind upright and insert one end of each shock cord ceiling poles into the opposite corner pockets inside the blind. The pockets are located in the 4 corners of the blind
- **Step 5:** The poles will cross each other at the peak. Secure the poles to the blind using the tie at the peak of the roof.
- **Step 6:** Place blind in the desired location and secure each corner to the ground using the ground stakes supplied.

  To reinforce the blind from the wind, attach the tie down ropes to each corner loop and stake to the ground.

#### TAKE DOWN INSTRUCTIONS

WARNING: Read all instructions and safety warnings and follow them thoroughly. Failure to follow these instructions may result in serious injury or death.










Step 1: Remove all ground stakes, shock cord ceiling poles, and tie-downs. Lay blind on it's side and fold up.

**Step 2:** Take hold of blind with hands at the 10 o'clock and 2 o'clock position with your knuckles up and thumbs down.

**Step 3:** Roll blind forward away from your body to create a U-shape.

**Step 4:** Once blind is rolled into the U-shape, rotate one or both hands 180°. Left hand clockwise, right hand counterclockwise

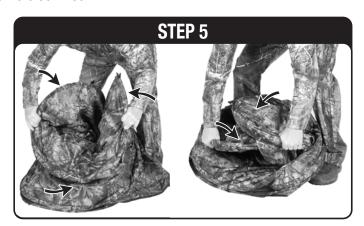



**Step 5:** Continue to roll the top of the blind forward while overlapping the two steel bands you are holding and tuck the top section under so that it overlaps onto the bottom half of the blind.

**Step 6:** Once the blind is folded up there will be less tension and you can easily slide it back into the carry bag.

#### SAFETY WARNINGS

WARNING: THIS PRODUCT IS NOT FIREPROOF. The fabric will burn if it comes into contact with an open flame or fuel source. DO NOT cook inside a tent: DO NOT smoke inside a tent: DO NOT store flammable liquids inside a tent. Keep product away from direct flame. Failure to follow this warning may result in serious injury or death.

**WARNING:** This product is for hunting purposes only. It is not to be used as a camping tent or for any other function. Failure to follow this warning may result in serious injury or death.

WARNING: Do not use devices that produce fumes inside of blind. Vapors and fumes could result in carbon monoxide poisoning, serious injury or death.

WARNING: Do not allow children or adults to use lighted candles, matches, or other sources of fire near this product. Failure to follow this warning may result in serious injury or death.

WARNING: Do not allow material to cover your face. This may result in serious injury or death.

WARNING: Do not allow children to use this proiduct without direct adult supervision. Failure to follow this warning may result in serious injury or death.

WARNING: Exorcise EXTREME caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible. Failure to follow this warning may result in serious injury or death.

#### TIPS FOR INCREASING PRODUCT LONGEVITY

Always store your blind in a cool dry place and make sure that your blind is completely dry and clean before storing in a carrying bag. Never leave your blind outside any longer than needed. This material may fade after long periods of time in direct sunlight. Pooling of rain or snow may cause permanent damage to your blind.