



**STEP 5**: COMPLETE WATER SUPPLY PLUMBING. NOTE PLUMBING DIFFERENCES BETWEEN FR (FREEZE RESISTANT) AND NON-FR MODELS. REFER TO BURY VALVE OPERATION AND MAINTENANCE MANUAL FOR ADDITIONAL INFORMATION WHEN INSTALLING FREEZE RESISTANT MODELS.

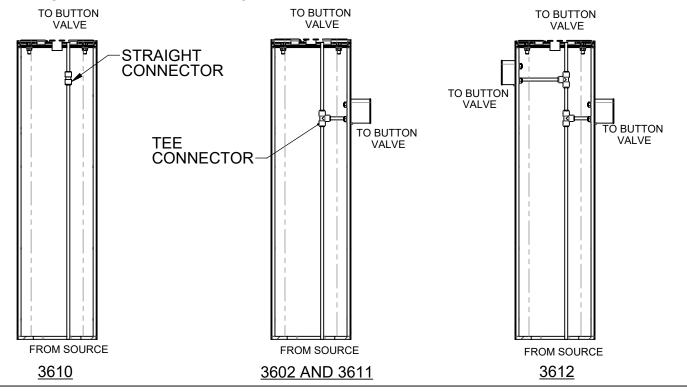

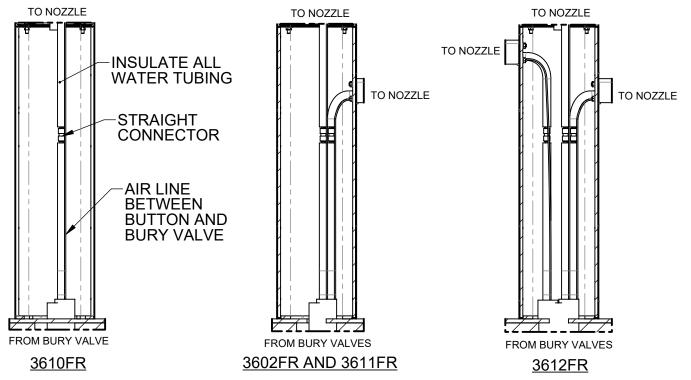

STEP 6: OPEN SUPPLY VALVE(S) AND TEST. REINSTALL ALL COVER PLATES.




1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM WEBSITE: WWW.HAWSCO.COM


| EON: REV. ECN: BY: S543 | REV. ECN: BY: S543 | REV. ECN: S643 | REV. ECN


SCALE: 1:32 DRAWING TYPE:


0510000704.D REVISION

© 2020 Haws Corporation - All Rights Reserved.

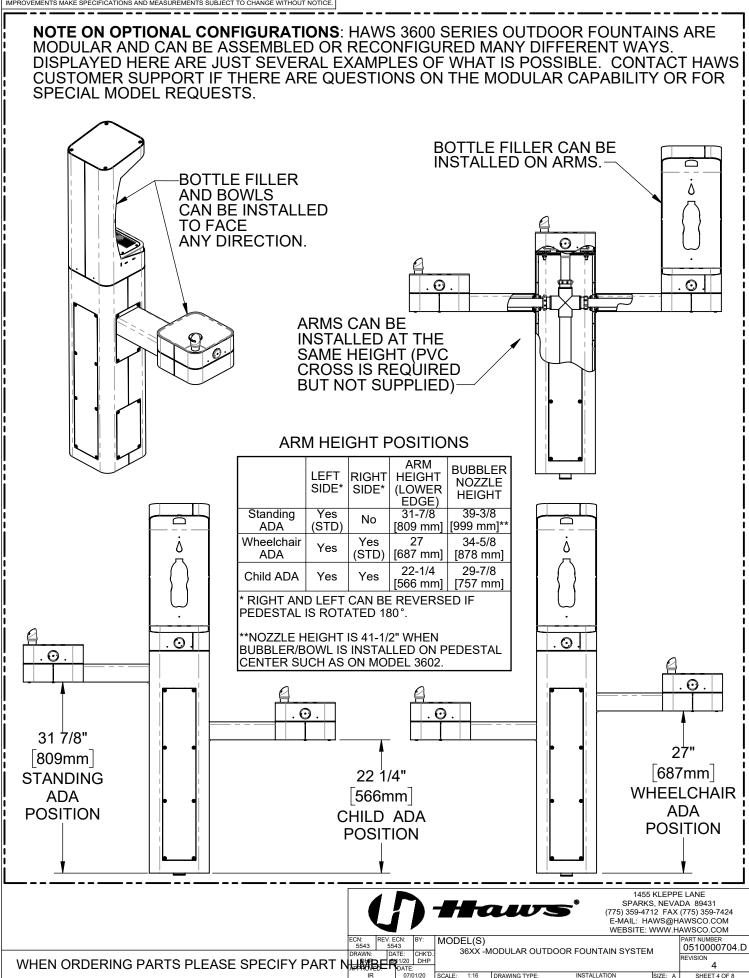

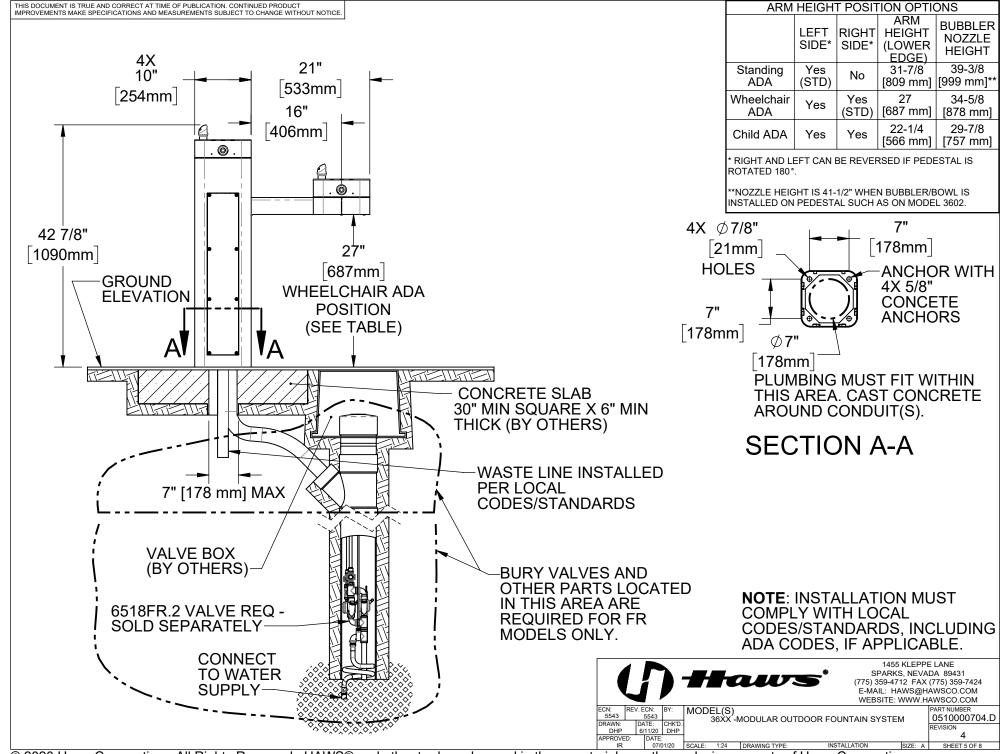

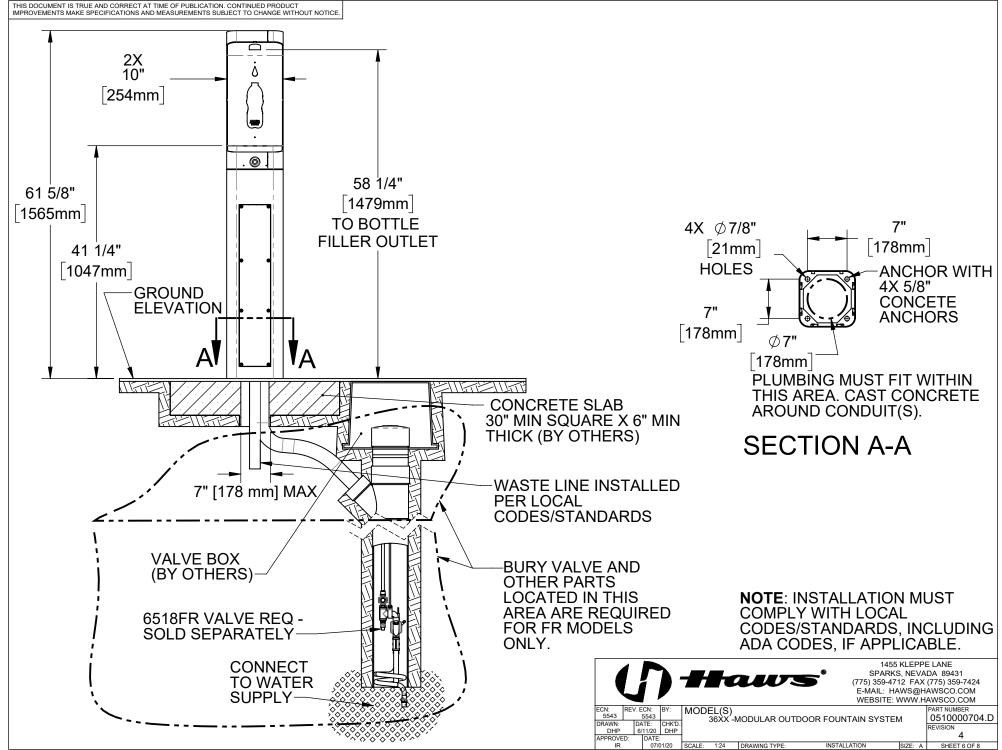


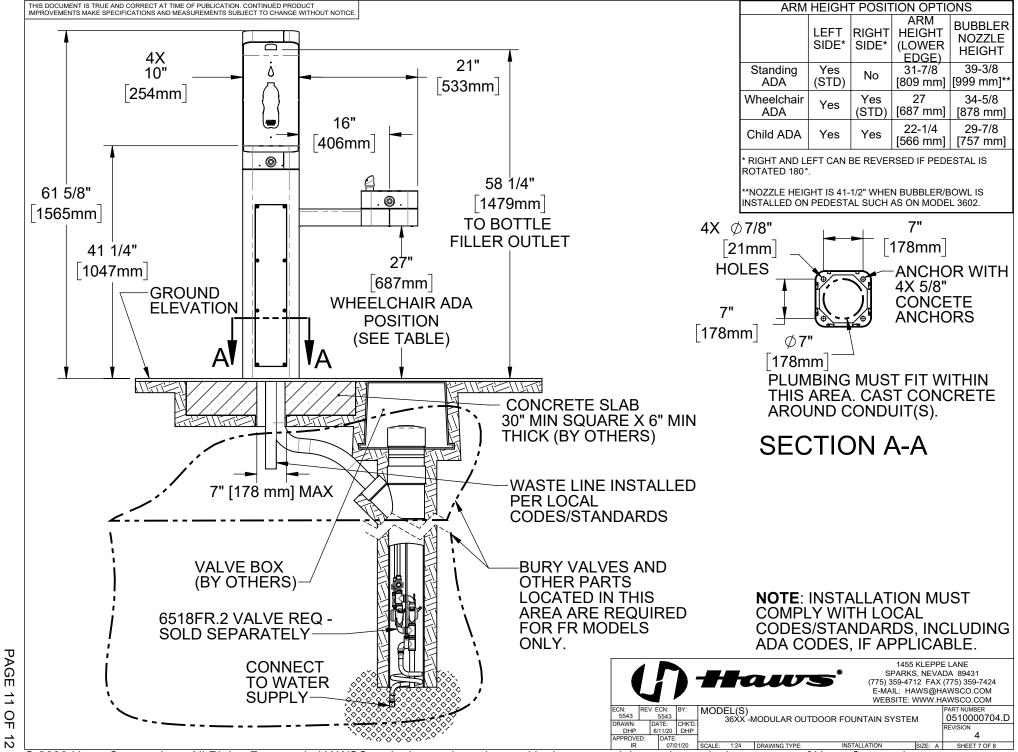

**PAGE** 

二

12

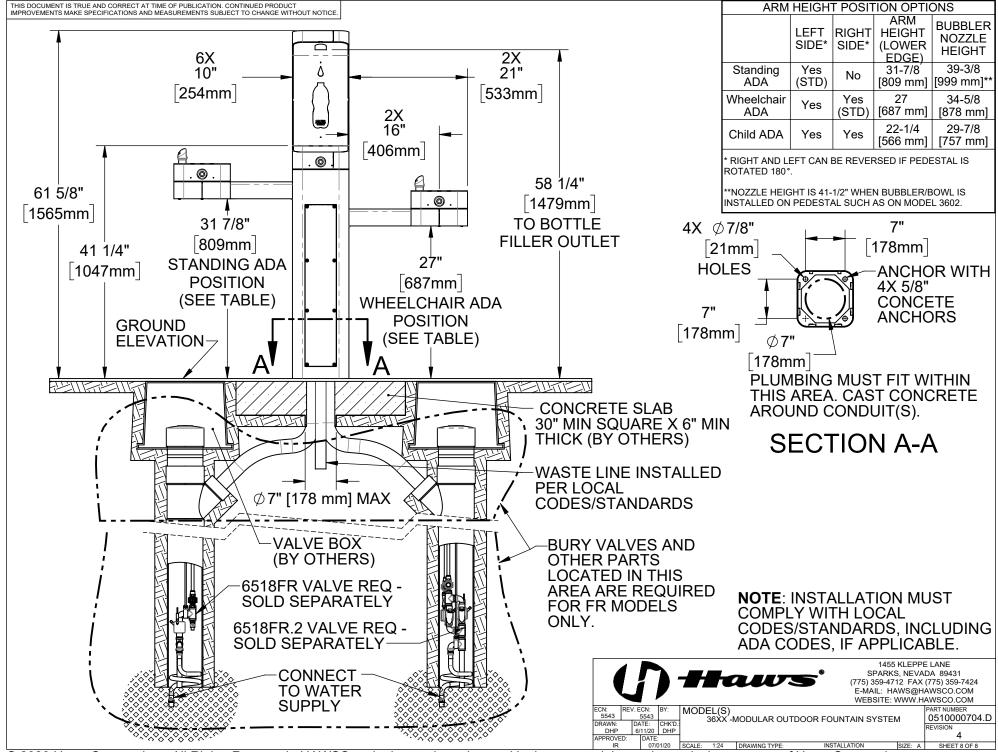

PAGE