



## Replace the Locking Ring

There is one LOCKING RING for each lock

- Remove the old LOCKING RING
- Remove the LOCKING ARM. Press the PIN away (with a nail or anything like it)
- Put the new LOCKING RING in place and tighten the screw just a little
- Put the LOCKING ARM in place and press the PIN in place
- Tighten the screw until the LOCKS feel good. Don't screw it to the bottom

