

ARTHUR'S Knights

(U.S.A.)

USER MENU

Feature:

1. RANDOM FREE RUN UNTIL YOU WIN ◦

2. IF NOT WIN , PRESS 「 SCORE 」 TO HOLD ,
TO RAISE WIN CHANCE ◦

(BUT YOUR PLAY MUST REACH TO 8 POINTS)

3. THE No.10 REEL :

WHEN 3 FIGURES IN MIDDLE HORIZONTAL ARE SAME,
THE No. 10 REEL WILL APPEAR , (LIKE SKETCH) AND YOU

HAVE 3 CHANCES TO RAISE YOUR PLAY ◦

*IF THE No.10 REEL GET SAME
FIGURE , YOU CAN WIN SCORE x 2,
AND PLAY FREE RUN ONCE ◦



(THIS FREE RUN ONLY HAVE FIGURE WITH 7 AND BLANK)

*IF LOSE , IT WILL SAVE 1/10 INCREASE PLAY TO BANK ◦

*IF YOU DON'T WANT TO INCREASE THE PLAY,
JUST PRESS 「 SCORE 」 TO TAKE YOUR SCORE ◦

4. CROSS FEVER :

WHEN GET CROSS FEVER AND PLAY No.10 REEL TO WIN ,
YOU CAN GET SCORE x2 AND PLAY FREE RUN 3 TIMES ◦

(THIS FREE RUN ONLY HAVE FIGURE WITH 7 AND BLANK)

5. AXE & SWORD FEVER :

IF YOU GET 1 AXE & SWORD FEVER, YOU HAVE 3 FREE RUN,
IF YOU GET 2 AXE & SWORD FEVER, YOU HAVE 6 FREE RUN.

.... (THIS FREE RUN HAVE FIGURE WITH GREEN BAR

、 BLUE BAR 、 PURPLE BAR AND BLANK)

6. FULL BONUS :

IF 9 FIGURES ARE SAME , AND PLAY No.10 REEL TO
WIN , YOU CAN GET SCORE x2 AND PLAY FREE RUN 3
TIMES ◦

(THIS FREE RUN ONLY HAVE FIGURE WITH CASTLE AND BLANK)

7. SUB-GAME :

IF YOU GET 「 GREEN BAR 」 「 BLUE BAR 」 OR

「 PURPLE BAR 」 FEVER , YOU CAN GET INTO SUB-GAME ◦

GREEN BAR	BLUE BAR	PURPLE BAR
		
SCOREx2	SCOREx3	SCOREx5

*YOU MUST MAKE DECISION IN 15 SEC

8. NINE DIFFERENT :

IF YOU GET 9 DIFFERENT FIGURES , YOU CAN GET

JACKPOT BONUS. (IF YOUR BET NOT REACH TO 8 POINTS HAS NO BONUS)

BET	8~15	16~31	32~63	64~119	120
BONUS	3000	6000	12000	25000	50000

OTHER :

1. ODDS TABLE : PRESS 「 SMALL 」 ◦

2. DO NOT RESET OFTEN ◦

3. IN DOUBLE UP : IT WILL LOSE YOUR SCORE IF POWER
OFF ◦

DIP SW 1		1	2	3	4	5	6	7	8
10 TIME FEATURE	No	Off	Off	Win Point To Point					
	No	Off	On	Win Point To Score					
	Yes	On	Off	Free Spin Deduct Credit Normal					
	Yes	On	On	Win Point To Score (Ticket setting is following Key Out setting) * Pres 【DOUBLE】 to change mode					
PLAY SCORE	No			Off					
	Yes			On					
DISPLAY ODDS TABLE	No				Off				
	Yes				On				
PAY-OUT MODE	Auto				Off				
	Manual				On				
KEY-OUT (BLACK BOX)	Off	Credit Only			Off				
	On	Credit + Black Box			On				
GAME COUNT MODE	Yes							Off	
	No							On	
LOSE-WIN MODE	Yes							Off	
	No							On	

DIP SW 2		1	2	3	4	5	6	7	8
COIN-IN SETTING	1	Off	Off	Off					
	15	On	Off	Off					
	20	Off	On	Off					
	25	On	On	Off					
	50	Off	Off	On					
	75	On	Off	On					
	100	Off	On	On					
500	On	On	On						
KEY-IN SETTING	1				Off	Off	Off		
	4				On	Off	Off		
	5				Off	On	Off		
	15				On	On	Off		
	25				Off	Off	On		
	75				On	Off	On		
	100				Off	On	On		
500				On	On	On			
PAY-OUT SETTING	10 Credit 1 Ticket						Off	Off	
	20 Credit 1 Ticket						On	Off	
	50 Credit 1 Ticket						Off	On	
	Same with KEY-IN SETTING						On	On	

36PIN CONNECTOR

EDGE CONNECTOR 36PIN		
PARTS		SOLDER
	RED	1 GREEN
	BLUE	2 SYNC
SPEAKER (+)	3	SPEAKER GND
	4	
	5	
	6	
TAKE TICKET BUTTON	7	
TICKET SW	8	
START (STOP)	9	
SMALL (ODDS) STOP C	10	
PLAY	11	
SCORE / HOLD	12	
DOUBLE/STOP B	13	
	14	
	15	
BIG / STOP A	16	
	17	
COIN IN	18	KEY IN
	19	
CHECK	20	TEST
COIN OUT	21	KEY OUT
GND	22	
Meter: COIN IN	23	
Meter: KEY IN	24	
	25	
	26	
Meter: COIN OUT	27	
Meter: KEY OUT	28	
Lamp: START / STOP	29	
Lamp: SMALL / STOP C	30	
Lamp: PLAY	31	
Lamp: SCORE / HOLD	32	
Lamp: DOUBLE / STOP B	33	
Lamp: BIG	34	
	35	
GND	36	GND

10PIN CONNECTOR

EDGE CONNECTOR 10PIN		
PARTS		SOLDER
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
+12V	6	+12V
SSR	7	
	8	
GND	9	GND
GND	10	GND

SYSTEM CONFIGURATION

- ★ MOVE : Press 【BIG】 or 【SMALL】
- ★ CHANGE : Press 【TAKE】 or 【PLAY】
- ★ NEXT PAGE : Press 【TEST】
- ★ ESC : Press 【START】

MAIN GAME RATE	40%, 50%, 60%, 70%, 75%, 80%, 85%, 90%
DOUBLE UP CHANCE	60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%
KEY OUT : POINT	1 , 15 , 20 , 25 , 50 , 75 , 100 , 500
KEY IN LIMIT	20000 , 50000 , 80000 , 100000
MAX. TICKETS	1 , 2 , 3 , 4 , 5 , 8 , 10 , 20 , 30 , 40 , 50 , 80 , 100 , 200 , 300 , 500 , UNLIMIT
MINIMUM PLAY	10 TIME : OFF 1 , 8 , 16 , 32 , 64 , 80 , 120 10 TIME : ON FIX 10
MAXIMUM PLAY	16 , 32 , 64 , 80 , 120
RAISE	YES , NO
BANK LEVEL	125~1000 , 250~2000 , 500~3000 , 1000~50000
REEL AUTO STOP	YES : AUTO STOP NO : NON STOP
HOPPER TYPE	NO , NC
TAKE SCORE	NORMAL , FAST
RESET SYSTEM	BIG + SMALL BUTTON YES : RESET OK