

PI

CB3M

Dip Switch No. 1		1	2	3	4	5	6	7	8
GAME STYLE	TABLE UPRIGHT	OFF ON							
HOPPER OUT SW.	ACTIVE LOW ACTIVE HIGH		OFF ON						
PAYOUT MODE	PAY OUT SW. AUTOMATIC			OFF ON					
W-UP "7"	LOSS EVEN				OFF ON				
W-UP PAY RATE	80% 90%					OFF ON			
W-UP GAME	ON OFF						OFF ON		
BET MAX	8 BET 16 BET 32 BET 64 BET							OFF ON OFF ON	OFF OFF ON ON

Dip Switch No. 2			1	2	3	4	5	6	7	8
NO. 8 CHIP TYPE	M8MB	M8								
MAIN GAME PAY RATE	89%	90%	OFF	OFF	OFF					
	82%	85%	ON	OFF	OFF					
	75%	80%	OFF	ON	OFF					
	68%	75%	ON	ON	OFF					
	61%	70%	OFF	OFF	ON					
	54%	65%	ON	OFF	ON					
	47%	60%	OFF	ON	ON					
	40%	55%	ON	ON	ON					
HOPPER LIMIT	300 500 1000 UNLIMITED					OFF ON OFF ON	OFF OFF ON ON			
100 ODDS SOUND	ON OFF							OFF ON		
KEY IN TYPE	B - TYPE A - TYPE								OFF ON	
CENTER SUPER 7 BET LIMIT	UNLIMITED LIMITED	RELATED WITH DIP SW. NO 4 - 6								OFF ON

P2

Dip Switch No. 3		1	2	3	4	5	6	7	8
KEY IN RATE	A TYPE			B TYPE					
	1 COIN 10 CREDITS	ON	ON	1 COIN 5 CREDITS					
	1 COIN 20 CREDITS	OFF	ON	1 COIN 10 CREDITS					
	1 COIN 50 CREDITS	ON	OFF	1 COIN 25 CREDITS					
	1 COIN 100 CREDITS	OFF	OFF	1 COIN 50 CREDITS					
COIN A RATE	1 COIN 1 CREDITS			ON	ON				
	1 COIN 2 CREDITS			OFF	ON				
	1 COIN 5 CREDITS			ON	OFF				
	1 COIN 10 CREDITS			OFF	OFF				
COIN D RATE	C TYPE			D TYPE					
	1 COIN 5 CREDITS			1 COIN 2 CREDITS		ON	ON		
	1 COIN 10 CREDITS			1 COIN 1 CREDIT		OFF	ON		
	1 COIN 25 CREDITS			2 COINS 1 CREDIT		ON	OFF		
	1 COIN 50 CREDITS			5 COINS 1 CREDIT		OFF	OFF		
COIN C RATE	1 COIN 1 CREDIT							ON	ON
	1 COIN 2 CREDITS							OFF	ON
	1 COIN 5 CREDITS							ON	OFF
	1 COIN 10 CREDITS							OFF	OFF

Dip Switch No. 4		1	2	3	4	5	6	7	8
CREDIT LIMIT	UNLIMITED	ON	ON	ON					
	100,000	OFF	ON	ON					
	50,000	ON	OFF	ON					
	40,000	OFF	OFF	ON					
	30,000	ON	ON	OFF					
	20,000	OFF	ON	OFF					
	10,000	ON	OFF	OFF					
	5,000	OFF	OFF	OFF					
DISPLAY OF CREDIT LIMIT	ON				ON				
	OFF				OFF				
TYPE OF COIN D	C TYPE					ON			
	DTYPE					OFF			
BONUS PLAY	8 BET						ON		
MINIMUM BET	16 BET						OFF		
REEL SPEED	HIGH							ON	
	LOW							OFF	
COIN A MODE	EXCHANGE								ON
	UNEXCHANGE								OFF

Dip Switch No. 5		1	2	3	4	5	6	7	8
NOT USED									
COIN IN LIMIT	20000		ON	ON					
	10000		OFF	ON					
	5000		ON	OFF					
	1000		OFF	OFF					
W - UP GIRL DISPLAY	ON						ON		
	OFF						OFF		

PLAY BUTTONS

TAKE
SCORE
LEFT
STOP

BIG
CENTER
STOP

SMALL
RIGHT
STOP

W - UP
BET

BET

START
ALL STOP

1. CONNECTION DIAGRAM OF "CHERRY BONUS III" :

COLOR	PARTS SIDE		SOLDER SIDE		COLOR
RED	VIDEO R	1	37	VIDEO G	GREEN
BLUE	VIDEO B	2	38	SYNC.	WHITE
GRAY	SPEAKER	3	39	GND.	BLACK
		4	40		
		5	41		
		6	42		
		7	43		
	COIN SW.	8	44	ADJUSTMENT	
BROWN	PLAYER START SW.	9	45	PLAYER START SW.	
RED	PLAYER SMALL	10	46	PLAYER SMALL	
ORANGE	PLAYER BET SW.	11	47	PLAYER BET SW.	
YELLOW	PLAYER TAKE SCORE	12	48	PLAYER TAKE SCORE	
BLUE	PLAYER DOUBLE UP	13	49	PLAYER DOUBLE UP	
		14	50		
		15	51		
PURPLE	PLAYER BIG	16	52	PLAYER BIG	
		17	53		
WHITE	COIN SW. A	18	54	KEY IN SW.	WHITE
	COIN SW. B	19	55	COIN SW. C	
RED	BOOKS SW.	20	56	TEST SW.	GREEN
WHITE	PAY OUT SW.	21	57	KEY OUT SW.	BLUE
	HOPPER COIN FULL SW.	22	58	HOPPER COIN SW.	GREEN
YELLOW	COIN A COUNTER	23	59	LOCK OUT COIL A	
	KEY IN COUNTER	24	60		
	COIN B COUNTER	25	61	LOCK OUT COIL B	
	COIN C COUNTER	26	62	LOCK OUT COIL C	
	HOPPER COUNTER	27	63	COUNTER (LACK OF CHIP)	
PURPLE	KEY OUT COUNTER	28	64		
BLUE	START LAMP	29	65	PLAYER START LAMP	
YELLOW	PLAYER BIG/SMALL LAMP	30	66	PLAYER BIG/SMALL LAMP	
ORANGE	PLAYER BET LAMP	31	67	PLAYER BET LAMP	
RED	PLAYER TAKE SCORE LAMP	32	68	PLAYER TAKE SCORE LAMP	
BROWN	PLAYER W-UP/BET LAMP	33	69	PLAYER W-UP/BET LAMP	
		34	70		
		35	71		
		36	72		