

Cherry Angel

Dip Switch 1		1	2	3	4	5	6	7	8
Hopper Out	Active High Active Low		Off On						
Pay Out Mode	Pay Out Switch Automatic			Off On					
W-Up "7"	Loss Even				Off On				
W-Up Pay Rate	80% 90%					Off On			
W-Up Game	On Off						Off On		
Bet Max.	8 Bet 16 Bet 32 Bet 64 Bet							Off On Off On	Off Off On On

Dip Switch 2		1	2	3	4	5	6	7	8
Pay Out Rate	75% 70% 65% 60% 55% 50% 45% 40%	Off On Off On Off On Off On	Off Off On On Off Off On On	Off Off Off On On On On On					
Hopper Limit	300 500 1000 Unlimited				Off On Off On	Off Off On On			
100 Odds Sound	On Off						Off On		
Key In Type	B-Type A-Type							Off On	
Center Super 7 Bet Limit	Unlimited Limited	Related with Dip Sw. No 4-6							Off On

Dip Switch 5		1	2	3	4	5	6	7	8
Key In Rate	A Type			B Type					
	1 Coin 10 Credit	On	On	1 Coin 5 Credit					
	1 Coin 20 Credit	Off	On	1 Coin 10 Credit					
	1 Coin 50 Credit	On	Off	1 Coin 25 Credit					
	1 Coin 100 Credit	Off	Off	1 Coin 50 Credit					
Coin A Rate	1 Coin 1 Credit			On	On				
	1 Coin 2 Credit			Off	On				
	1 Coin 5 Credit			On	Off				
	1 Coin 10 Credit			Off	Off				
Coin D Rate	C Type	D Type							
	1 Coin 5 Credit	1 Coin 2 Credit			On	On			
	1 Coin 10 Credit	1 Coin 1 Credit			Off	On			
	1 Coin 25 Credit	2 Coin 1 Credit			On	Off			
	1 Coin 50 Credit	5 Coin 1 Credit			Off	Off			
Coin C Rate	1 Coin 1 Credit						On	On	
	1 Coin 2 Credit						Off	On	
	1 Coin 5 Credit						On	Off	
	1 Coin 10 Credit						Off	Off	

Take Score	Big	Small	W-Up	Bet	Start
Left Stop	Center Stop	Right Stop			All Stop