

IGS[®]

DAY OF THE DEAD




Operator Manual

Table of Contents

1. Hardware	2
Hardware Connection	2
Connecting Touch Panel (Optional)	3
Connection Diagram	4
DIP Switch Settings.....	5
36 & 10 PIN Button Layout.....	6
Solving Ticket SSR Error.....	6
Reset	7
2. Bookkeeping & Adjustment.....	10
Access Flow Chart	10
System Settings	11
Chance Settings	12
Touch Screen Calibration	12
3. Introduction	13
Features	13
Main Game.....	13
Shuffle Feature.....	14
Catrina Feature	15
Scatter Game	16
Bonus Game	17
Free Game	18
Double Game	19
Win Rules.....	20
Encouraging Higher Play	20
Odds Table	20
Line Chart.....	21

1. Hardware


Hardware Connection

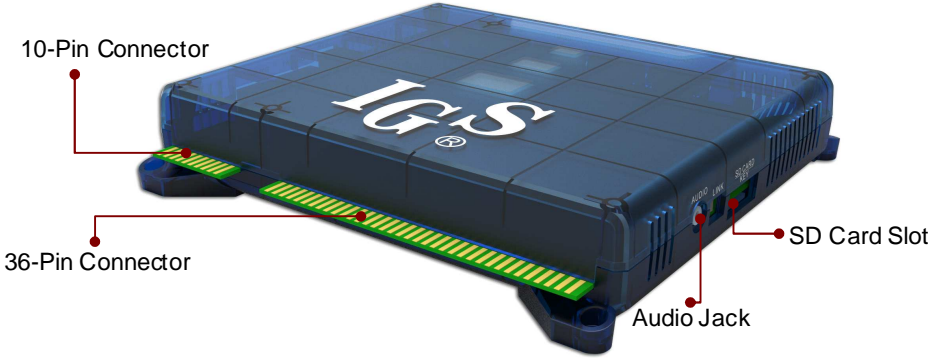

A. RS-232

Connects to optional Citizen printer/ticket dispenser.

* Use Belkin #F2L044 (serial printer cable/null modem) for Citizen printer.

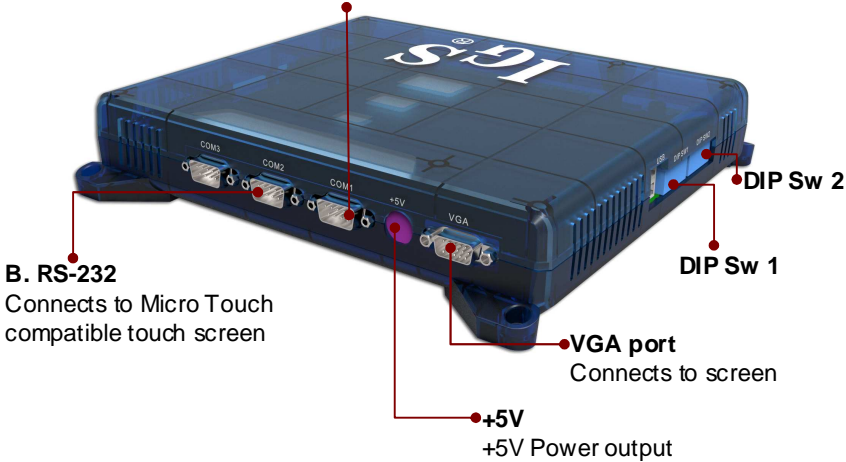

Connecting Touch Panel (Optional)


Type A



Power +5V Connector
(Female)

Monitor Connector
(15PIN Female)

- Refer to the diagram below to connect the touch screen.
- After the connection, remember to adjust the Pin 1 of **DIP SW2** to **ON** to enable touch mode.

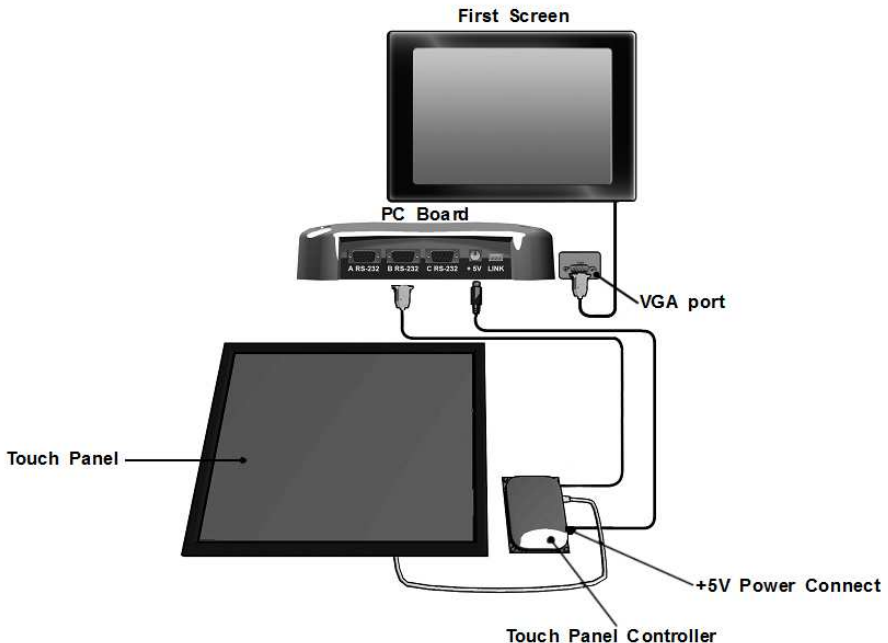

Connection Diagram

36 Pins (6 Buttons)		
PARTS SIDE		SOLDER SIDE
	1	
SPEAKER_R	2	
SPEAKER_L	3	GND
	4	
	5	
	6	
TICKET OUT	7	
TICKET SWITCH	8	
START / ALL STOP	9	
STOP4/SMALL/HELP	10	
STOP5/PLAY	11	
STOP1/TAKE	12	
STOP3/DOUBLE/SELECT LINE	13	
	14	
	15	
STOP2/BIG/HOLD PAIR	16	
	17	
COIN A	18	KEY IN
	19	COIN C
RECORD	20	TEST
	21	KEY OUT/PRINTER OUT
	22	
COIN A METER	23	
KEY IN METER	24	
	25	
COIN C METER	26	
	27	
OUT METER	28	
LAMP: START/ALL STOP	29	
LAMP: STOP4/SMALL/HELP	30	
LAMP: STOP5/PLAY	31	LAMP: COUNT
LAMP: STOP1/TAKE	32	
LAMP: STOP3/DOUBLE/SELECT LINE	33	
LAMP: STOP2/BIG/HOLD PAIR	34	
	35	
GND	36	GND

10 Pins (6 Buttons)		
PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
HOP-VCC	6	
TICKET SSR	7	
	8	
GND	9	GND
GND	10	GND


DIP Switch Settings

DIP SWITCH 1		1	2	3	4	5	6	7	8
SLAVE ID	1	OFF	OFF	OFF	OFF	OFF			
	2	ON	OFF	OFF	OFF	OFF			
	3	OFF	ON	OFF	OFF	OFF			
	4	ON	ON	OFF	OFF	OFF			
	5	OFF	OFF	ON	OFF	OFF			
	6	ON	OFF	ON	OFF	OFF			
	7	OFF	ON	ON	OFF	OFF			
	8	ON	ON	ON	OFF	OFF			
	9	OFF	OFF	OFF	ON	OFF			
	10	ON	OFF	OFF	ON	OFF			
	11	OFF	ON	OFF	ON	OFF			
	12	ON	ON	OFF	ON	OFF			
	13	OFF	OFF	ON	ON	OFF			
	14	ON	OFF	ON	ON	OFF			
	15	OFF	ON	ON	ON	OFF			
	16	ON	ON	ON	ON	OFF			
	17	OFF	OFF	OFF	OFF	ON			
	18	ON	OFF	OFF	OFF	ON			
	19	OFF	ON	OFF	OFF	ON			
	20	ON	ON	OFF	OFF	ON			
	21	OFF	OFF	ON	OFF	ON			
	22	ON	OFF	ON	OFF	ON			
	23	OFF	ON	ON	OFF	ON			
24	ON	ON	ON	OFF	ON				
	OFF	OFF	OFF	ON	ON				
	ON	OFF	OFF	ON	ON				
	OFF	ON	OFF	ON	ON				
	ON	ON	OFF	ON	ON				
	OFF	OFF	ON	ON	ON				
	ON	OFF	ON	ON	ON				
	OFF	ON	ON	ON	ON				
LINK MODE	SINGLE								OFF
	LINK								ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
TOUCH	NO	OFF							
	YES	ON							

36 & 10 PIN Button Layout

6 Buttons

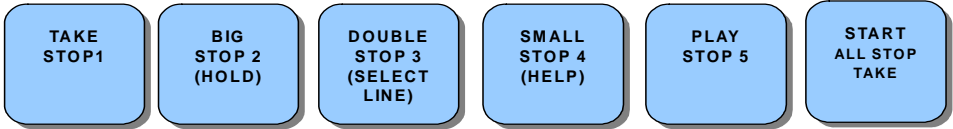


Solving Ticket SSR Error

After powering on the machine, if the ticket dispenser keeps working and can't be stopped, it could be that the Ticket SSR's jump setting is incorrect.

How to solve:

1. Locate the Ticket SSR jump (JP5) on the PC board. Then identify current **TICKET SSR** is at **HIGH ACTIVE** or **LOW ACTIVE**.

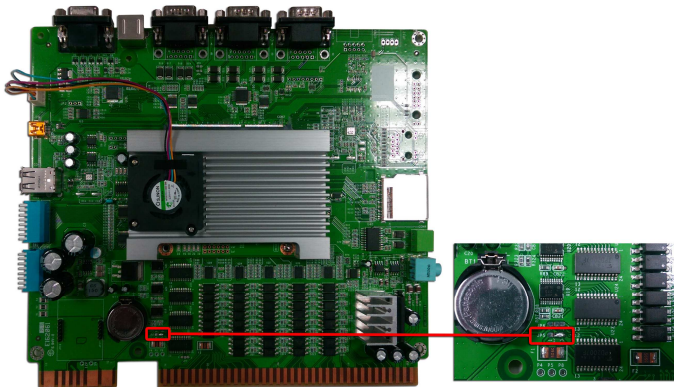

2. Change to use the alternative JP5 setting.

JP5	Low Active		Short pins 1-2
	High Active (Default)		Short pins 2-3

Reset

1. Power off the machine and then power on.
2. Press and hold the **【TEST】** button until the game enters the **CHECKING SYSTEM** page.
3. Enter the 「TEST」 page.



4. Press the **【PLAY】** button to enter the 「TEST 2」 PAGE (PAGE 2).



5. Press the **【STOP3】** button to enter the 「RESET」 page.



6. Press the **【PLAY】** button to **RESET** the game to default value.




7. Press the **【PLAY】** button again to confirm **RESET** or press **ANY** button to **EXIT**.



8. After **RESET** is completed, it displays **SYSTEM RESET COMPLETED** on the screen.
9. Power off the machine and then power on to complete the Reset procedure.

2. Bookkeeping & Adjustment

Access Flow Chart

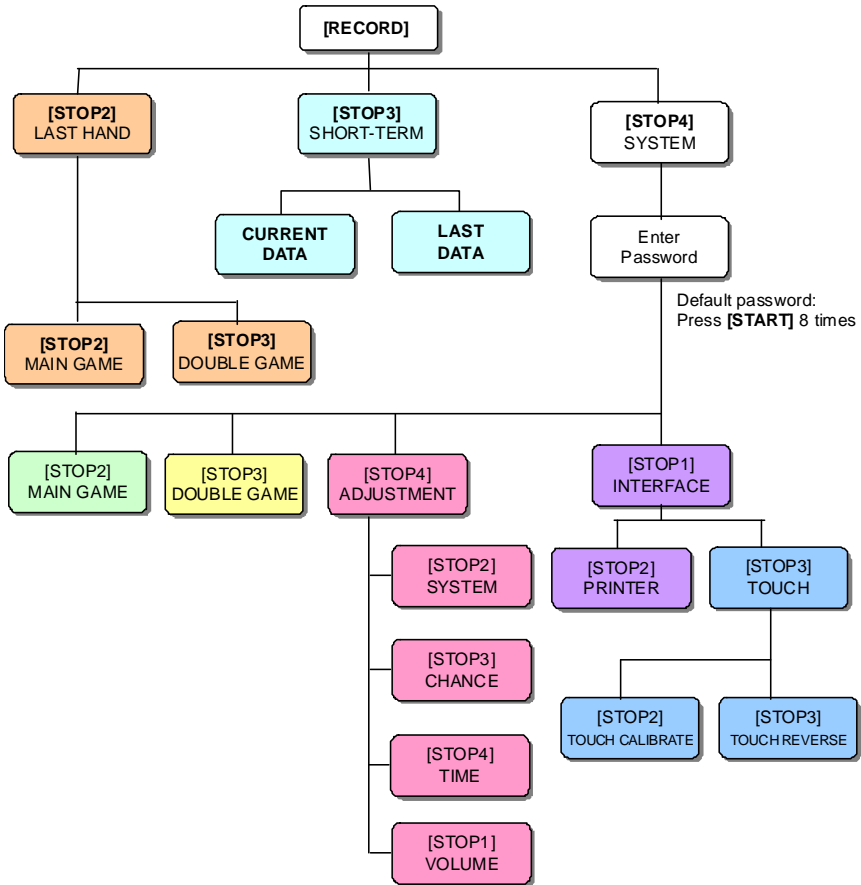


System Settings

ITEMS	SETTING SELECTION	DEFAULT
MAX. LINE PLAY	2, 4, 8, 10, 15, 20	20
MIN. PLAY(TOTAL)	1, 5, 10, 15, 25, 50, 75, 100, 125, 150	25
MIN. PLAY FOR JACKPOT	1, 5, 10, 15, 25	25
JACKPOT MAX	15000, 20000, 50000, 70000, 100000, 150000, 200000	50000
COIN RATE	1,4,5,10,15,20,25,50,75,100,200,375,500,1000	25
KEY IN RATE		100
KEY OUT RATE		100
TICKET RATE		500
GAME TICKET	1,2,3,4,5,8,10, CONTINUOUS	CONTINUOUS
INTERFACE	DISPENSER , PRINTER ,ATTENDANT	PRINTER
PRINTER COMMAND	CBM1 , ESC/POS , ESC/POS2 , STAR	CBM1
DISPLAY	CREDIT, 1C, 5C, 10C, 20C, 25C, 50C, \$1	CREDIT
SYSTEM LIMIT	NO, YES	NO
AUTO TICKET	NO, YES	NO
DEMO MUSIC	NO, YES	YES
NON-STOP	NO, YES	NO
PASSWORD	NO, YES	NO
ODDS TABLE	NO, YES	YES
SCORE BOX	NO, YES, 10X	NO
PLAY SCORE	NO, YES	YES
HAND COUNT	NO, YES	NO
HOLD PLAY	NO, YES	YES
AUTO PLAY	NO, YES	YES
DOUBLE GAME	NO, YES	YES
JACKPOT MODE	PROGRESSIVE, RANDOM	PROGRESSIVE

Chance Settings

ITEMS	SETTING SELECTION	DEFAULT
MAIN GAME LEVEL	LEVEL1(Easiest), LEVEL2,LEVEL3, LEVEL4,LEVEL5,LEVEL6(Hardest)	LEVEL 6
DOUBLE GAME LEVEL	85%, 90%, 95%	95%

Touch Screen Calibration

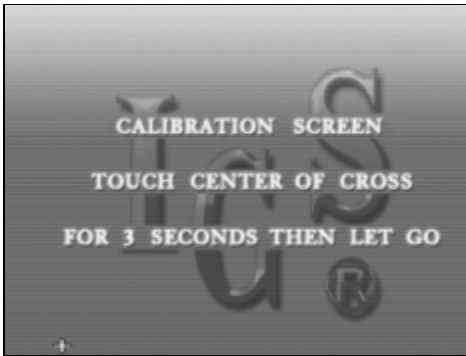

1. If a touch screen is connected, press **[RECORD]>** **[SYSTEM]>****[INTERFACE]>** **[TOUCH]** and follow the on-screen prompts to enter the calibration screen.
2. Touch center of the cross on the screen for 3 seconds.
3. Follow the cross when it moves till the calibration is completed.

3. Introduction

Features

- 25 Lines.
- Win paid from left to right and right to left to increase the winning possibility.
- Max. Win up to 500,000.
- Touch screen / Auto play support.
- Hold Pair Feature: When there is no win in a game, a player can press Hold Pair button to keep the desired symbol and then re-spin again with the same played amount

Main Game

DAY OF THE DEAD is a 5 Reels & 25 Lines game

The screenshot shows the game interface with the following elements and annotations:

- Jackpot Progress:** JP1 (21816), JP2 (8874), JP3 (2861). MIN. PLAY 25 FOR JP.
- Reels:** 5 reels with 25 lines each. Symbols include a blue pot, avocado, candles, bones, flowers, sugar skulls, a sombrero, a donkey, a scatter symbol, a woman, and a jackpot symbol.
- Annotations:**
 - Red arrow pointing to the top left: "3 sets of Jackpots"
 - Red arrow pointing to the right side: "25 Lines"
 - Red arrow pointing to the bottom left: "Credit" (value 1000)
 - Red arrow pointing to the bottom center: "Symbol Zone" (value 0)
- Control Panel:** COLLECT, CREDIT (1000), HELP, HOLD PAIR, LINE (25), PLAY (0), TOTAL PLAY (0), WIN (0), START.





Shuffle Feature




- Shuffle feature is randomly triggered.
- Once triggered, various combinations appear and a new one will replace the current result to give bigger prizes.


Catrina Feature



- Catrina Feature will be triggered when  appears in a game.
- When it triggers,  and the selected symbols will respin which may have a chance to turn them into WILDs.
- After respin, the Catrina feature will be triggered again when  appears again.
- The Catrina feature ends when  turns into WILD.

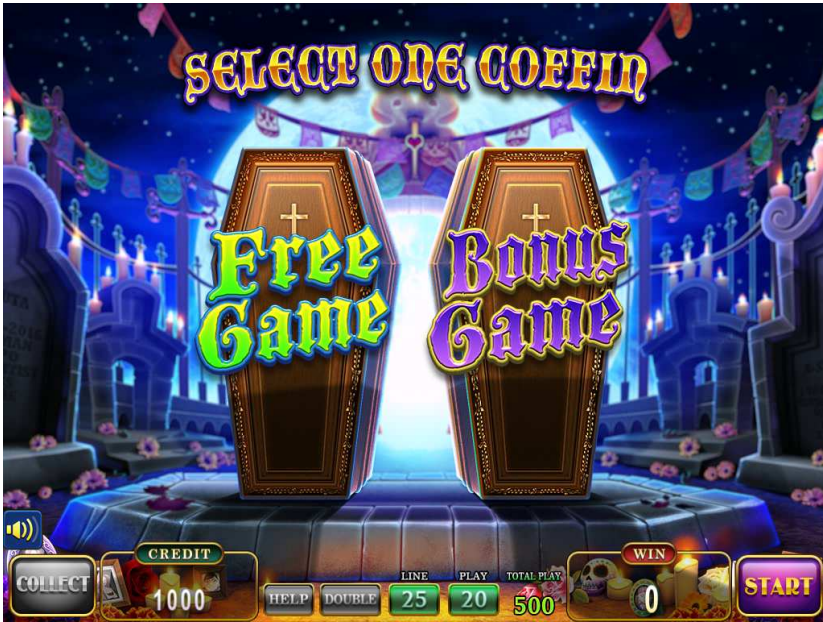


Scatter Game



- 3 or more  symbols can trigger Scatter Game.
- Players can select to play **Bonus Game** or **Free Game**.




Bonus Game



-  award 3 spin times in the Bonus Game.
-  award 4 spin times in the Bonus Game.
-  award 5 spin times in the Bonus Game.
- Each spin players win the prize pointed by the indicator.
- After each spin, winning grid and the grids next to winning grid will be added the winning points before next spin.
- The Bonus Game ends after running out the spin times.



Free Game



- 3  award 5 free games.
- 4  award 7 free games.
- 5  award 10 free games.
- During the Free Games, Catrina Feature may trigger more frequently.

Double Game

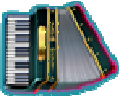

- After winning in a game, a player can press **[DOUBLE]** button to play Double Game.
- Press **[START]** button to select  or .
- Double your wins if your guess is correct. The game ends if your guess is wrong.

Win Rules

Encouraging Higher Play

MIN. PLAY	JACKPOT
25	100%

Odds Table

JP1 23914
JP2 8435
JP3 3099
 MIN. PLAY 25 FOR JP

DAY OF THE DEAD


 appears on reels 1~5. When 3 or more  symbols appear in a game will trigger the Scatter Game.

 can substitute for all symbols except  and .

 x5 10000 x4 1000 x3 250	 x5 4000 x4 500 x3 100	 x5 2500 x4 250 x3 50	 x5 1000 x4 100 x3 25	 x5 750 x4 80 x3 15
 x5 500 x4 70 x3 10	 x5 400 x4 60 x3 10	 x5 300 x4 50 x3 5	 x5 250 x4 40 x3 5	 x5 200 x4 30 x3 5

Line Chart



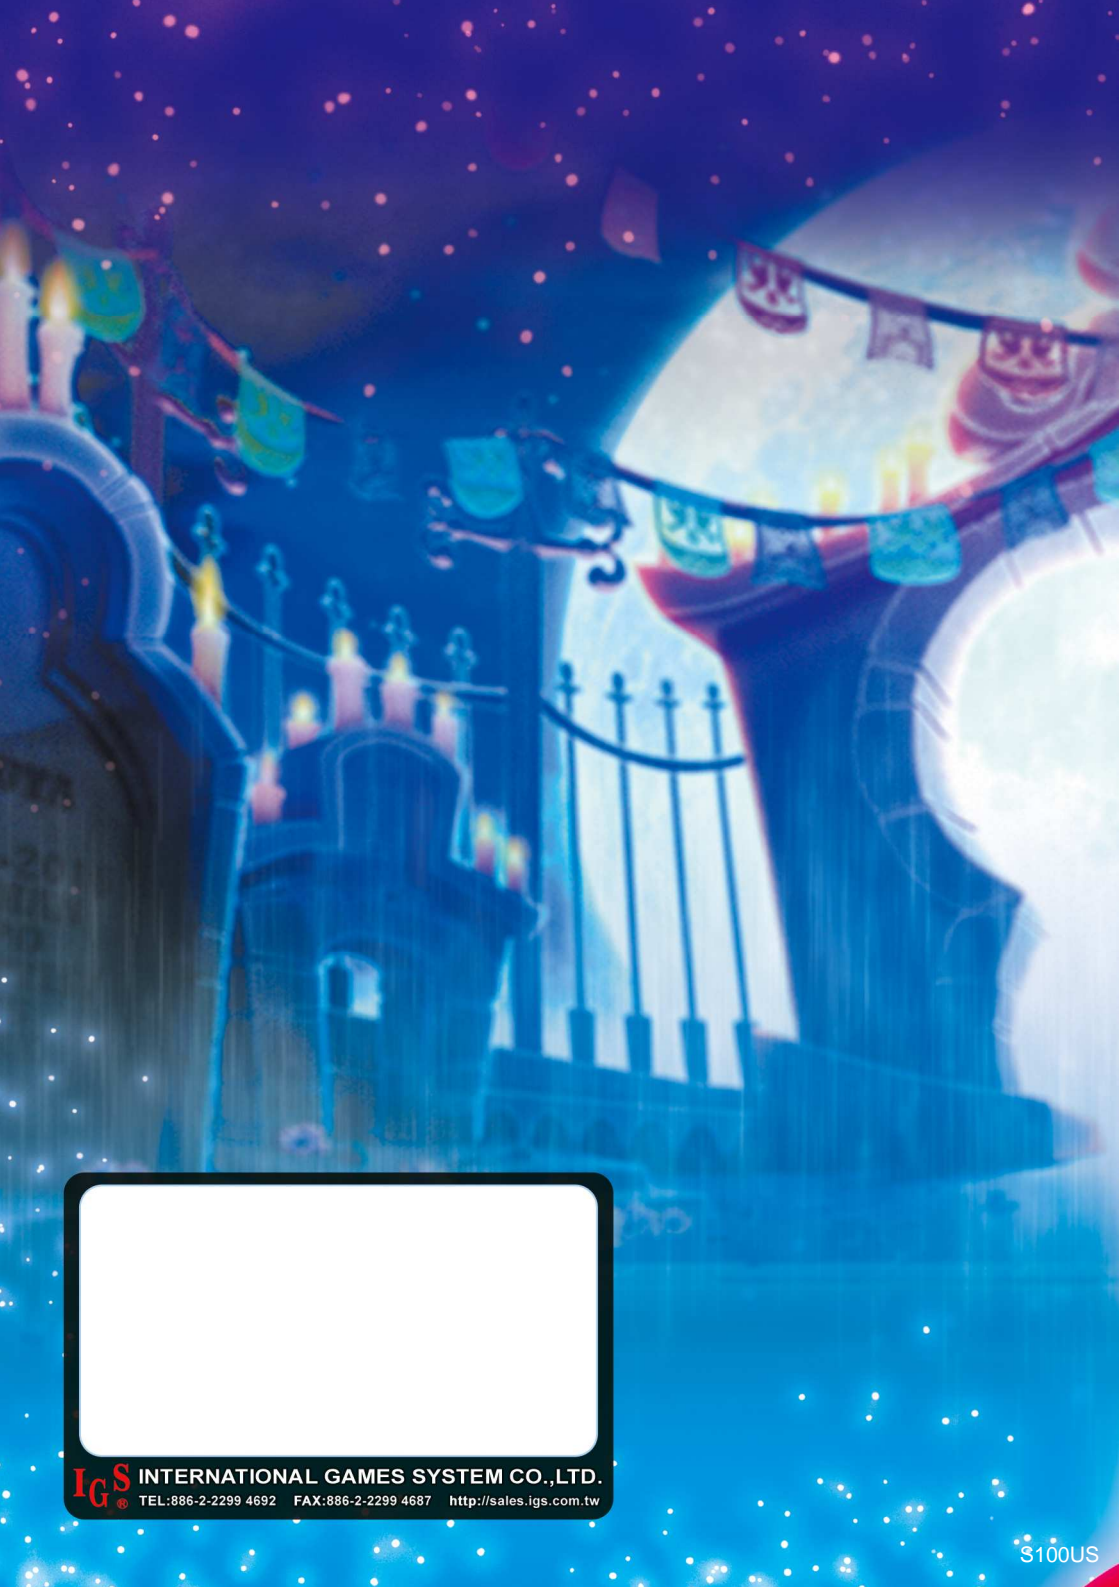

IGS INTERNATIONAL GAMES SYSTEM CO., LTD.
TEL: 886-2-2299 4692 FAX: 886-2-2299 4687 <http://sales.igs.com.tw>