


JACKPOT RESET PROCEDURE

1. **Turn** the jackpot (event) switch clockwise to the horizontal position (one quarter turn).
 - a. A “Jackpot Pending!” message will be displayed on TableVision monitor.
2. **Log in** to the Galaxy Gaming server webpage.
3. **Click** *Jackpots* on the main tab in the upper portion of the page.
4. In the *Jackpots* page,
 - a. Find the pending jackpot.
 - b. **Click** on the *reset* icon .
5. In the *Reset Jackpot* page,
 - a. **Choose** the Reset Percentage in the pulldown menu (100% or 10%).
 - b. Confirm the *Paid Amount* and *Reset Amount*.
 - c. **Enter** any pertinent information, in accordance with client protocol, in the *Description* section.
 - d. **Click** *Reset*.
6. **Input** password in the *Password Confirmation* pop-up window,
 - a. **Click** *Submit*.
 - b. Confirm details.
 - c. **Click** *Home*.
7. **Turn** the jackpot (event) switch counter-clockwise to the original position.
8. Wait for the TableVision image to remove the “Jackpot Pending!” message.
 - a. When the original image is back, play can resume.