### TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

### Setup

Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, – REW, PLAY, FFWD, STOP, Pause, Record <sup>1</sup>

In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or DVR.

#### Menu

Displays the menu.

### Guide

Opens the Interactive Program Guide.

# Day +/-

Jump ahead or back one day in the Interactive Program Guide.

#### Volume +/-

Raise or lower the volume.

#### Mute

Turn the sound on or off.

### **FAV**

View your favourite channels.

# **Aspect Ratio**

Temporarily change the conversion mode from Original Size or Fit to Screen.

# Input

In TV control mode, will change the input of the device you are controlling.



Power Turn on/off a selected device.
Live<sup>1</sup> Return to watching live TV.

**List** Display a list of recorded, future and series rules on your DVR.

**Info** Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow and OK Navigate and select on screen choices.

Exit Exit the current screen.

**Page +/-** Exit the current screen.

Red, Green, Yellow, Blue Access additional features on your set-top box.

**Channel +/-** Changes to the next higher or lower channel.

**On Demand**<sup>2</sup> Access video on demand services.

**Last** Recall the last channel or option.

# Number Keys (0-9)

Directly select a channel or enter options.

**Closed Captioning (CC)** 

Turn on/off closed captioning.

<sup>&</sup>lt;sup>1</sup>Available with Cloud-Based PVR add on