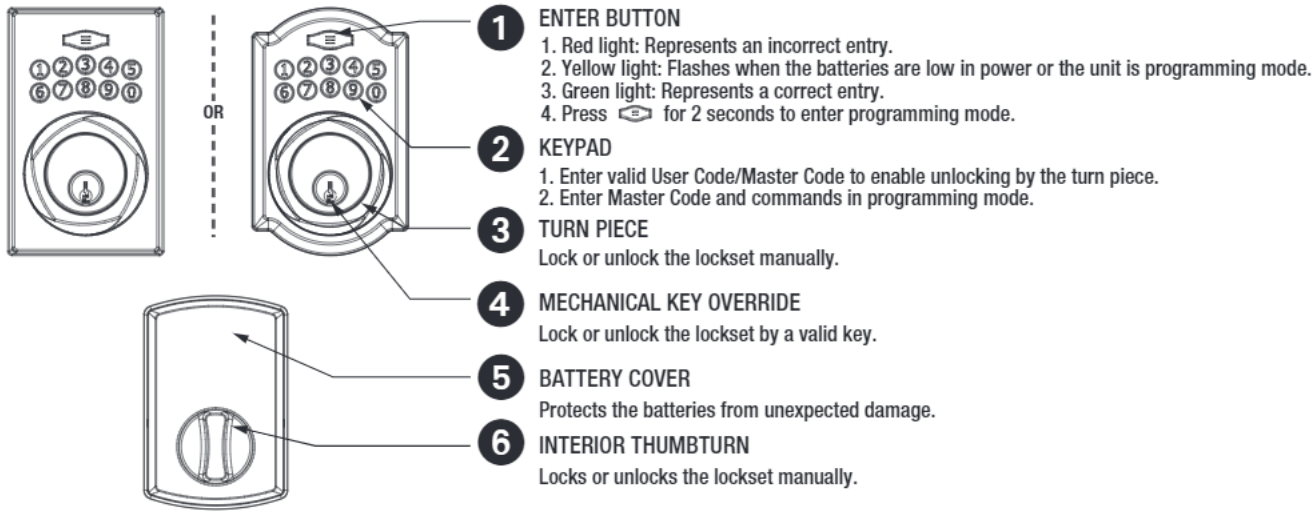


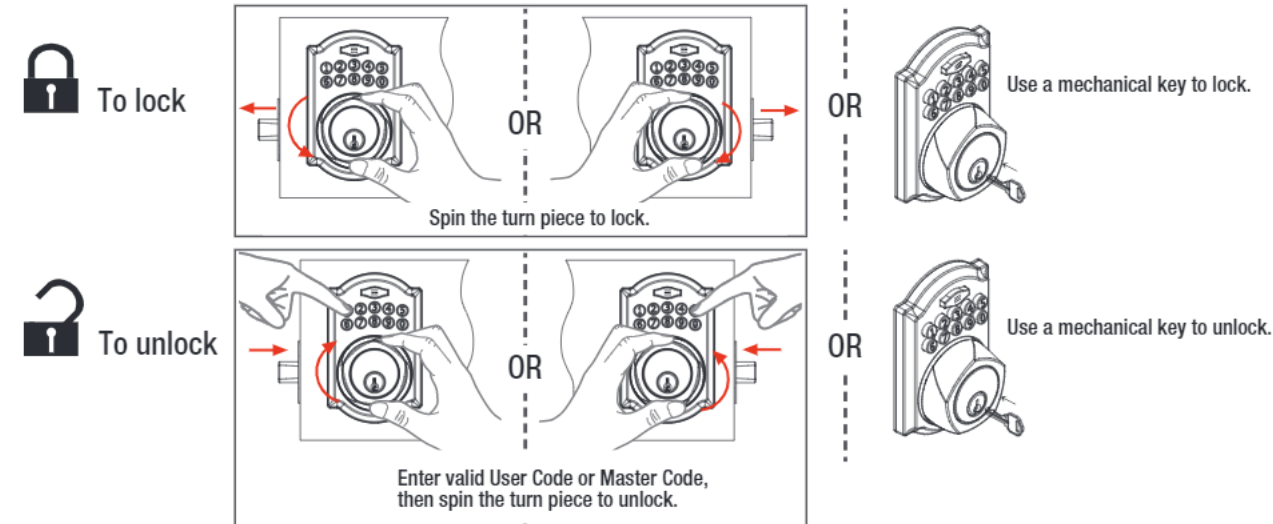
PROGRAMMING

1 OVERVIEW OF THE LOCKSET



HOW TO LOCK / UNLOCK

Please activate the lockset by entering the **DEFAULT MASTER CODE(123456)** before the following operation.





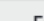 
 


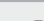 
 


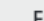 
 


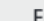 
 
⚠ Keypad is temporarily disabled for 1 minute after 4 consecutive incorrect entries.

2 PROGRAMMING

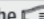 

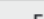 
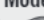 

 
1 HOW TO PROGRAM THE LOCKSET

- ⚠
- The lockset will exit the programming mode and resume to the stand-by status if no input is made in 30 seconds.
 - 3 Beeps mean something was entered incorrectly. Please redo the step again.

BASIC SETTINGS

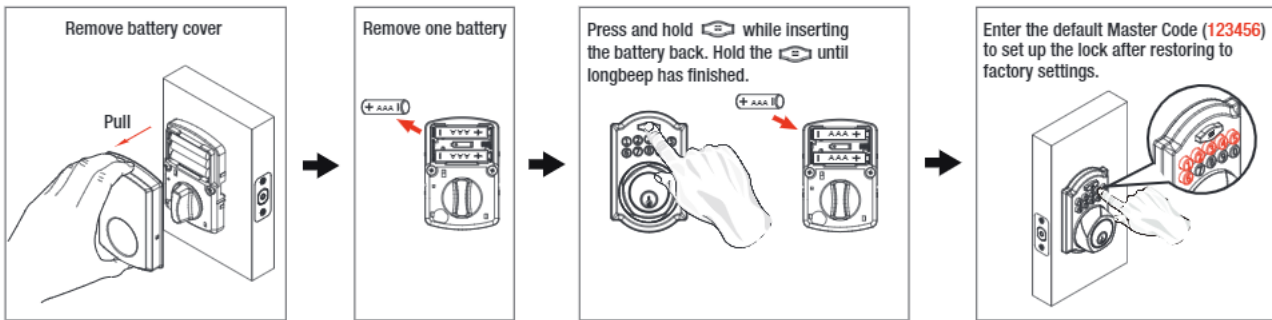
Change Master Code	<ul style="list-style-type: none">Master Code can be used to program or unlock the lockset.The default Master Code is "123456".	Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 0 → New Master Code (4-8 digits) → 
Add a User Code(s)	<ul style="list-style-type: none">User Code can be used to unlock the lockset.User Code capacity: 20 sets (4-8 digits).	Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 1 → New User Code (4-8 digits) → 
Delete individual User Code(s)	<ul style="list-style-type: none">Delete individual User Code(s).	Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 2 → Unwanted User Code (4-8 digits) → 
Delete all User Codes	<ul style="list-style-type: none">Delete all User Codes.	Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 3 → 

ADVANCED SETTINGS

Volume Control	<ul style="list-style-type: none">Turn on / off door lock operation volume.Volume is always on in the programming mode.	Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 4
Vacation Mode	<ul style="list-style-type: none">Disabled by default.All User Codes will be temporarily disabled when Vacation Mode is enabled.	<p>Enable Vacation Mode Press and hold the  button until the unit beeps, then release the  button → Enter current Master Code then press  → Press 5</p> <p>Disable Vacation Mode Enter the current Master Code to unlock and disable Vacation Mode at the same time. All stored User Codes are re-activated for access.</p>

2 RESTORE TO FACTORY SETTINGS

⚠ This will erase all stored information. The preset Master code is 123456.



FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC REGULATIONS




This Class B digital apparatus complies with Canadian ICES-003.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.




3 TROUBLESHOOTING

1 INSTALLATION

QUESTIONS	ANSWERS
A. The latch/thumb piece does not operate correctly after installation.	Re-install the Lockset 1. Make sure the backset on the latch is set to the proper length. 2. Make sure prior to installation latch bolt is retracted and key is not in lockset when installing the deadbolt. 3. Make sure the thumb piece is vertical.
B. Fail to set up the lock.	1. Please make sure the lock is installed correctly. 2. Please install the fresh batteries and make sure the cable is connected correctly.

2 OPERATION

QUESTIONS	ANSWERS
A. Unable to retract /extend latch with turn piece.	1. Make sure your lock is installed correctly. 2. Activate your lockset by entering the default Master Code (123456). 3. Reset to factory settings, then activate the lockset.
B. The yellow light keeps flashing / four beeps occur every time after operating lockset.	1. The batteries are getting low, please replace with three new batteries for the best performance (alkaline batteries only).
C. Keypad not responding.	1. Make sure the batteries are installed properly. 2. The batteries are getting low if the battery indicator keeps flashing. please replace with three new batteries for the best performance (alkaline batteries only). 3. Make sure the cable is well-connected to the port, and was not damaged during installation.
D. Master Code can not be changed.	1. Please refer to  -  in the user guide to restore factory setting and reprogram all codes.
E. What should I do if wrong code was entered?	Return to Standby mode and restart the your intended procedure. 1. Any entering errors will exit setting mode and return to standby mode. 2. By turning the thumb piece will return to standby mode. 3. If you have entered less than 4 digits in setting mode, Press  to return to standby mode.

QUESTIONS	ANSWERS
F. Can not delete all User Codes.	1. Make sure the whole code entering process is completed within 10 seconds, otherwise the unit will time out. 2. Make sure the Master Code has been entered correctly.
G. Can not add a new User Code.	1. Make sure the whole code entering process is completed within 10 seconds, otherwise the unit will time out. 2. Make sure the Master Code has been entered correctly. 3. The new User Code will not be accepted when the capacity is full. Try to delete any or some existing User Codes and then add new one(s) again. A User Code must be at least 4 to 8 digits.
H. Lockset is not able to unlock by keypad.	1. Make sure you have entered the correct User Code. 2. The battery is low if the battery indicator light keeps flashing. Please replace with three new batteries. 3. Make sure the cable is firmly connected. 4. Check the cable for any damage that may have occurred during installation. 5. Make sure the batteries are properly installed. Use alkaline batteries only. 6. Check the strike plate to make sure it is properly aligned and clear so the bolt can freely move in the hole.
I. Lockset is unable to reset.	1. Please refer to  -  in the user guide to restore factory settings and reprogram all codes. 2. The battery is low if the battery indicator light keeps flashing. Please replace with three new batteries.
J. How to operate the lockset in darkness?	1. Press any button to activate the lockset back light.
K. The red indicator is still on after setting is completed.	1. Check if  is jammed. 2. Re-install the batteries.
L. I cannot remove my key unless it is in the locked position.	1. Un-install the interior and exterior assemblies. Before re-installation, please follow these guidelines: 1) Make sure the bolt is in the retracted position. 2) Do not have any key in lock cylinder. 3) Make sure the torque blade is inserted correctly.

If the lock appears to be damaged or does not operate properly, please contact customer service for further assistance.

TEMPLATE

