Quick Start Guide

Congratulations on your new Foundation! Follow this guide to get up and running so you can monitor and manage your system!



The Foundation ships with the following configuration for initial setup:

Default address: 192.168.200.10
Network mask: 255.255.255.0

These ports can be configured during 4. Configure Ports (optional)



The Foundation doesn't have a power button, and will power on as soon as it has power.

Decide if you are going to use DHCP or Static IP for the initial setup, then follow steps 1-4.

1. DHCP Finding The Workspace IP

Option A DHCP Server or IP Scanner

- 1. Connect the Foundation to your network using Port 1 (PoE)
- 2. **Power on** the Foundation by plugging it in.
- Check your DHCP server or use an IP scanner to find the Workspace IP.

Option B Local Console via Monitor

- 1. Connect the Foundation to your network using Port 1 (PoE)
- 2. **Plug in a monitor** so that the Foundation can recognize it.
- 3. **Power on** the Foundation by plugging it in.
- 4. The Local Console will appear and display the Workspace IP.

1. Static IP Connecting to Static IP

- 1. Configure your computer to access 192.168.200.0
- 2. Ensure 192.168.200.10 is not already in use on your network.
- Connect a crossover ethernet cable (or a regular ethernet cable depending if your device has that capability) from your device to Port 2 on the Foundation.
- 4. Power on the Foundation by plugging it in.
- From your device, launch a browser and connect to the ISAAC Workspace at http://192.168.200.10.

2 ISAAC Workspace Setup

From your computer, connect to the **Workspace IP** using a browser if you haven't already and complete the **ISAAC Workspace setup.**

3 Login

Once you've completed the workspace setup, log in:

- Username: admin
- Password: Configured in ISAAC Workspace setup

Configure Ports (optional)

- If needed, navigate to System > Settings > Platform > Network Interface
- Configure the two network interfaces (ports) by setting them to use either DHCP or Static IP.

Alternate Configuration

If you can't access ISAAC Workspace, connect a monitor & keyboard to the Foundation and then power it on to access the **Local Console**.

- Use up/down arrow keys to navigate between the settings
- Use space bar to check/uncheck DHCP mode when selected
- If using Static IP, enter the desired IP addresses
- Navigate down to the save button and hit Enter to save

