




User Guide (Ver. 1.1)

Model: D4VX, D8VX, D16VX

4, 8 & 16 Channel HD TVI Digital Video Recorder

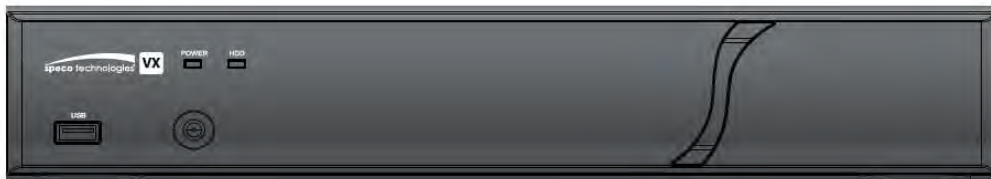

About the User's Guide

Before operating the unit, please read this user's guide thoroughly and retain it for future reference.

Cautions



Explanation of Graphic Symbols



This symbol indicates the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol indicates the presence of “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock, property damage, personal injury, or death.

WARNING

To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.

CAUTION

Changes or modifications not approved by the manufacturer will void the warranty of the product.

Using an incompatible battery may increase the risk of fire or explosion.

Replace only with the same or equivalent type battery recommended by the manufacturer.

Discard used batteries according to manufacturer’s instructions.

These Precautions must be followed for Safety Reasons




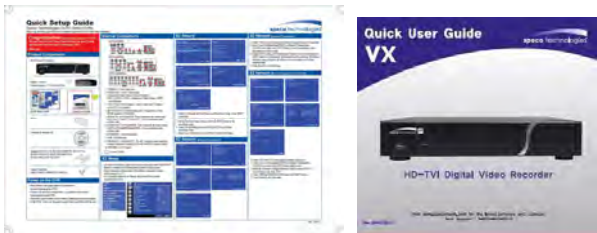





Warning

- Do not use if the unit emits smoke.
- Do not disassemble the unit.
- Do not place any heavy or sharp objects on the unit.
- Do not place on uneven surface.
- Do not expose to shock or vibration.
- Do not move the unit when the unit is powered on.
- Do not block, and allow dust to accumulate in the air vents.
- Do not restrict airflow of the unit; doing so can damage the unit.
- Only qualified and experienced personnel should perform installation and servicing.
- Turn off the power of the DVR when connecting Cameras, Audio or Sensor Cables.
- The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.
- The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to repair the unit.
- The manufacturer may not be held liable for any issues with the unit if the warranty seal is removed.

Product Components

Please make sure the following components are included as specified below.

| | |
|---|--|
| DVR Unit |  |
| Remote Control |  |
| Battery 1.5V (AAA x 2EA) |  |
| Quick Start Guide & Quick User Guide |  |
| Mouse |  |
| Software & Manual CD |  |
| Adaptor (DC12V 3A) & Power cable (110V) |  |

Specifications

| MODEL NAME | | | D4VX | D8VX | D16VX |
|------------|----------------------------------|--------------------|---|----------------------------|----------------------------------|
| Video | Input | Number of Channels | 4 | 8 | 16 |
| | | Camera Types | 960H, HD-TVI 1/2/3/4MP | | |
| | Output | Main Monitor | VGA and HDMI (Max. 1920x1080) | | VGA and HDMI (Max. 3840x2160) |
| | | Sub Monitor | CVBS or SPOT (Selectable) | | |
| Audio | Input | Local Input | 4 | | |
| | Output | Local Output | 1 | | |
| | Audio Codec | | G.711 | | |
| Alarm | Sensor In | | 4 | 4 or 8(with Sensor Box) | 4 or 16(with Sensor Box) |
| | Alarm Output | | 1 | | |
| Serial | RS-232C | | None | | |
| | RS-485 | | 1 | | |
| Live | Frame rate with 4M Camera | | 15fps/Ch | 15fps/Ch | 15fps/Ch |
| | Frame rate with 3M Camera | | 18fps/Ch | 18fps/Ch | 18fps/Ch |
| | Frame rate with 2M Camera | | 30fps/Ch | 30fps/Ch | 30fps/Ch |
| Recording | Compression | | H.264 | | |
| | Local Resolution & Frame Rate | 2688x1520(4M) | 10fps/Ch | 10fps/Ch | 12fps/Ch |
| | | 2304x1296(3M) | 13fps/Ch | 13fps/Ch | 15fps/Ch |
| | | 1920x1080(2M) | 15fps/Ch | 15fps/Ch | 15fps/Ch |
| | Recording Quality Grade | | 5 Levels | | |
| | Recording Mode | | Smart / Continuous / Motion / Sensor / Schedule /Manual | | |
| | Pre Recording | | Max. 20 Minutes | | |
| | Post Recording | | Max. 60 Seconds | | |
| Playback | Search | | EZ Search, Smart, Date/Time, Event, Archive, Log | | |
| | Multi-Decoding | | 1, 4 | 1, 4, 8 | 1, 4, 9, 16 |
| | Playback Speed | | x0.25, x0.5, x2, x4, x8, x16, x32, x64 | | |
| Backup | Media | | USB drive, External HDD, Network | | |
| | File Format | | BMP, AVI, Proprietary Format and EXE | | |
| | Huge Backup | | Yes (Max. 24 hours) | | |
| Storage | HDD | Capacity of 1 HDD | 6TB | | |
| | | Internal HDDs | 1 | | |
| | | e-SATA | N/A | | |
| | USB | Front | 1 | | |
| | | Rear | 1 | | |
| User I/F | Input Method | | IR Remote Control, Mouse, Keyboard Controller | | |
| Network | Interface | | 10/100/1000 Base-TX | | |

| | | |
|----------------|-----------------------------|--|
| | Dynamic DNS | Yes (Free Speco DDNS) |
| | Dual Streaming | Yes |
| Features | Camera Control | OSD and PTZF Control via UTC |
| | Digital Zoom | Yes |
| | DLS (Day Light Saving) | Yes |
| | NTP (Network Time Protocol) | Yes |
| | S.M.A.R.T | Yes |
| | Internal Beep | Yes |
| | Multi-Language | Yes |
| | System Event Notification | Health, Restart, Shutdown, Panic Recording, Alarm, Motion, HDD Alert |
| Network Access | 3G/4G Mobile Viewer | Speco Player (iPad / iPhone / Android)) |
| | PC Web Viewer | Windows (IE, Chrome, Firefox, Safari) |
| | PC Client | SecureGuard CMS and SpecoTech Multi-Client Viewer |
| | Remote Setup and Upgrade | Yes |
| Power | Power Supply Voltage | 12V 3A |
| Temperature | Operation | 41° F ~ 104° F (5°C ~ 40°C) |
| | Storage | 14° F ~ 122° F (-10°C ~ 50°C) |
| Humidity | Operation | 20% ~ 80% (Non-condensing) |
| Weight | Unit Weight (Gross weight) | Approximately 4.35 lbs |
| Dimension | Unit Dimension (W x H x D) | 11.8"(W) x 2.0"(H) x 9.9"(D) |

Please note that specifications and unit exterior design are subject to change without notification.

Table of Contents

| | | |
|--------|--|----|
| 1. | Main Features | 10 |
| 2. | Initial Boot up Process | 11 |
| 2-1. | Initial Boot up and Basic Time Setup | 11 |
| 2-2. | Setting Daylight Saving Time | 11 |
| 2-3. | Setting NTP (Network Time Protocol)..... | 13 |
| 2-4. | EZ Setup..... | 16 |
| 3. | Name, Function and Connection | 18 |
| 3-1. | Front Panel | 18 |
| 3-2. | Connectors | 18 |
| 3-3. | Remote Control..... | 19 |
| 4. | Setting up the DVR..... | 21 |
| 4-1. | Setup – Main Live Screen | 21 |
| 4-2. | Setup – System Mode..... | 21 |
| 4-2-1. | How to use ‘Cloud’ | 26 |
| 4-3. | Setup – Record Mode | 27 |
| 4-3-1. | Recording Schedules..... | 29 |
| 4-4. | Setup – Device Mode..... | 29 |
| 4-4-1. | Digital Deterrent..... | 31 |
| 4-4-2. | Keyboard Controller & PTZ Setup..... | 32 |
| 4-5. | Setup – Display Mode | 36 |
| 4-6. | Setup – Network Mode..... | 37 |
| 4-6-1. | Network Types | 38 |
| 4-6-2. | DDNS | 39 |
| 4-6-3. | Network Port and Web Port..... | 39 |
| 4-6-4. | Network Stream | 40 |
| 4-7. | Setup – User Management Mode..... | 41 |
| 4-8. | Setup – Storage Mode | 44 |
| 4-9. | Setup - Config Mode | 45 |
| 4-9-1. | Software Upgrade..... | 46 |
| 5. | Live, Search and Playback | 48 |
| 5-1. | Live View | 48 |
| 5-1-1. | PTZ Control | 51 |
| 5-2. | Digital Zoom in Live and Playback Screen | 52 |
| 5-3. | Search Screen | 52 |
| 5-3-1. | EZSearch..... | 53 |
| 5-3-2. | Smart Search..... | 54 |
| 5-3-3. | Time Line Search..... | 56 |
| 5-3-4. | Event Search | 56 |
| 5-3-5. | Go To First Time..... | 57 |

| | |
|---|----|
| 5-3-6. Go To Last Time..... | 57 |
| 5-3-7. Go To Specific Time | 57 |
| 5-3-8. Archive List | 58 |
| 5-3-9. Log List..... | 58 |
| 5-4. Play Mode..... | 58 |
| 6. Export and Back Up..... | 60 |
| 6-1. Still Image Backup onto USB Flash Drive..... | 60 |
| 6-2. Video Backup onto USB Flash Drive during playback | 61 |
| 6-3. EZCopy: Video Backup onto USB Flash Drive during playback..... | 62 |
| 6-4. Transferring Still Images or Video from the ARCHIVE List..... | 63 |
| 6-5. Playback of Backup Video..... | 64 |
| 6-5-1. AVI Format..... | 64 |
| 6-5-2. NSF Format | 64 |
| 7. Network Access Using the Multi-Sites Network Viewer..... | 65 |
| 7-1. Overview..... | 65 |
| 7-2. PC Requirements..... | 65 |
| 7-3. Installation of the Program | 66 |
| 7-4. Live Window..... | 67 |
| 7-4-1. Main User Interface..... | 67 |
| 7-4-2. Control Buttons | 68 |
| 7-5. Search and Playback Window..... | 69 |
| 7-5-1. Main User Interface..... | 69 |
| 7-5-2. Main Control Panel | 70 |
| 7-5-3. SMART SEARCH | 72 |
| 7-6-1. General..... | 74 |
| 7-6-2. Event | 75 |
| 7-6-3. Record | 76 |
| 7-6-4. Display..... | 77 |
| 7-6-5. Language..... | 77 |
| 7-6-6. About | 78 |
| 7-7. Remote Setup..... | 79 |
| 7-7-1. System..... | 80 |
| 7-7-2. Record | 82 |
| 7-7-3. Device..... | 83 |
| 7-7-4. Display..... | 84 |
| 7-7-5. Network | 84 |
| 7-7-6. User Management | 85 |
| 7-7-7. Storage | 85 |
| 7-7-8. Remote Upgrade..... | 85 |
| 7-8. Operation | 86 |
| 7-8-1. Addition, Delete, and Modify of DVR Sites | 86 |

| | |
|---|-----|
| 7-8-2. Connect and Disconnect..... | 88 |
| 7-8-3. Still-image Capture During Live..... | 89 |
| 7-8-4. Recording Video on Local PC During Live | 90 |
| 7-8-5. Local Playback and Remote Playback | 91 |
| 7-8-6. AVI Backup during Playback | 93 |
| 8. Network Access Using the Web-Browser Viewer | 95 |
| 9. Network Access Using the Smart Phone Viewer..... | 97 |
| 9-1. App Viewer for iPhone..... | 97 |
| 9-1-1. Live..... | 97 |
| 9-1-2.PTZ Control | 99 |
| 9-1-3. Playback | 99 |
| 9-2. App Viewer for Android Phone..... | 100 |
| 9-2-1. Live..... | 100 |
| 9-2-2. Playback | 101 |
| 9-2-3.PTZ Control | 102 |
| APPENDIX: Network Connection - LAN | 103 |
| APPENDIX: Network Connection – Internet and DDNS..... | 105 |

1. Main Features

- Easy Record, Copy and Setup
- Easy Search by Thumbnail Preview
- Easy Copy
- Digital Deterrent function
- H.264 high quality compression saves HDD space
- Simultaneous live view/playback while continuing to record/network transfer or backup
- Remote monitoring/recording/playback/configuration and control via internet
- 4 Channel Audio Recording
- Switch between low and high quality stream during simultaneous Continuous + Motion or Continuous + Sensor recording modes for storage optimization

NOTE: Under federal law, The Fourth Amendment to the U.S. Constitution, Title III of the Omnibus Crime Control and Safe Streets Act of 1968, as amended by the Electronic Communications Privacy Act of 1986 (18 U.S.C. § 2510, *et seq.*), and the Foreign Intelligence Surveillance Act of 1978 (50 U.S.C. 1801, *et seq.*) permit government agents, acting with the consent of a party to a communication, to engage in warrantless interceptions of telephone communications, as well as oral and electronic communications.

- Automatic camera detection (Plug & Play)
- Covert camera operation provides enhanced security and administrator control
- Dynamically programmable recording priority, motion detection, alarms and scheduling
- Simple and Easy Graphic User Interface
- HDMI Output
- Password to secure access
- Network software supports 10/100/1000Mbps
- USB 2.0 port for video clip exporting and easy firmware upgrade via USB Flash Drive
- Exclusive File Format Backup and Player
- Variety of ways to Remote access via SecureGuard® CMS, SpecoTech Multi-Client Software, Web-Viewer, and Mobile App
- S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology for HDD)


2. Initial Boot up Process

2-1. Initial Boot up and Basic Time Setup



1. During the first boot up, the following logo and message will be displayed.



2. After the logo, select the language as specified below.

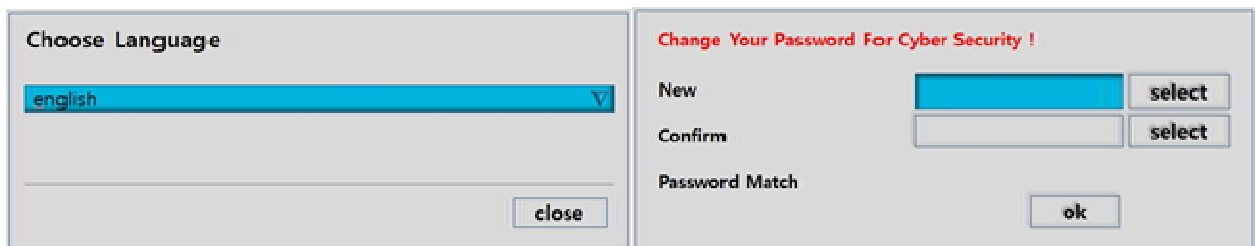Two side-by-side screenshots of the initial boot-up setup screens. The left screen is titled "Choose Language" and shows a dropdown menu with "english" selected. The right screen is titled "Change Your Password For Cyber Security !" and shows fields for "New", "Confirm", and "Password Match", each with a "select" button, and an "ok" button at the bottom.

- 1) User has to set a password before using.
Can not use '1111' when the initial boot up password set.
But user can set '1111' as a password through [Setup > User Management > Password Setup]
- 2) DVR will not proceed when user put the password '1111'.

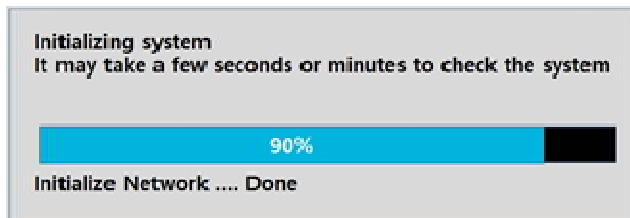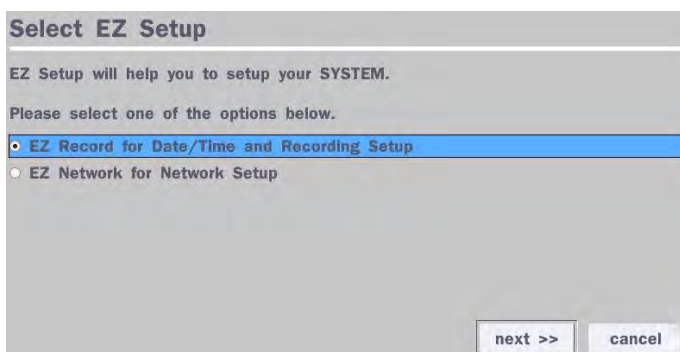A screenshot of a system initialization progress bar. It shows a blue bar at 90% completion. The text "Initializing system" and "It may take a few seconds or minutes to check the system" is at the top. Below the bar, it says "Initialize Network Done".A screenshot of the "Select EZ Setup" screen. It says "EZ Setup will help you to setup your SYSTEM. Please select one of the options below." There are two radio button options: "EZ Record for Date/Time and Recording Setup" (selected) and "EZ Network for Network Setup". At the bottom are "next >>" and "cancel" buttons.

(EZ Setup Page Reference, Page 16-17)

2-2. Setting Daylight Saving Time

To enable Daylight Saving feature/NTP synchronization, take the following steps.

1. Enter the Setup mode. The default Username is "admin" and enter a password set on the initial boot-up process.



Login - Setup

User ID:


Password:

2. Go to Setup > System > Date & Time Setup

System

| | |
|------------------------------|---|
| Description | <input type="button" value="select"/> |
| Language | english |
| Date Display Format | mm/dd/yyyy |
| Date & Time Setup | <input type="button" value="select"/> |
| Client Access | on |
| NTP Setup | on <input type="button" value="select"/> |
| e-Mail Setup | off <input type="button" value="select"/> |
| Unit Name | DVR |
| System Restart | <input type="button" value="select"/> |
| System Shutdown | <input type="button" value="select"/> |
| EZ Setup | <input type="button" value="select"/> |
| System Event Notification | <input type="button" value="select"/> |


3. Select 'ok' from the Daylight Saving dropdown menu.

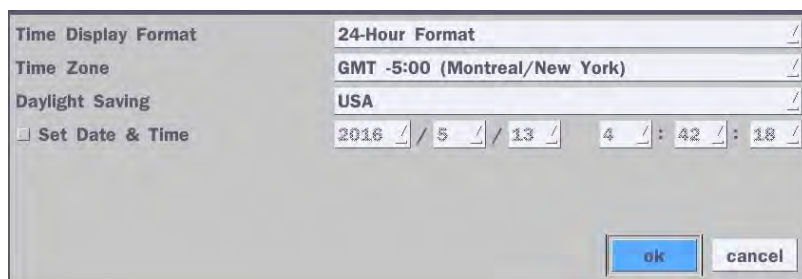

A screenshot of a time settings dialog box. It contains the following fields: 'Time Display Format' set to '24-Hour Format', 'Time Zone' set to 'GMT -5:00 (Montreal/New York)', and 'Daylight Saving' set to 'USA'. Below these is a date and time field showing '2016 / 5 / 13 4 : 42 : 18'. At the bottom right are 'ok' and 'cancel' buttons.


2-3. Setting NTP (Network Time Protocol)

1. Setup > System > NTP Setup > On > Select

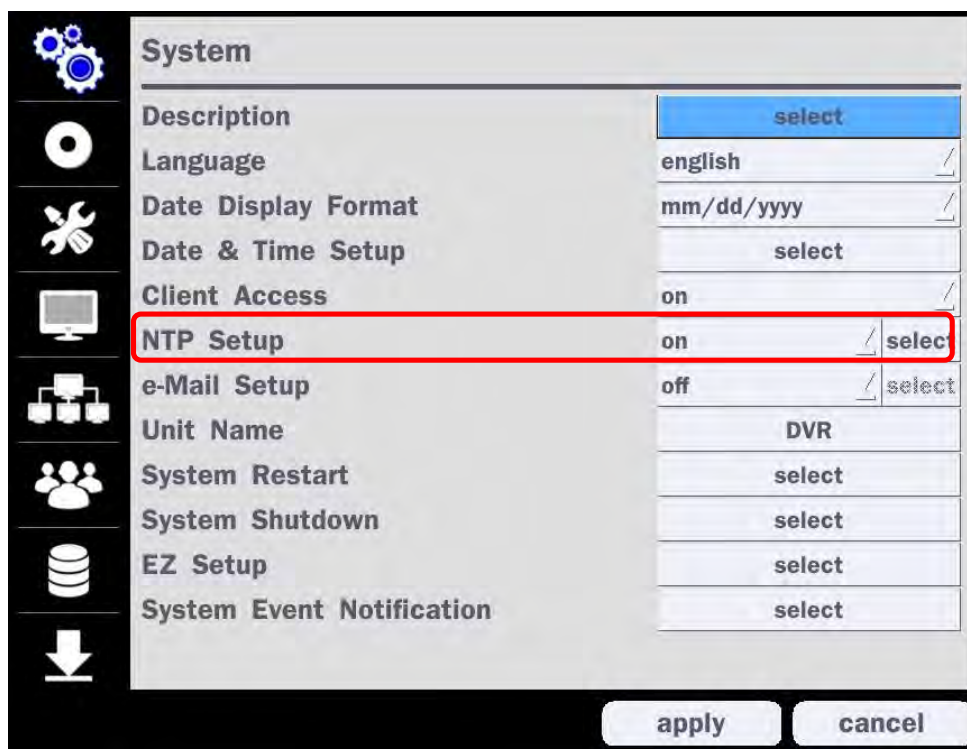

A screenshot of the 'System' configuration menu. The menu items are listed on the left, and their current settings are on the right. 'NTP Setup' is highlighted with a red rectangle. The settings are: Description (select), Language (english), Date Display Format (mm/dd/yyyy), Date & Time Setup (select), Client Access (on), NTP Setup (on, with a 'select' button next to it), e-Mail Setup (off, with a 'select' button next to it), Unit Name (DVR), System Restart (select), System Shutdown (select), EZ Setup (select), and System Event Notification (select). At the bottom are 'apply' and 'cancel' buttons.

2. Select the proper GMT Time Zone.

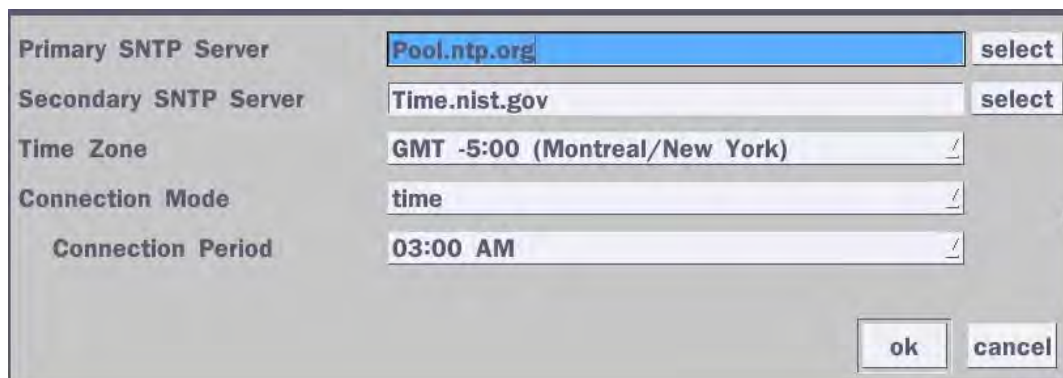

A screenshot of the 'NTP Setup' dialog box. It contains the following fields: 'Primary SNTP Server' set to 'Pool.ntp.org', 'Secondary SNTP Server' set to 'Time.nist.gov', 'Time Zone' set to 'GMT -5:00 (Montreal/New York)', 'Connection Mode' set to 'time', and 'Connection Period' set to '03:00 AM'. At the bottom right are 'ok' and 'cancel' buttons.

Table 2.3.1. GMT Time Zone

| | State | Standard Time | Daylight-Saving Time |
|----|---------------------------|---------------|----------------------|
| AL | Alabama | GMT-6 | GMT-5 |
| AK | Alaska | GMT-9 | GMT-8 |
| AK | Alaska (Aleutian Islands) | GMT-10 | NA |
| AZ | Arizona | GMT-7 | NA |
| AZ | Arizona (Navajo) | GMT-7 | GMT-6 |
| AR | Arkansas | GMT-6 | GMT-5 |
| CA | California | GMT-8 | GMT-7 |
| CO | Colorado | GMT-7 | GMT-6 |
| CT | Connecticut | GMT-5 | GMT-4 |
| DC | District of Columbia | GMT-5 | GMT-4 |
| DE | Delaware | GMT-5 | GMT-4 |
| FL | Florida | GMT-5 | GMT-4 |
| FL | Florida (W) | GMT-6 | GMT-5 |
| GA | Georgia | GMT-5 | GMT-4 |
| HI | Hawaii | GMT-10 | NA |
| ID | Idaho (N) | GMT-8 | GMT-7 |
| ID | Idaho (S) | GMT-7 | GMT-6 |
| IL | Illinois | GMT-6 | GMT-5 |
| IN | Indiana | GMT-5 | GMT-4 |
| IN | Indiana (SW / NW) | GMT-6 | GMT-5 |
| IA | Iowa | GMT-6 | GMT-5 |
| KS | Kansas | GMT-6 | GMT-5 |
| KS | Kansas (W) | GMT-7 | GMT-6 |
| KY | Kentucky (E) | GMT-5 | GMT-4 |
| KY | Kentucky (W) | GMT-6 | GMT-5 |
| LA | Louisiana | GMT-6 | GMT-5 |
| ME | Maine | GMT-5 | GMT-4 |
| MD | Maryland | GMT-5 | GMT-4 |
| MA | Massachusetts | GMT-5 | GMT-4 |
| MI | Michigan | GMT-5 | GMT-4 |
| MI | Michigan (W) | GMT-6 | GMT-5 |
| MN | Minnesota | GMT-6 | GMT-5 |
| MS | Mississippi | GMT-6 | GMT-5 |
| MO | Missouri | GMT-6 | GMT-5 |
| MT | Montana | GMT-7 | GMT-6 |
| NE | Nebraska | GMT-6 | GMT-5 |
| NE | Nebraska (W) | GMT-7 | GMT-6 |
| NV | Nevada | GMT-8 | GMT-7 |

| | | | |
|----|------------------|-------|-------|
| NH | New Hampshire | GMT-5 | GMT-4 |
| NJ | New Jersey | GMT-5 | GMT-4 |
| NM | New Mexico | GMT-7 | GMT-6 |
| NY | New York | GMT-5 | GMT-4 |
| NC | North Carolina | GMT-5 | GMT-4 |
| ND | North Dakota | GMT-6 | GMT-5 |
| ND | North Dakota (W) | GMT-7 | GMT-6 |
| OH | Ohio | GMT-5 | GMT-4 |
| OK | Oklahoma | GMT-6 | GMT-5 |
| OR | Oregon | GMT-8 | GMT-7 |
| OR | Oregon (E) | GMT-7 | GMT-6 |
| PA | Pennsylvania | GMT-5 | GMT-4 |
| RI | Rhode Island | GMT-5 | GMT-4 |
| SC | South Carolina | GMT-5 | GMT-4 |
| SD | South Dakota (E) | GMT-6 | GMT-5 |
| SD | South Dakota (W) | GMT-7 | GMT-6 |
| TN | Tennessee (E) | GMT-5 | GMT-4 |
| TN | Tennessee (W) | GMT-6 | GMT-5 |
| TX | Texas | GMT-6 | GMT-5 |
| TX | Texas (W) | GMT-7 | GMT-6 |
| UT | Utah | GMT-7 | GMT-6 |
| VX | Vermont | GMT-5 | GMT-4 |
| VA | Virginia | GMT-5 | GMT-4 |
| WA | Washington | GMT-8 | GMT-7 |
| WV | West Virginia | GMT-5 | GMT-4 |
| WI | Wisconsin | GMT-6 | GMT-5 |
| WY | Wyoming | GMT-7 | GMT-6 |



NOTE: If you want the unit to automatically synchronize the local time, the Time Zone must be properly set according to your local time zone.

2-4. EZ Setup

VX Easy Setup(Click the right button on mouse > Advanced Menu > EZ Setup)

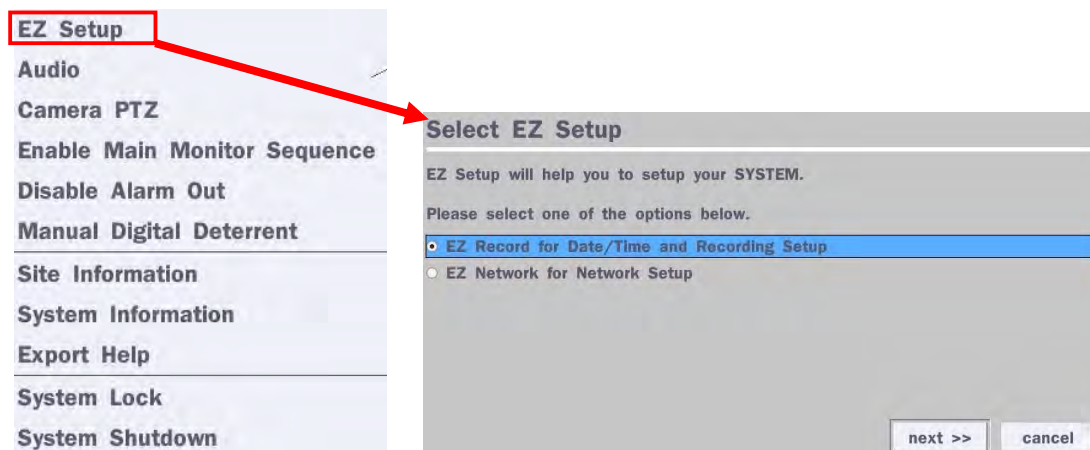


Figure 2.4. EZ Setup Screen

2.4.1. Setup Date/Time and Recording configuration

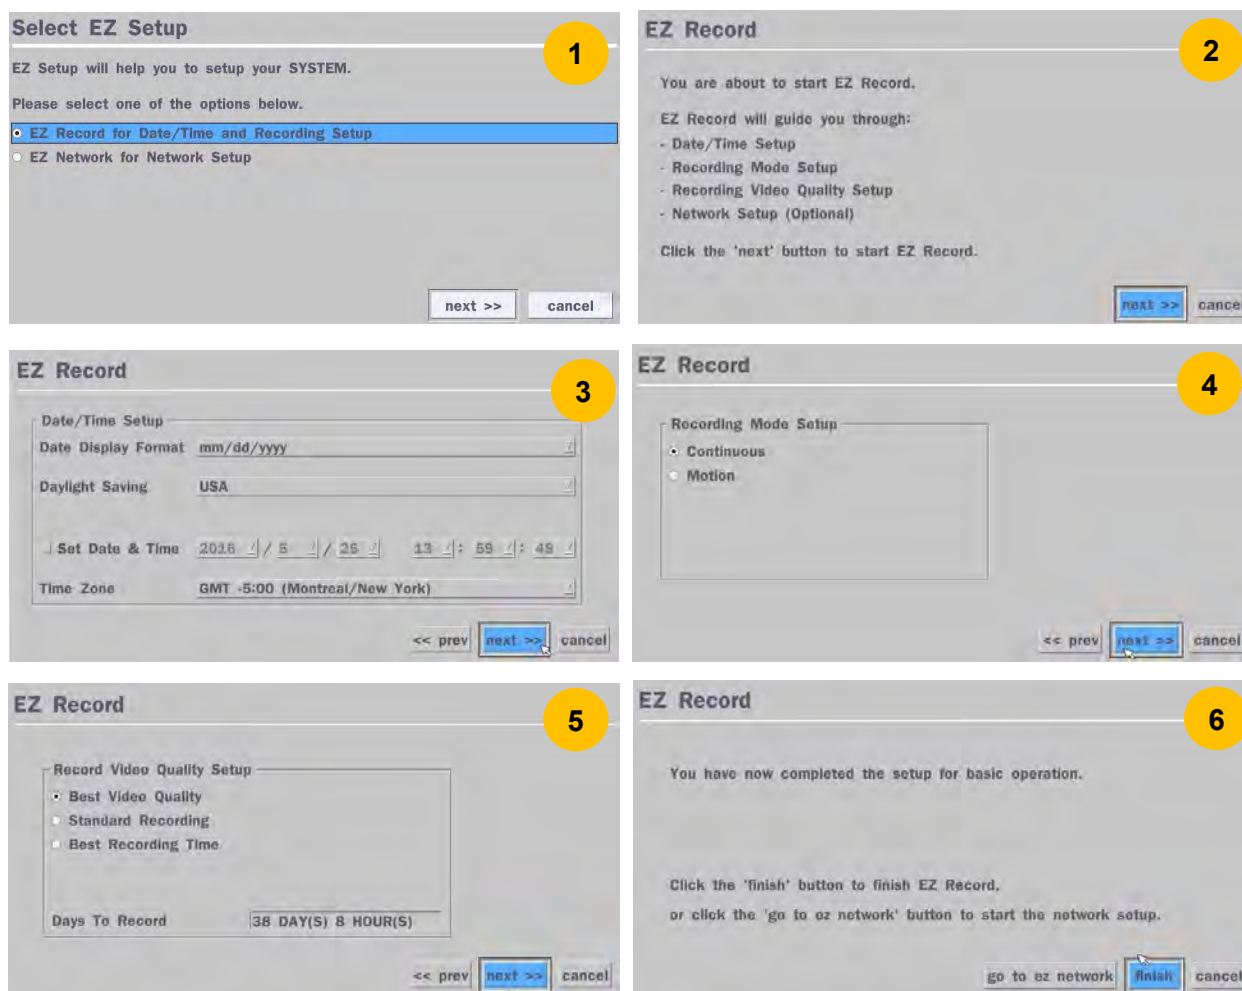


Figure 2.4.1. EZ Record Setup Procedure

- ① Select EZ Record for Date/Time and Recording Setup, click "next" to proceed.
- ② When the description of EZ Record Setup is displayed, click "next" to proceed.
- ③ Set up the Date/Time settings and click "next" to get to the recording setup.
- ④ Select the recording mode and click "next" to get to the recording setup.
- ⑤ Select one of options and click "next" to finish the setup.

2.4.2. EZ Network (Using an internet connection)

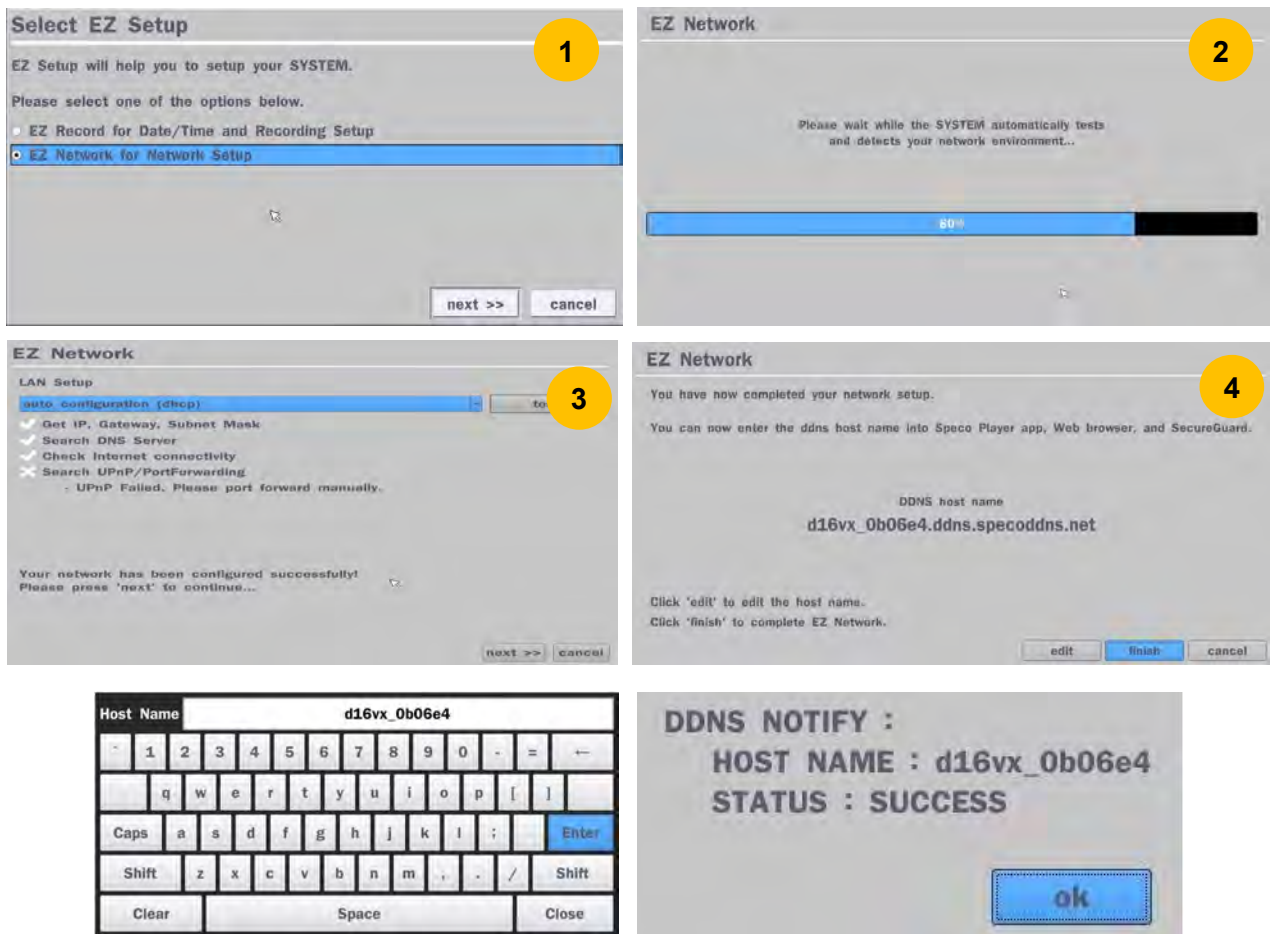


Figure 2.4.2. EZ Network Setup Procedure

- ① DVR automatically checking the network and configuration by scanning in few seconds.
- ② DVR will show the DDNS host name when configuration is finished automatically.
- ③ If you need to edit the host name please select 'edit' button.
- ④ Everything is OK, then select 'finish'. Host name and status pop-up screen will be showed.

3. Name, Function and Connection

3-1. Front Panel

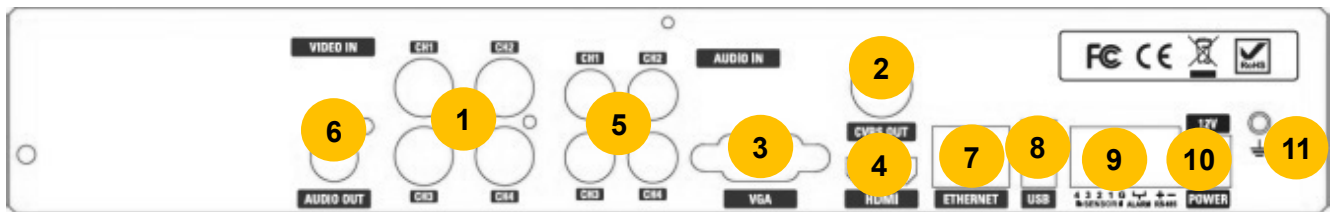


Figure 3.1.1. Front panel


Table 3.1.1. Front LED and Port of DxxVX

| Name | Description |
|-----------------|--|
| POWER | LED light is on when power is applied to the system. |
| HDD | LED light is on when the system is recording video data. |
| USB Port | This USB port for archiving footage into a USB device. (USB 2.0 connector) |


3-2. Connectors



D4VX

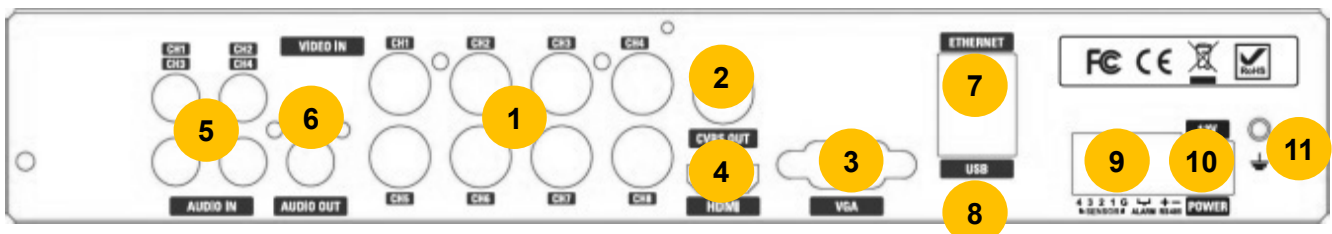

D8VX

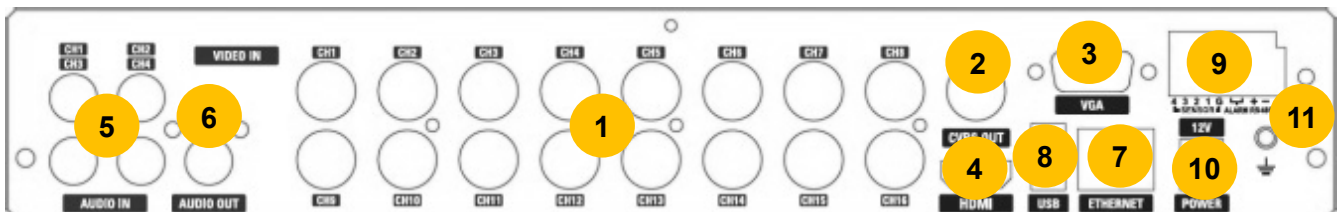


D16VX

Figure 3.2.1. Rear Panel Connections

- ① VIDEO IN: Video input port.
- ② VIDEO OUT: CVBS – Composite Video Output / SPOT – Spot Monitor
- ③ VGA: VGA (Video Graphics Array) output port. Connects to the PC VGA monitor.
- ④ HD VIDEO OUT: HDMI Video Output, Connections to the HDMI monitor
(D4VX & D8VX: Max.1920x1080, D16VX: Max.3840x2160).
- ⑤ AUDIO IN: Four connectors for audio input.
- ⑥ AUDIO OUT: One connector for audio output.
- ⑦ ETHERNET: Network terminal
- ⑧ USB: USB terminal
- ⑨ SENSOR IN, ALARM OUT, RS-485: External sensor terminal, External alarm out terminal & RS-485 for PTZ Camera control
- ⑩ POWER: DC12V input
- ⑪ Ground: Use for ground port

3-3. Remote Control

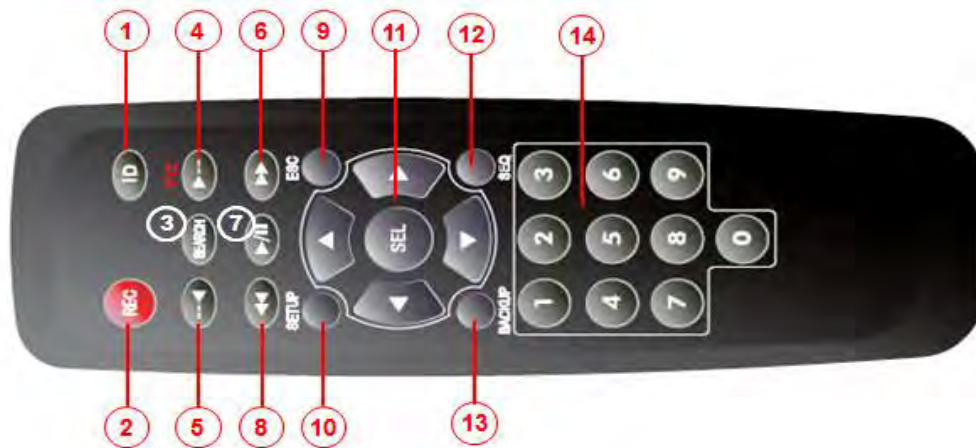

Typical Remote Control

- ① ID: To set the remote control ID.
- ② REC: To start and stop manual recording
- ③ SEARCH: To go to SEARCH menu.
- ④ F/ADV:
 - During playback – To move the playback position 60 seconds forward .
 - During Pause – To move the playback position moves 1 frame forward
- ⑤ F/REW:
 - During playback – To move the playback position 60 seconds back.
 - During Pause – To move the playback postion 1 frame back.
- ⑥ FF: To fast forward the recording.
- ⑦ PLAY/PAUSE: To play or to pause the recording in playback mode
- ⑧ REW: To rewind the recording.
- ⑨ ESC:
 - During setup – To retun to the preivous menu screen.

- During Playback – To exit playback mode
 - System lock – To lock a system when pressing ESC button for 5 seconds.
 - System unlock – To unlock a system when pressing ESC button for 5 seconds.
- ⑩ SETUP: To open the SETUP menu.
- ⑪ Direction buttons: To move menu items or select a channel.
- ⑫ SEQ: To start auto sequencing the screen in full screen mode. (Toggle)
- ⑬ BACKUP: To start a backup operations in live or playback mode
- ⑭ 0~9: To select channel (1,2,3,..) or to enter a DVR ID number or use as number key.

4. Setting up the DVR

The following sections detail the initial setup of the DVR.



Menu screen will close if user input is not received in 5 minutes.

4-1. Setup – Main Live Screen

To enter the setup menu, right click on the mouse and select setup from the submenu or press the setup button on the remote control.


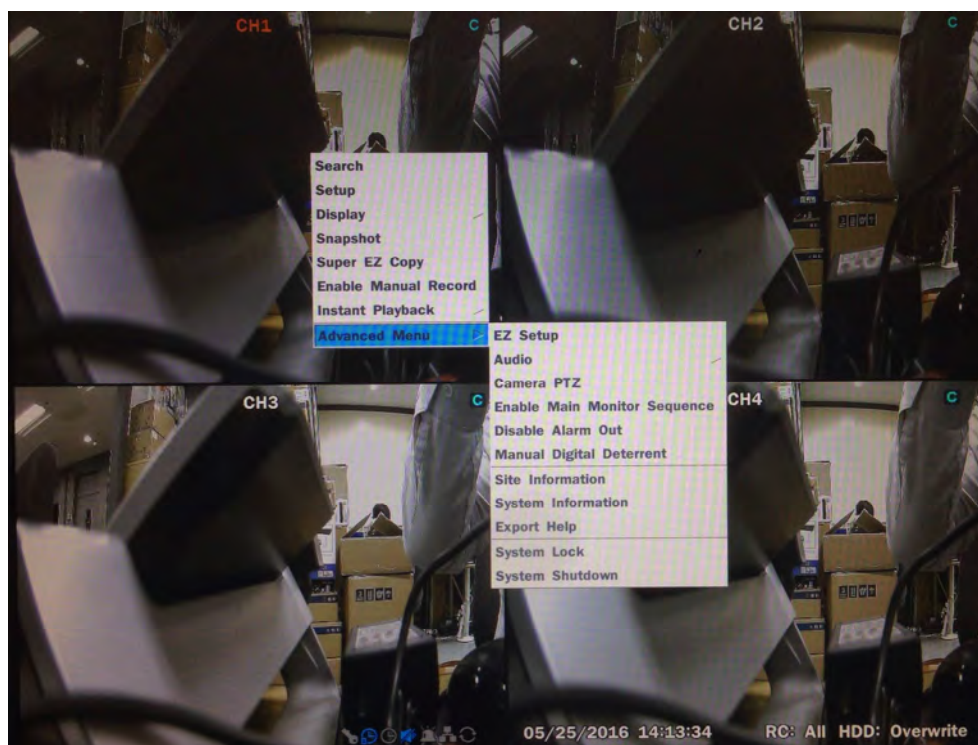


Figure 4.1.1. Live Screen and Quick Operation Window

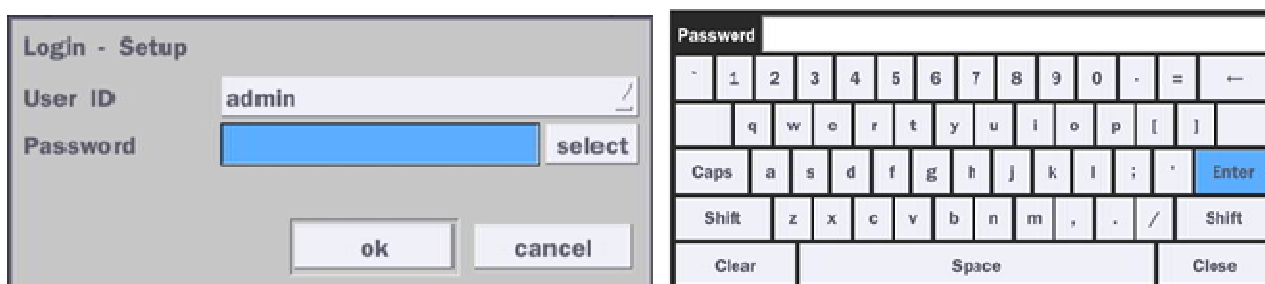

When the DVR prompts the Login window, the default User ID is “admin” and enter the password set on the initial boot-up procedure by a virtual keyboard, or a remote control. It is highly recommended to assign a new password to protect the system. New passwords can be set up in the Security setup menu.

4-2. Setup – System Mode

In the Setup menu, select the System tab. Then, the System menu is displayed as pictured below. Navigate through the menu items using the mouse or the remote control and change the value of the menu.

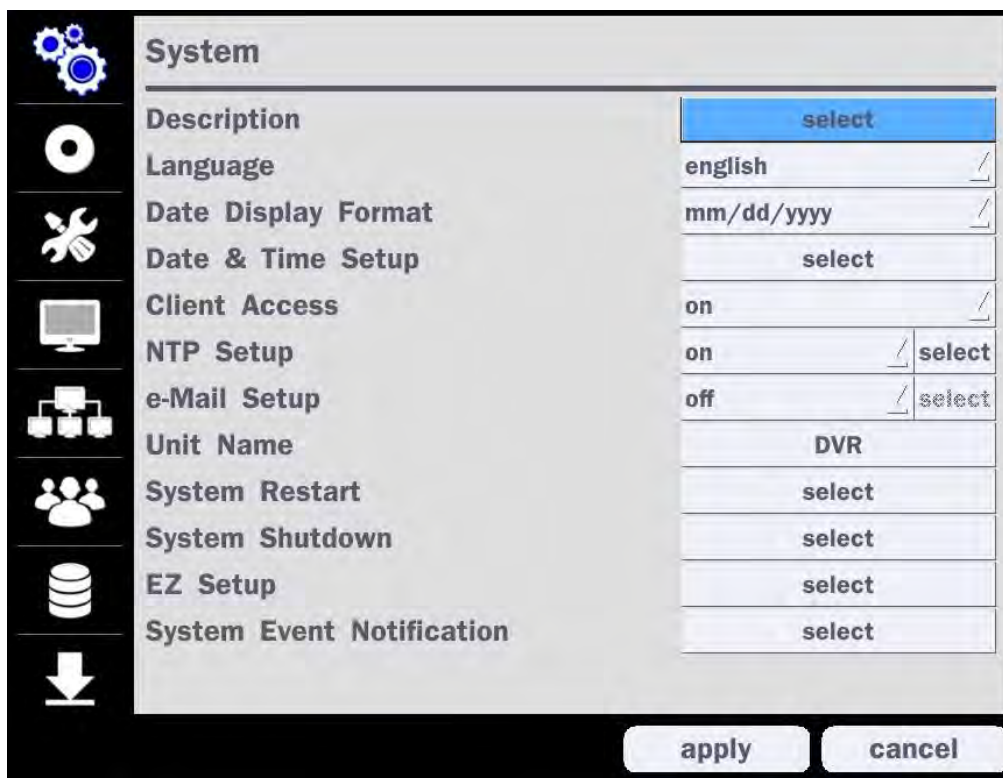



Figure 4.2.1. System Setup Screen

Table 4.2.1. Menu Items in System Setup Screen

| Item | Description |
|------------------------------|---|
| Description | Press “select” to view the system information. (Software Version, Storage Size, IP Address, MAC Address and DDNS Status) |
| |  |
| Language | Select the display language using the mouse or the remote control. Once a language is selected, the display language will change. |
| Date Display Format | Select the date display format using the mouse or the remote control. Options are: MM/DD/YYYY, YYYY/MM/DD, DD/MM/YYYY, YYYY-MM-DD, MM-DD-YYYY, DD-MM-YYYY |
| Date & Time Setup | Select the display date and time using the mouse or the remote control and press “ok” button to set the present date and time. |

Select Daylight Saving using the mouse or the remote control and select the appropriate daylight saving time zone. The options are:

OFF: Daylight saving is turned off.

USA: Applies the USA daylight saving time.

EU: Applies the EU daylight saving time.

- Select the GMT AREA using the mouse or the remote control.

- Set the time difference with the standard time.

OTHERS: If the time zone is neither USA nor EU, set the date and time of the daylight saving period.

- Select BEGIN or END using the remote control and press the “ok” button.



Caution

- Do not set the start time to 23:00 for DLS.

- DLS cannot be applied if the date of BEGIN and END is the same.

Client Access Enable/Disable remote access through the network.

NTP Setup NTP (Network Time Protocol) which synchronizes the time of the computer systems over variable-latency data networks.

Primary SNTP Server: Input the address of the primary NTP time-server.

Secondary SNTP Server: Input the address of the secondary NTP time-server.

Time Zone: NTP synchronizes with GMT (Greenwich Mean Time) regardless of geography, user must set their own time difference.

Connection Mode: Select the NTP time-server connection mode from Time, Interval, and Once.

- **TIME** – Refresh the time at the designated time (e.g. 01:00 AM)
- **INTERVAL** – Every 1 hour ~ 24 hours
- **ONCE** – Synchronizes time only once. NTP will not synchronize unless the Connection Mode is changed.

Connection Period: Set the time (12:00 AM ~ 11:00 PM) when select “Time” on



DVR sends e-Mail Notification when the NTP server time is faster than the system time with bellow message.

“NTP server time is faster than the system time.

In this case, NTP server time is ignored to protect the user data.

User must set the time manually.

System Time: Mon Oct 10 13:46:49 2011

Server Time: Mon Oct 10 13:33:12 2011

DVR ID: DVR

IP ADDRESS: 172.16.2.46”

e-Mail Setup

Server Type: MANUAL, GMAIL, HOTMAIL, AOL or YAHOO

Mail Server: Enter the appropriate mail server information.

Mail Port: Assign Mail Port number.

Secure Option: Select the secure mail server connection method. **(SSL or TLS)**

Mail ID: Enter the appropriate mail server ID.

Password: Enter the appropriate mail server Password.

Mail To: Enter the appropriate email address to enable sending e-mail reports using a virtual keyboard.

Mail From: To set the email address sent to the destination host.

Test: Test the user's email input settings.

Unit Name

Name the DVR (e.g. Factory)

This feature is to identify the name of the DVR under the same network.

System Restart

Make the system restart.

System Shutdown

Make the system shutdown.

EZ Setup

Refer from page 16 to page 17.

Select EZ Setup

EZ Setup will help you to setup your SYSTEM.

Please select one of the options below.

☒ EZ Record for Date/Time and Recording Setup

☐ EZ Network for Network Setup

next >> cancel

System Event Notification

Disk Event Setup

Health Check: select HDD Bad Sectors: 10%

HDD Temperature: 60°C (140°F) HDD Almost Full: 90%

Video Clip Setup

Pre Record: 2 second(s) Post Record: 1 second(s)

Event And Notification

| | Alarm Out | Beep | e-Mail | SMS | select | Cloud | select |
|----------------------|-----------|------|--------|-----|--------|-------|--------|
| Health Check | - | - | yes | / | - | - | - |
| Restart | - | - | yes | / | yes | / | - |
| Shutdown | - | - | yes | / | yes | / | - |
| Panic Record | - | - | yes | / | yes | / | - |
| Alarm-In | no | / | - | / | no | / | no |
| Motion Detection | no | / | - | / | no | / | no |
| Video Loss | no | / | no | / | no | / | - |
| HDD Temperature Over | 1 | / | yes | / | no | / | - |
| HDD Bad Sectors Over | - | / | - | / | yes | / | - |
| HDD Almost Full Over | - | / | - | / | yes | / | - |
| HDD Full | - | / | - | / | yes | / | - |
| HDD Failure | no | / | yes | / | yes | / | - |

ok cancel

Health Check

(Allows the user to set e-Mail Status periodically) : Daily or Weekly or Monthly

Period: daily

first / sun / 0 h

ok cancel

Video Clip Setup: Setup the duration of video clip for Pre Record and Post Record.

Event And Notification – Yes or No

(Allows the user to set Event Notification On or Off)

Health Check / Restart / Shutdown / Panic Record

- Enable Email Notification in the event a problem occurs with the VX.

Alarm-In – Enable Email Notification when the camera detects sensor.

Motion Detection – Enable Email Notification when the camera detects motion.

Video Loss – Enable Email, Beep and Alarm output Notification when the camera signal is lost.

HDD Temperature Over – Enable Email, Beep and Alarm output Notification when the HDD temperature.

HDD Bad Sectors Over – Enable Email Notification when the HDD has bad Sectors.

HDD Almost Full Over – Enable Email Notification when the HDD is almost full

HDD Full – Enable Email Notification when the HDD is full

HDD Failure – Enable Email, Beep and Alarm output Notification when the HDD fails.


4-2-1. How to use 'Cloud'

- **Notice : User have to have a 'Google Drive' Account**
- **Save video clip on the Google Drive and playback though Mobile device.**

1) How to set (Setup – System – System Event Notification – **Cloud**)


1-1) Click  icon

1-2) Enter Google Drive Account

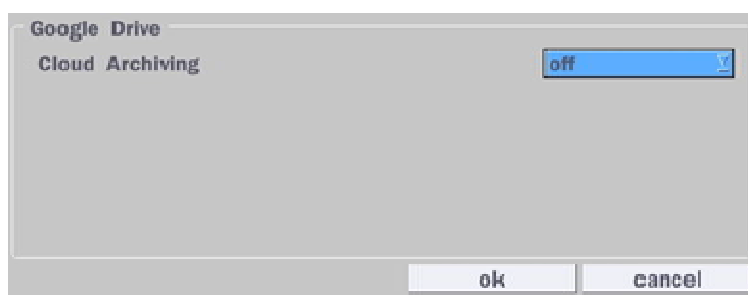

1-3) Video clip will be save at Google Drive when 'Alarm-In' and 'Motion' triggered.

1-4) Set Video clip duration

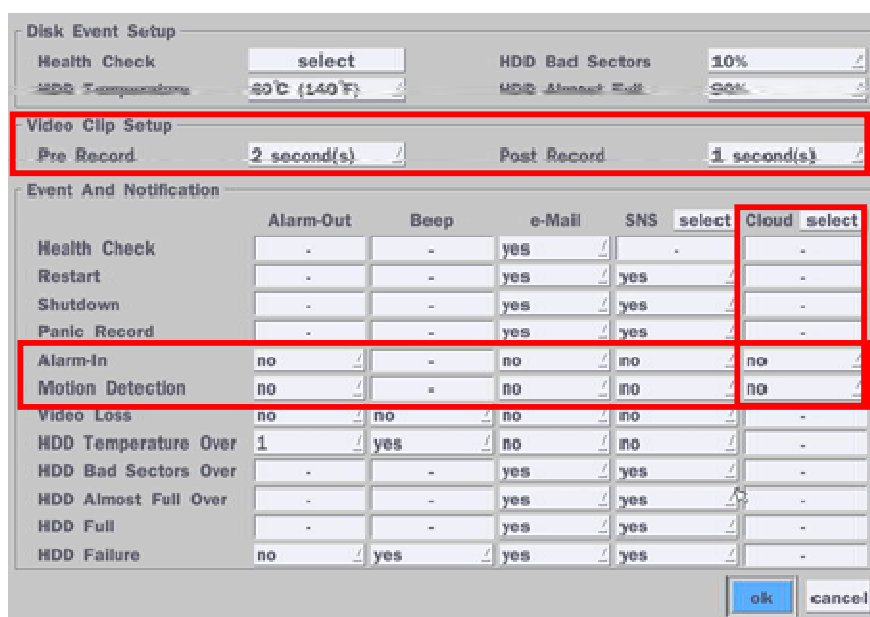

2) How to playback

2-1) Playback through PC

: Log in Google Drive and select a file and playback

2-2) Playback through Mobile device

: Use 'SpecoPlayer'

Notice – Support iOS from '1.5.8_150316', Android from '3.2.2.7_150316'

4-3. Setup – Record Mode


In the Setup menu, select the Record tab. Then, the Record menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.



Figure 4.3.1. Record Setup Screen

Table 4.3.1. Menu Items in Record Setup Screen

| Menu Item | Description | | | | | | |
|-----------|---|------------|------------|------------|------------|-------------|-----------|
| Site | Select a channel for applying the following settings using a mouse or a remote control. Select the “select” button beside of channel button to change the values of all channels. | | | | | | |
| | Resolution | Frame Rate | Quality | Recording | Pre Record | Post Record | Audio |
| All | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | off |
| 1 | 1920 x 1080 | 15 fps | level 5(H) | disable | 1 min(s) | 10 sec(s) | off |
| 2 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | off |
| 3 | 1920 x 1080 | 15 fps | level 5(H) | motion | 1 min(s) | 10 sec(s) | off |
| 4 | 1920 x 1080 | 15 fps | level 5(H) | sensor | 1 min(s) | 10 sec(s) | off |
| 5 | 1920 x 1080 | 15 fps | level 5(H) | schedule | 1 min(s) | 10 sec(s) | off |
| 6 | 1920 x 1080 | 15 fps | level 5(H) | c + m | 1 min(s) | 10 sec(s) | — |
| 7 | 1920 x 1080 | 15 fps | level 5(H) | c + s | 1 min(s) | 10 sec(s) | — |
| 8 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 9 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 10 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 11 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 12 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 13 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 14 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 15 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| 16 | 1920 x 1080 | 15 fps | level 5(H) | continuous | 1 min(s) | 10 sec(s) | — |
| | | | | | | | ok cancel |

| | |
|-------------------------|---|
| Resolution | Select 1920x1080, 1920x540, 1280x720 and 640x360 using a mouse or a remote control. |
| Frame Rate | Set the frame rate for the specified channel. The sum of the frame rate values per channel cannot exceed the maximum frame rates for a specific recording resolution. |
| Quality | Select the recording quality for the selected channel. Options are; Level 1 (Low), Level 2, Level 3, Level 4, and Level 5 (High) |
| Recording Mode | <p>Assign the recording mode for the selected channel. Options are: Continuous, Motion, Sensor, Schedule, Disable and Smart Recording (c + m : continuous & motion, c + s : continuous & sensor)</p> <p>When Motion Recording is selected, Continuous + Motion recording option can be used.</p>  |
| Sensor Recording | Select the sensor setting for the selected channel. |
| Pre Record | Enable/disable pre-event recording. Pre-event recording time is up to 20 minutes. |
| Post Record | Set the post event recording time duration for the specified channel. (10~60 seconds) |
| Audio | Enable/disable audio recording for the specified channel. |
| Schedule | Set the recording schedule. |

4-3-1. Recording Schedules

To setup a recording schedule, select Schedule in the Record menu. Navigate through the menu items or change the settings using the mouse or the remote control. Select the Channel; select one of the recording settings: None, Continuous or Motion, then highlight the area for the selected setting. To copy a schedule to a different channel, select the channel from the Copy Schedule menu, then click the Copy button.

Channel 1

| | none | | | continuous | | | | motion | | | | sensor | | | | clear | | | | | | | | |
|-----|------|---|---|------------|---|---|---|--------|---|---|----|--------|----|----|----|-------|----|----|----|----|----|----|----|----|
| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
| sun | | | | | | | | | | | | | | | | | | | | | | | | |
| mon | | | | | | | | | | | | | | | | | | | | | | | | |
| tue | | | | | | | | | | | | | | | | | | | | | | | | |
| wed | | | | | | | | | | | | | | | | | | | | | | | | |
| thu | | | | | | | | | | | | | | | | | | | | | | | | |
| fri | | | | | | | | | | | | | | | | | | | | | | | | |
| sat | | | | | | | | | | | | | | | | | | | | | | | | |

Copy Schedule

☐ ch 1 ☐ ch 2 ☐ ch 3 ☐ ch 4 ☐ all

☐ ch 5 ☐ ch 6 ☐ ch 7 ☐ ch 8

Figure 4.3.2. Schedule Recording Setup Screen

- **none**: Disable recording
- **continuous**: Continuous recording (Highlighted in Green)
- **motion**: Motion recording (Highlighted in Yellow)
- **sensor**: Sensor recording (Highlighted in Red)

4-4. Setup – Device Mode

In the Setup menu, select the Device tab. Then, the device menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.

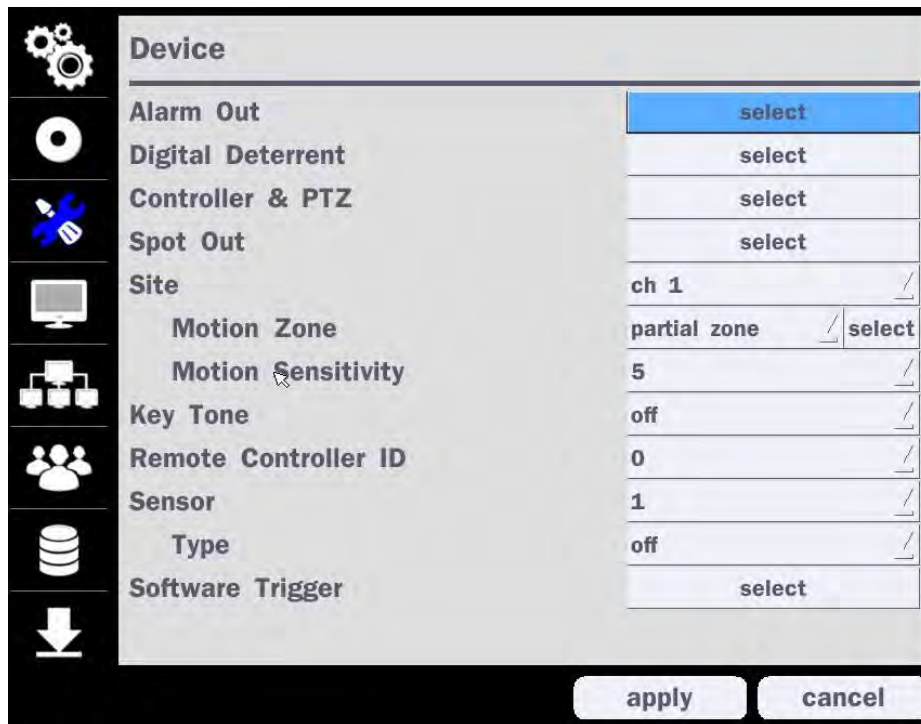
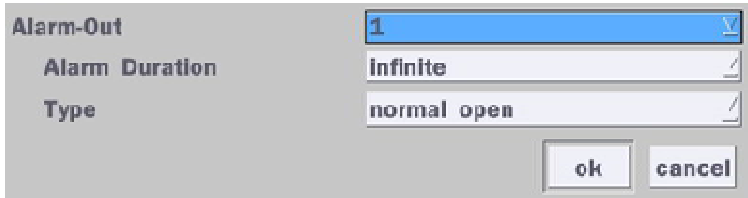


Figure 4.4.1. Device Setup Screen

Table 4.4.1. Menu Items in Device Setup Screen

| Item | Description |
|--------------------------------------|---|
| Alarm Out/ Alarm Duration | Set the sensor, motion, and video loss for triggering alarm relay HDD Error and Video Loss can trigger beeping  |
| Digital Deterrent | Setup schedule and audio recordings for Digital Deterrent. |
| Controller & PTZ | Set the PTZ baud rate, protocol, and ID. |
| Spot-Out | CVBS Out is can be used as Composite Video Output or Spot-Out depending on the Sub Monitor Out of Display setup menu. (Spot-On Event on/off, Spot Event Dwell Time, Sequence On/off, Sequence Dwell Time, Spot Channel) *The last image will keep on the screen until the next event occurred. |
| Site | Select specified channel for motion zone setup. |
| Motion Zone | Select either Full Zone or Partial Zone for motion detection. Press the right button of mouse to exit from Motion Zone grid screen. |
| Motion Sensitivity | Set the motion sensitivity for the selected channel. Control the motion sensitivity from 1 to 9. (1 – Lowest sensitivity, 9 – Highest sensitivity) |
| Key Tone | Enable/disable key tone. |

| | |
|-----------------------------|--|
| Remote Controller ID | Set the remote control ID. 1. Select ID. 2. Input the remote control ID number. (0 is all) 3. An icon will indicate on the Live Screen if the remote control ID is synchronized. The options are from 0 to 99 |
| Sensor | Select the type of each sensor. Option is Off, Normal Open or Normal Close. |
| Software Trigger | Remote trigger channels. User can set the channels that want to make a sensor recording through remotely with Software record mode. |

4-4-1. Digital Deterrent

Trigger audio message via motion detection or sensor.



Figure 4.4.2. Digital Deterrent setup screen

Table 4.4.2. Item for Digital Deterrent Setup Screen

| Item | Description |
|------------------------|---|
| Import From USB | Import up to 8 sound files from USB. |
| Export To USB | Export the sound file to USB |
| Record | Select a channel and set up the date and the duration. And, select the sound file to play. |

Channel

ch 1

From

5 / 16 / 2016 0 : 58 : 22

To

05/16/2016 00:58:32

Duration

10 second(s)

File Name

sound_1

start

close

Schedule

Schedule the sound file considering the expected situation.

Channel 1

none

default

sound_1

sound_2

sound_3

sound_4

sound_5

sound_6

sound_7

sound_8

clear

| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
|-----|---|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| sun | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| mon | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| tue | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| wed | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| thu | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| fri | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |
| sat | D | D | 1 | 1 | 1 | 2 | 2 | 2 | 3 | 3 | 3 | 4 | 4 | 4 | 5 | 5 | 6 | 6 | 6 | 7 | 7 | 8 | 8 | 8 |

Copy Schedule

☐ ch 1

☐ ch 2

☐ ch 3

☐ ch 4

☐ all

☐ ch 5

☐ ch 6

☐ ch 7

☐ ch 8

copy

ok

cancel

4-4-2. Keyboard Controller & PTZ Setup

To control the PTZ functions of the camera, connect the PTZ controller to the RS-485 port on the back of the chassis with CAT5 (or equivalent) cable.

- ① Connect the RS-485 cables of PTZ camera to the RS-485 port on the rear panel.

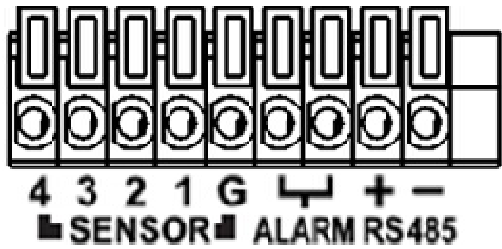


Figure 4.4.3. Device Mode Setup Screen

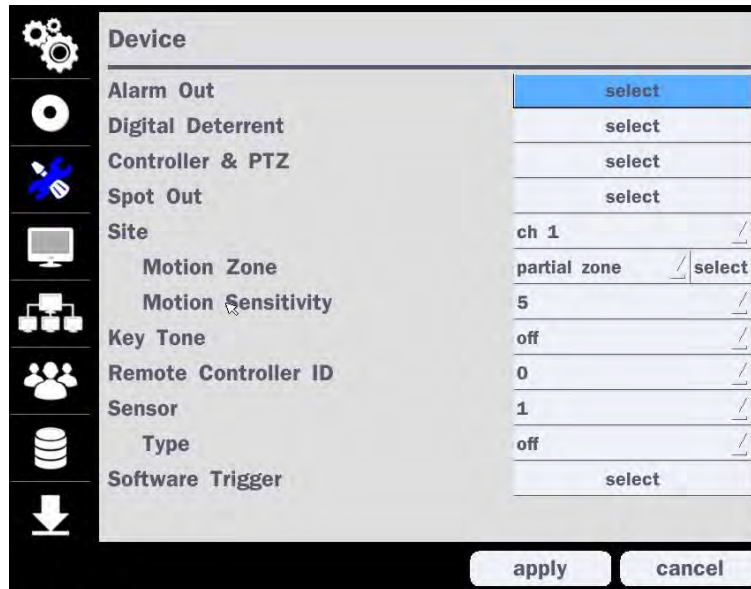


Figure 4.4.4. Device Mode Setup Screen

- ② Open the PTZ sub menu by selecting the submenu button.

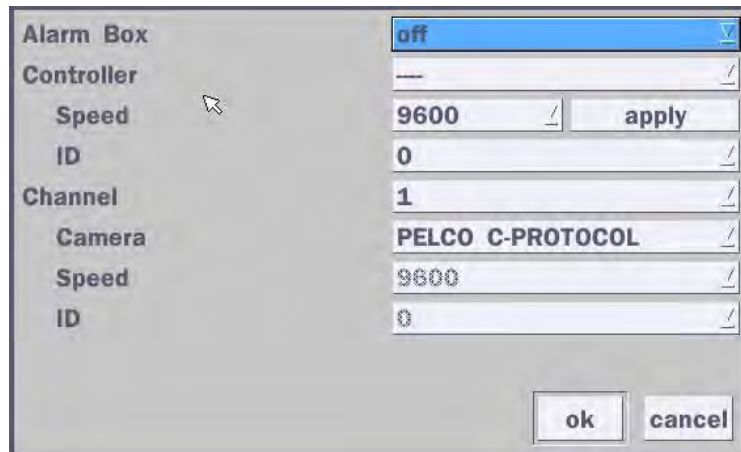


Figure 4.4.5. PTZ Control Setup Screen

Note: Connect PTZ cameras that support RS-485 directly to the RS-485 port. If the camera is controlled through an RS-232C interface, use an RS-232C to RS-485 to RS-232C signal converter.

Use the PTZ setup screen to select the following options for the camera PTZ controller:

- **Channel:** Channel connected to a PTZ device
- **Camera:** Protocol Type
- **Speed:** 19200, 14400, 9600, 4800, 2400 (Baud rate)
- **ID:** 0-63

Controller (Keyboard Controller): If a PTZ controller is used, select a controller protocol from Controller menu. Set Speed (Baud Rate) and ID number.

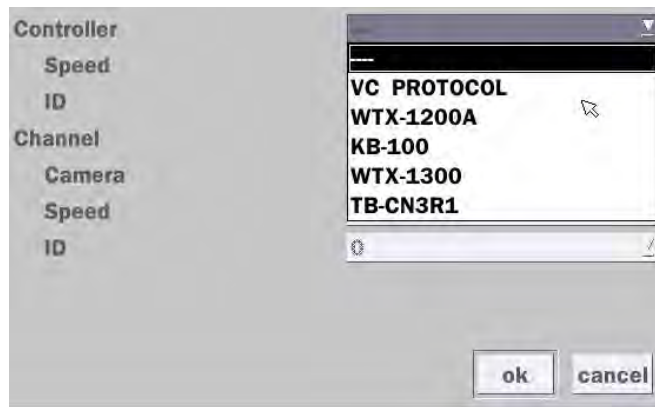



Figure 4.4.6. Controller Selection Screen

❖ Notice : DxxVX series can use UTC feature.

: UTC(Up The Coax) allows for control of the camera's OSD menu via the coax cable.

User does not need extra connection via RS-485 to control the camera's OSD menu

- How to set (Setup > Device > PTZ & Controller > PELCO C-PROTOCOL)

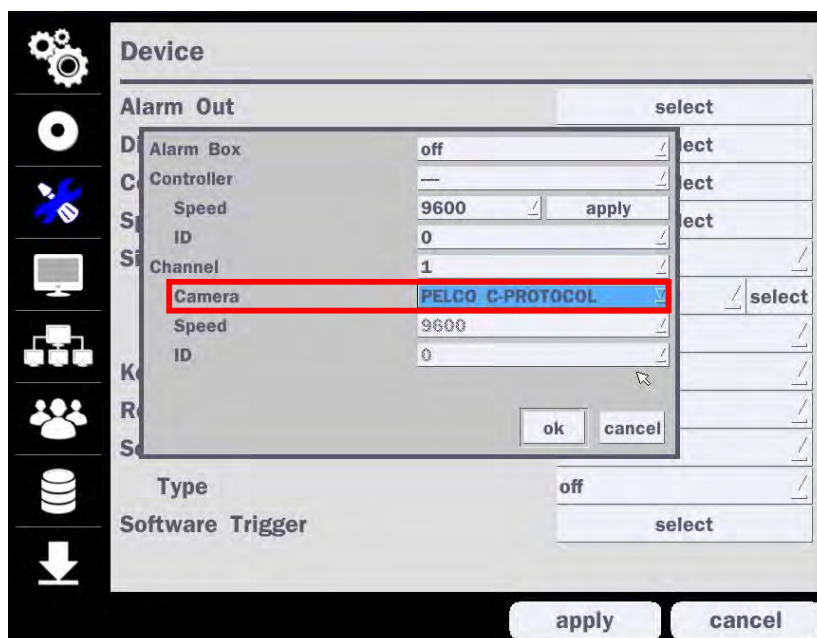

4-4-3. Spot Out

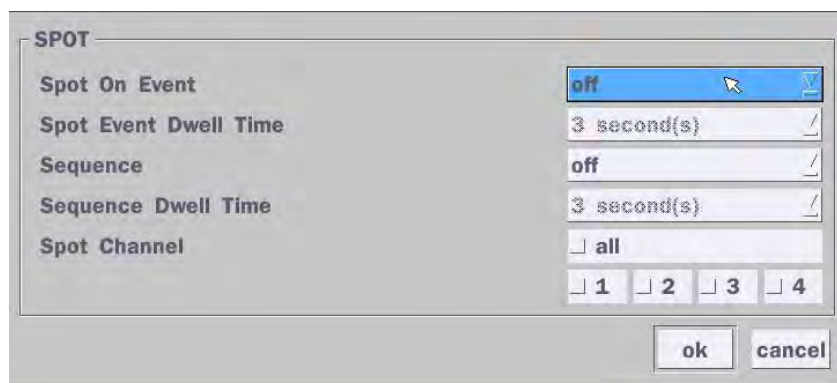


Figure 4.4.7. Spot-Out Setup Screen

Table 4.4.3. Menu Item in Spot-Out Setup Screen

| Item | Description |
|------------------------------|--|
| Spot Out | Only 1 Spot Out is available to use. |
| Spot Type | Spot 1 supports only Full type. (1 channel only) |
| Spot On Event | Enable/disable channel change if an event occurs on a channel. |
| Spot Event Dwell Time | Set the dwell time for the display of the event activated channel. (3-10 sec) |
| Sequence | Enable/disable sequential display of spot channel in full screen. If select "on", the selected channel will be displayed on the monitor periodically. |
| Sequence Dwell Time | Set the dwell time for the spot channel display.(3-10 sec) |
| Spot Channel | Select a channel for spot monitoring using the mouse or the remote control and press "ok" button. |

4-4-4. Motion Zone Setup

Select Motion Zone using the mouse or the remote control and select either Partial Zone or Full Zone using the mouse control. The default value is Full Zone.

If Full Zone is selected, the motion zone grid screen is not displayed. Only set the level of sensitivity for Motion Sensitivity.

Full Zone: The motion sensor is active on the whole screen.

Partial Zone: The motion sensor is active in the set detection frame.

Select the motion detection position using the mouse or the remote control. Then left click on the mouse or left click and drag the mouse pointer to select or deselect the area. Highlighted area indicates the partial motion detection zone. Press the "ESC" button or right click on the mouse to return to the previous menu.

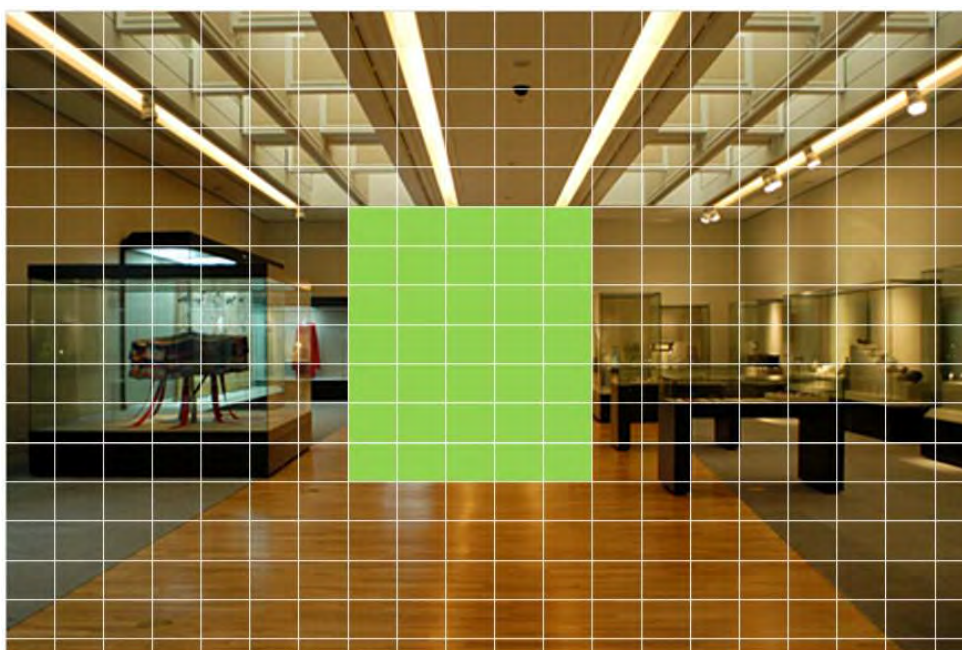


Figure 4.4.8. Motion Zone Grid Screen

4-5. Setup – Display Mode

In the Setup menu, select the Display tab. Then, the Display menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control. To return to the previous setup menu screen, press the “ESC” button on front panel or select the other menu tab with mouse.

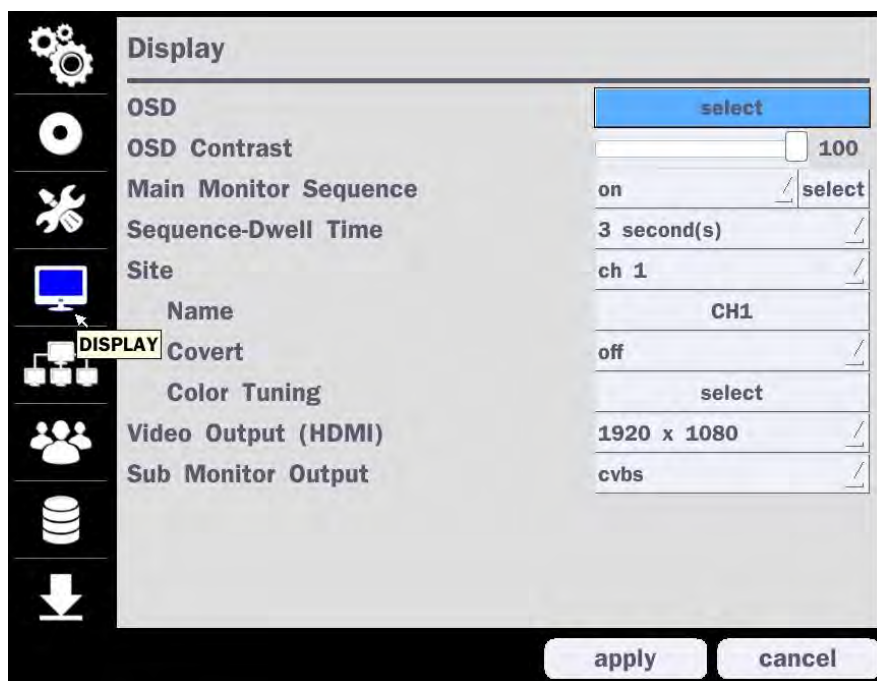
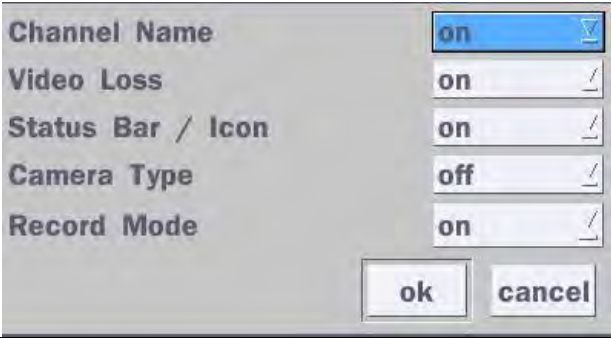


Figure 4.5.1. Display Setup Screen

Table 4.5.1. Menu Items in Display Setup Screen

| Item | Description |
|-----------------------|---|
| OSD | Enable/Disable displaying Channel Name/ Video Loss/ Status Bar & Icon/ Camera Type and Record Mode |
| |  |
| OSD Contrast | Set the visibility level of the On Screen Display (OSD) (50~100) |
| Main Monitor Sequence | Enable/disable sequential display of video in full screen mode. |
| Sequence-Dwell Time | Set the dwell time of each, Single channel display time in sequence mode (3~60 seconds) |
| Site | Select a channel to apply the name and covert settings change using the mouse or the remote control. Select a channel to apply the following settings using the mouse. |

| | |
|----------------------------|--|
| Name | Set the channel name. Press the mouse button and set the channel name on the virtual keyboard. Press “Enter” key when finished its naming. The name can be made up to 36 characters. |
| Covert | Enable/disable display of the specified video channel in live display. |
| Color Tuning | Control the Brightness, Contrast, Hue and Saturation. |
| Video Output (HDMI) | Select video output resolution (D8VX: Max. 1920 X 1080, D16VX: Max. 3840 X 2160) |
| Sub Monitor Output | Select Sub Monitor Video out through BNC port. CVBS or Spot |

4-6. Setup – Network Mode

Select the Network tab. Then, the network menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.

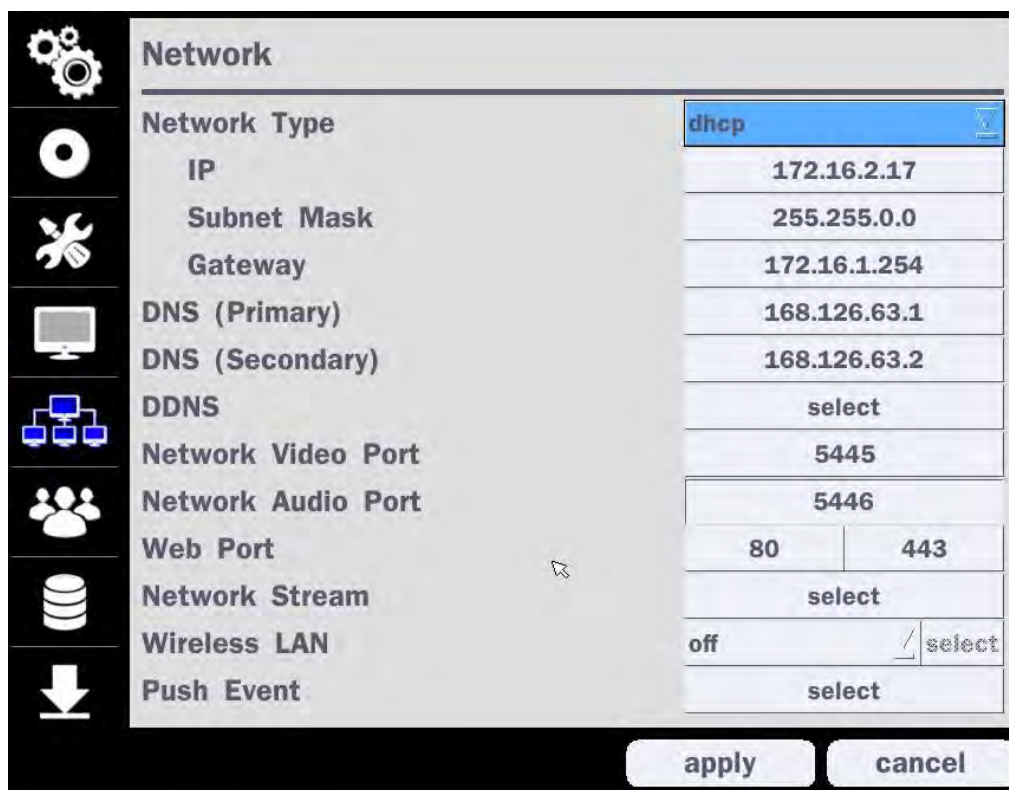


Figure 4.6.1. Network Setup Screen

Table 4.6.1. Menu Items in Network Setup Screen

| Item | Description |
|----------------------|--|
| Network Type | DHCP: DVR will automatically retrieve an IP address. Static: Network information must be manually configured. |
| IP Address | Enter IP address that is assigned for the DVR |
| Subnet Mask | Enter Subnet Mask that is assigned for the DVR |
| Gateway | Enter Gateway that is assigned for the DVR. |
| DNS (Primary) | Enter Primary DNS address that is assigned for the DVR |

| | |
|---------------------------|--|
| DNS (Secondary) | Enter Secondary DNS address that is assigned for the DVR |
| DDNS | Dynamic Domain Name System (DDNS) allows a DNS name to be constantly synchronized with a dynamic IP address. In other words, it allows using a dynamic IP address to be associated with a static domain name so others can connect to it by the static name. Enable/disable using domain name address through DDNS server. |
| Network Video Port | Enter the port number, (Default: 5445) |
| Network Audio Port | Display the network audio port (Network Port + 1). |
| Web Port | Enter the port number for connection using web. (Default: 80) |
| Network Stream | Set the value for network streaming. |
| Wireless LAN | <ol style="list-style-type: none"> 1. Connect USB WIFI Dongle to USB connector on DVR. 2. Load the application on your smart phone or PC and enter the WIFI IP Address. 3. Find the WIFI SSID and enter the password. (Image is below.) 4. Then, the remote viewing and configuration can be used. |

* There is a distance limitation for the Wireless LAN.

| | |
|-------------------|--|
| Push Event | Set Phone ID and check Notification function to receive an event message from DVR. |
|-------------------|--|

| | Phone ID | Notification |
|---|--------------|-------------------------------------|
| 1 | 000000000000 | <input checked="" type="checkbox"/> |
| 2 | 00000000 | <input type="checkbox"/> |
| 3 | 00000000 | <input type="checkbox"/> |
| 4 | 00000000 | <input type="checkbox"/> |

4-6-1. Network Types

4-6-1-1. DHCP

An IP address is automatically assigned by the DHCP server, which automatically assigns the IP address and other parameters to new devices.

4-6-1-2. Static

IP address, Subnet Mask, Gateway, and DNS are manually assigned by the user.

- IP Address: The fixed IP address of the DVR unit.
- Subnet Mask: The subnet mask for the LAN.
- Gateway: The IP address of the Gateway.
- DNS (Primary) The primary address of Domain Name Server

- DNS (Secondary): The secondary address of Domain Name Server



NOTE

Unless DNS is properly set, the DDNS and the e-mail features will not work.

4-6-2. DDNS

DDNS (Dynamic Domain Name System) allows a DNS name to be constantly synchronized with a dynamic IP address. It allows using a dynamic IP address to be associated with a static domain name.

Once the setting is completed, the DDNS address will be:

<http://hostname.ddns.specoddns.net>

For example, if you enter the host name as “D8VX”, then the address will be:

<http://d8VX.ddns.specoddns.net>

Select Network > DDNS. The menu displays as below.

Figure 4.6.2. Network Setup Screen – DDNS

Table 4.6.2. DDNS

| Item | Description |
|----------------------|---|
| Enable DDNS | Enable/disable the Dynamic Domain Name Service. |
| Host Name | This item allows the user to setup a domain name manually, using virtual keyboard displays as shown. |
| Subnet/Update | When manual host name input is done, move the cursor to this item and select ON to submit the settings. |
| ezDDNS | Enable/disable ezDDNS to register the host name automatically. |

4-6-3. Network Port and Web Port

Connecting DVR/DVRs through an IP sharing device, each DVR must be assigned a unique TCP port number for access from outside the LAN. This port number is displayed on Network > Network Port Setup Menu.



NOTE

If you access the DVR only within the same LAN, the TCP port number does not need to be changed.

Network access beyond a router

To access DVR beyond a router (firewall), you must open the proper TCP ports for live/playback streaming,

for commands, for remote backup, and for audio streaming. If these ports are not opened properly, you can't access the DVR beyond a router.



- **For live/playback streaming, for commands, for remote backup:** Open the port number on Network > Network Video Port menu. The default port number is 5445.
- **For bi-directional audio:** Open the port number on Network Audio Port. The default port number is [Network Video Port number + 1].
- **For web-viewer downloading and remote firmware upgrading:** Open the port number on Network > Web Port menu. The default port number is 80.

4-6-4. Network Stream

User can set the Resolution, Frame Rate, and the Quality for the network stream.

- D4VX: Up to 60 fps @ 640x360, 320x 240 and 320x180 for 4 channels.
- D8VX: Up to 120 fps @ 640x360, 320x 240 and 320x180 for 8 channels.
- D16VX: Up to 240 fps @ 640x360, 320x240 and 320x180 for 16 channels.

<Note> Individual Channels can be set with different Resolution, Frame Rate, and Quality.

| | Net Resolution | Frame Rate | Net Quality |
|-----|----------------|------------|-------------|
| All | 640x360 | 15 fps | level 5(H) |
| 1 | 640x360 | 15 fps | level 5(H) |
| 2 | 640x360 | | level 5(H) |
| 3 | 640x360 | | level 5(H) |
| 4 | 640x360 | | level 5(H) |
| 5 | 640x360 | | level 5(H) |
| 6 | 640x360 | | level 5(H) |
| 7 | 640x360 | | level 5(H) |
| 8 | 640x360 | | level 5(H) |
| 9 | 640x360 | | level 5(H) |
| 10 | 640x360 | | level 5(H) |
| 11 | 640x360 | | level 5(H) |
| 12 | 640x360 | | level 5(H) |
| 13 | 640x360 | | level 5(H) |
| 14 | 640x360 | | level 5(H) |
| 15 | 640x360 | | level 5(H) |
| 16 | 640x360 | | level 5(H) |

Figure 4.6.4. Network Setup Screen – Network Stream

4-7. Setup – User Management Mode

In the Setup menu, select the User Management tab. Then, the User Management menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.



Figure 4.7.1. User Management Setup Screen

Table 4.7.1. Menu Items in User Management Setup Screen

| Item | Description |
|------------------------|--|
| Authority Setup | Only the Admin will have access to the menu. Password Check: Select the Checkbox to enable the functions or leave the Checkbox blank to disable the functions. <ul style="list-style-type: none">• Setup: Enable/Disable of access to Setup• PB: Enable/Disable of access to Playback• PTZ: Enable/Disable of access to PTZ Control• Rec Off: Enable/Disable of manual Record• Network: Enable/Disable of access to Network Selected Checkbox: The DVR will ask for a password when the given function is selected for all users. Blank Checkbox: The DVR will not ask for a password when the given function is selected for all users. |

| | Password | Setup | FB | PTZ | Rec. Off | Network |
|----------------|----------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Password Check | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| ADMIN | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER1 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER2 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER3 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER4 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER5 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER6 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER7 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER8 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER9 | 1111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

ADMIN, USER1, USER2, USER3, USER4, USER5, USER6, USER7, USER8, USER9:

Selected Checkbox: The user can access the function.

Blank Checkbox: The user can not access the function.

User Name Setup

Change the name of USER1, USER2, USER3, USER4, USER5, USER6, USER7, USER8, and USER9. Click “select” and change the user name on the virtual keyboard.

Password Setup

Options are ADMIN, USER1, USER2, USER3, USER4, USER5, USER6, USER7, USER8, and USER9:

Select User Password using the mouse or the remote control. Select “User ID” and enter the current password. And enter a new password and enter the same password again to confirm and select “ok”. Then the message “Password Changed” is displayed.

The factory default password of USER1 ~ 9 is **1111**.

It is highly recommended to assign a new password to protect the system.




Playback Authority

Set authority level of playback on each user.

Checked box: authorized to playback. **Blank check box:** no authority.

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| ADMIN | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER3 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER4 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER5 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER6 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER7 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER8 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER9 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |


| | |
|------------------------------------|--|
| Remote Playback Timeout | Disconnect the remote playback after the specific time (Disable, 5min, 10min, 15min, 30min, 60min). |
| Import Certificate From USB | Upload https certificate through USB |
| Advanced Setup | Send IP address and ports information to the control center |
| Debug Port | Open or Close the ports for remote checking |
| Network Connection Status | Shows the current network connection status (User, IP Address, Date/Time). And do disconnect the user's network connection to click 'disconnect' button. |

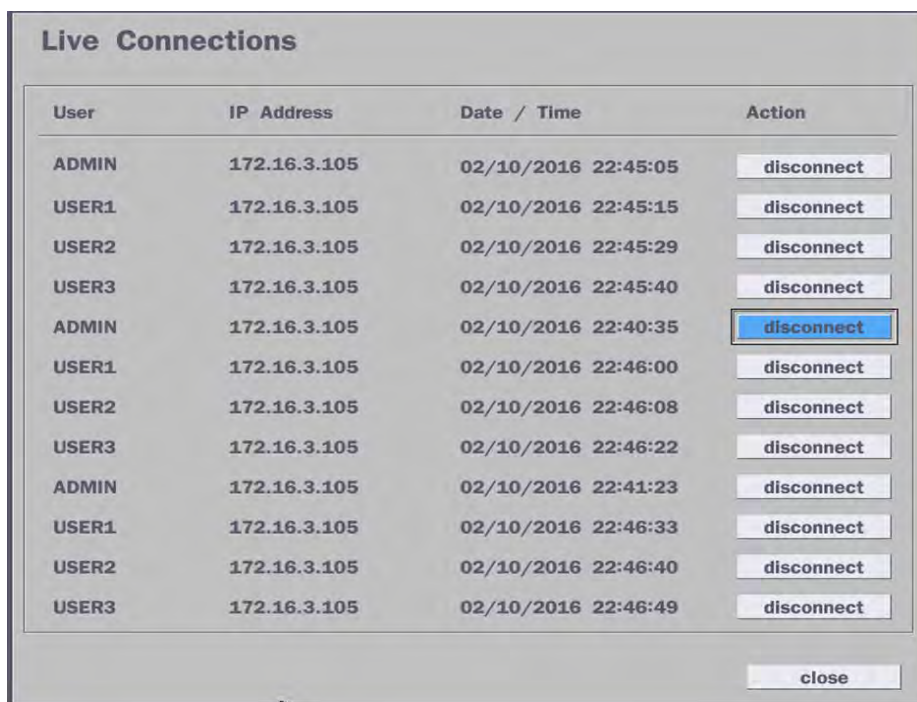

| User | IP Address | Date / Time | Action |
|-------|--------------|---------------------|------------|
| ADMIN | 172.16.3.105 | 02/10/2016 22:45:05 | disconnect |
| USER1 | 172.16.3.105 | 02/10/2016 22:45:15 | disconnect |
| USER2 | 172.16.3.105 | 02/10/2016 22:45:29 | disconnect |
| USER3 | 172.16.3.105 | 02/10/2016 22:45:40 | disconnect |
| ADMIN | 172.16.3.105 | 02/10/2016 22:40:35 | disconnect |
| USER1 | 172.16.3.105 | 02/10/2016 22:46:00 | disconnect |
| USER2 | 172.16.3.105 | 02/10/2016 22:46:08 | disconnect |
| USER3 | 172.16.3.105 | 02/10/2016 22:46:22 | disconnect |
| ADMIN | 172.16.3.105 | 02/10/2016 22:41:23 | disconnect |
| USER1 | 172.16.3.105 | 02/10/2016 22:46:33 | disconnect |
| USER2 | 172.16.3.105 | 02/10/2016 22:46:40 | disconnect |
| USER3 | 172.16.3.105 | 02/10/2016 22:46:49 | disconnect |

close

Network User Limits User can select network access user number (4 users of 12 users).
DVR system will be restarted if user change this network user number.

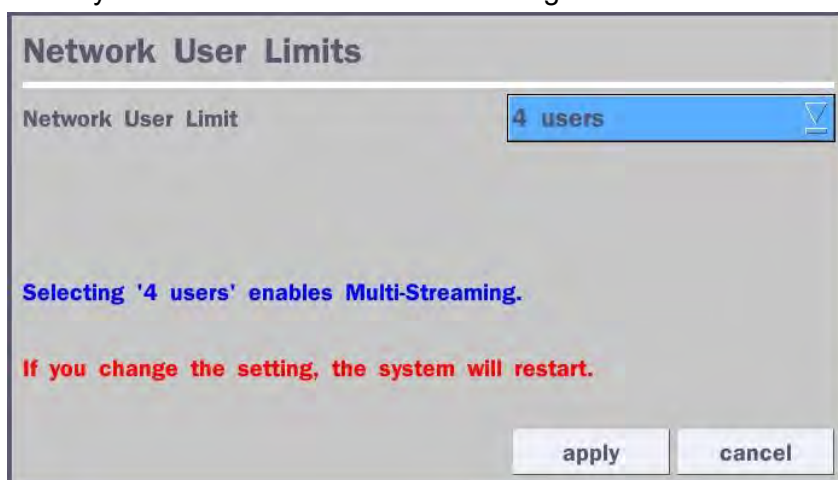

Network User Limits

Network User Limit 4 users

Selecting '4 users' enables Multi-Streaming.

If you change the setting, the system will restart.

apply cancel

4-8. Setup – Storage Mode


In the Setup menu, select the Storage tab. Then, the Storage menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.



Figure 4.8.1. Storage Setup Screen

Table 4.8.1. Menu Items in Storage Setup Screen

| Item | Description |
|-------------|--|
| Overwrite | When enabled, the DVR will continue recording and overwrite the oldest existing recorded data once the hard drive is full. When disabled, recording will stop once the hard drive is full. |
| Disk Format | User will have an option for formatting the Hard Drive. After formatting HDD, the DVR will reboot. Caution: It is recommended to archive any data that you may need in the future before formatting the hard drive. |

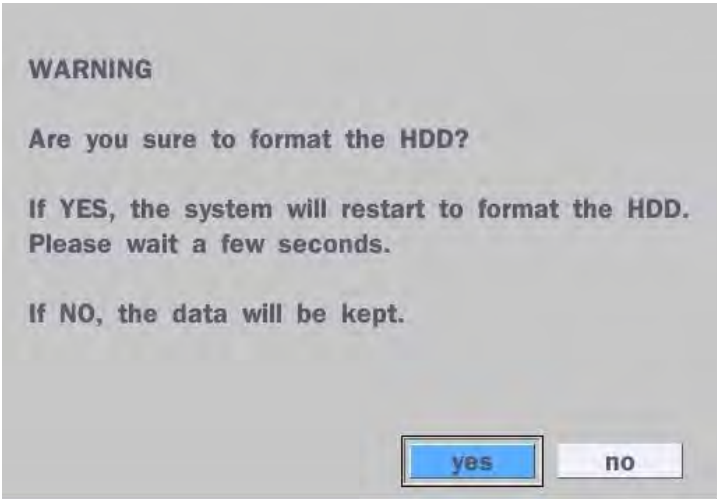

Disk Info

Hard drive information.

Displays the following information:

| HDD Size : 1740 GB (Free : 722 GB) HDD Last Time : 05/25/2016 17:22:00 | | | |
|---|----------------------|----------------|-----------------------------|
| | Model Name | Temperature | Health (Good/Normal/Bad) |
| HDD 1 | WDC WD20PURX-64P6ZY0 | 39 °C (102 °F) | Good |
| HDD 2 | | | |

Recording Limit

Enable recording limit: The amount of data recorded in HDD will be limited to the most recent number of days as set by “Recording Limit Days”.

Disable recording limit: When Overwrite is on, DVR will continue to record when HDD is full and overwrite older data. When Overwrite is off, DVR will stop recording when the HDD is full.

Recording Limit

Set the recording limit days. (1- 90 days)

Days

If the Recording Limit Days are set to 1, the data will be overwritten after 24 hours.

4-9. Setup - Config Mode

In the Setup menu, select the Config tab. Then, the configuration menu is displayed as pictured below. Navigate through the menu items or change the settings using the mouse or the remote control.




Figure 4.9.1. Configuration Setup Screen

Table 4.9.1. Configuration Setup

| Item | Description |
|-----------------------------|--|
| Export To USB | User can save the current configuration (Setting values) of the DVR to the USB flash drive. Plug in the USB flash on the front panel and press the button to start the saving process. |
| Import From USB | User can upload the configuration of the DVR to another DVR using the USB Flash drive. Plug in the USB flash drive on the front panel and press the button to start the loading process. |
| Load Default | Press the button to reset the system to the default settings. The following settings such as Language, DVR ID, Security User Authentication, Security User P/W, Date Format, DLS settings, Network settings, HDD overwrite, Limit recording, HDD serial number, and HDD ERROR time will not be included. |
| Load Factory Default | Press the button to reset the system to the factory default settings. |
| Software Upgrade | Upgrade software to the latest version. After connecting USB flash drive to USB port on the DVR, click SEARCH. It will automatically find the upgrade file. |

4-9-1. Software Upgrade

1. In the USB flash drive root directory, create a new folder named “upgrade”
2. Create sub-folder for each model under “upgrade” folder and copy each software file to their folder.
 - “d4VX” for D4VX: “main_D4VX_speco_*.*)_201****”
 - “d8VX” for D8VX: “main_D8VX_speco_*.*)_201****”
 - “d16VX” for D16VX: “main_D16VX_speco_*.*)_201****”

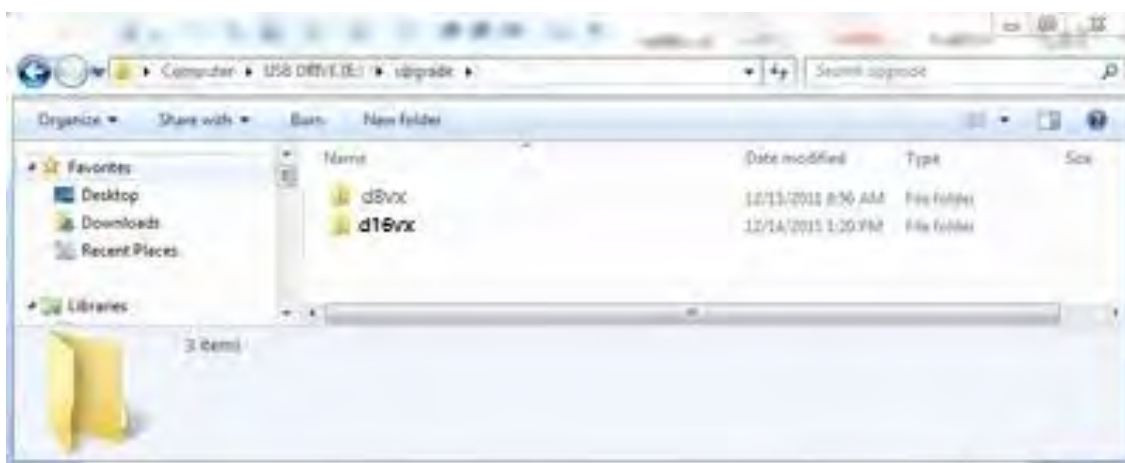

3. Plug in the USB flash drive.
4. Navigate to Config menu of Setup.
5. Select Software Upgrade.
6. Follow the procedure from Figure 4.9.2 to Figure 4.9.5.

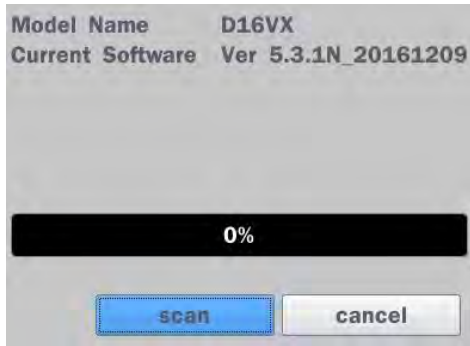


Figure 4.9.2

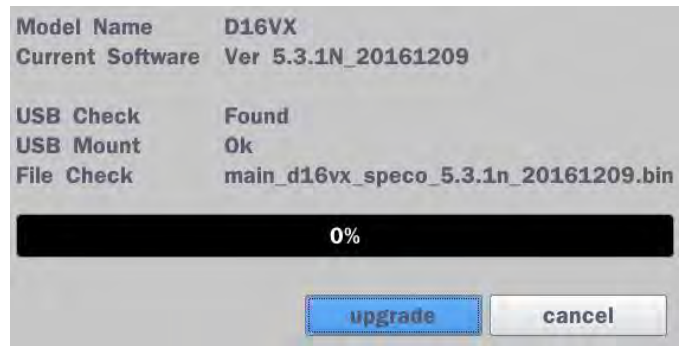


Figure 4.9.3

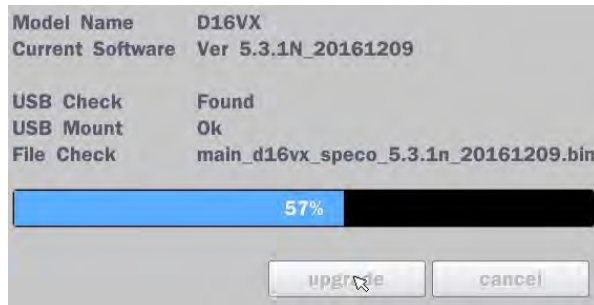


Figure 4.9.4

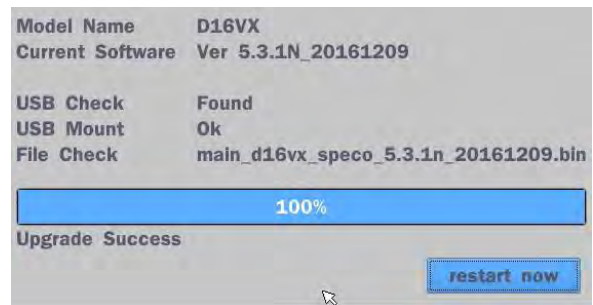


Figure 4.9.5



NOTICE

If selecting “Restart Now” when the USB flash drive is plugged, the following message will pop up with beep sound.



5. Live, Search and Playback

5-1. Live View

In the Live screen, video inputs from the cameras are displayed as they are configured in the Display Setup screen. When the mouse is right clicked, and the quick operation window will be displayed as below.

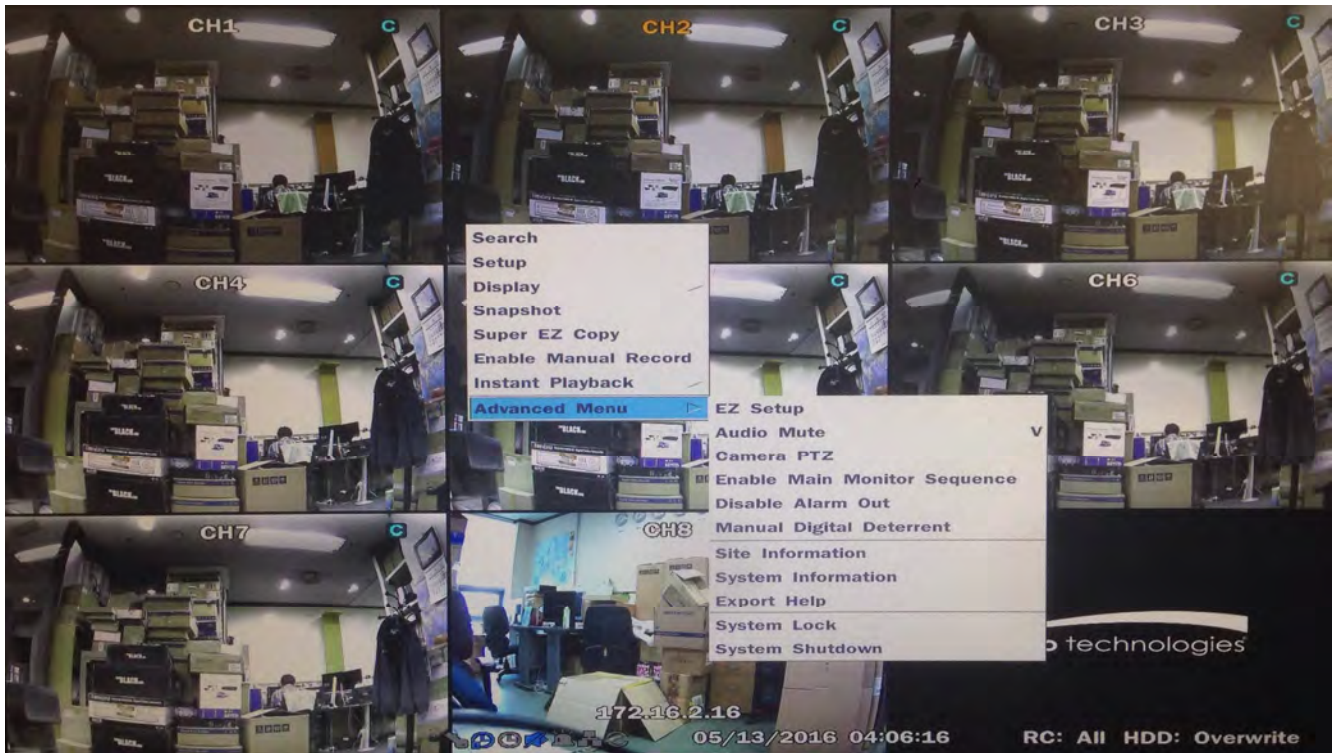


Figure 5.1.1. Live Screen and Quick Operation Window

On the bottom of the screen, various On-Screen Display (OSD) symbols, which indicate the status of the DVR, are described in Table 5.1.1.

Table 5.1.1. Status Indicator Icons in Live Viewing Screen








 
 



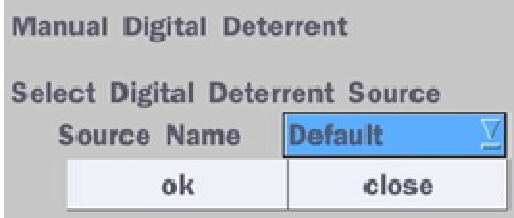

| Icon | Description |
|---|--|
|  | Indicates the DVR is locked. Note) to unlock, right click on the live view screen and select on Unlock. |
|  | Audio mute. Audio channel output can be selected from the quick operation menu |
|  | Indicates that alarm is set. |
|  | Indicates that alarm output is activated. |
|  | Event indicator. When there is an event (motion recording, video loss, HDD fail, S.M.A.R.T), this icon will be highlighted. |
|  | Indicates that a network client is connected to the DVR. |
|  | Indicates that sequencing mode is enabled. |
| 2009/04/14 17:23:40 | Displays the current date and time. |
| RC: ALL | Remote control ID display. If a remote ID is not set, the message "ALL" is displayed. |
|  15% | When Overwrite is not enabled, this displays the percent of the hard disk usage from 0-99%. When Overwrite is enabled, the Bar will indicate with Overwrite |
|  | Continuous recording in progress. |
|  | Manual recording in progress. To set the Manual recording mode, press the Record button on the front panel. |
|  | Motion alarm recording in progress. |
|  | Sensor recording in progress. |



Table 5.1.2. Menu Items in Quick Operation Window

| Icon | Description |
|--------------|--|
| Search | Select this option to enter the Search menu. |
| Setup | Select this option to enter the Setup menu. |
| Display | Display layout. Select between different multi-view display formats. D8VX: 1x1, 2x2, 3x3; D16VX: 1x1, 2x2, 3x3, 4x4 |
| Aspect Ratio | Select 'Auto Stretch' or 'Pass Through' |
| Snapshot | Click this option to create a snapshot of selected channel image. (BMP Still Image) |

| | |
|------------------------------|---|
| Super EZ Copy | Direct Backup of the selected channel to USB flash drive without going through the search mode. |
| Enable Manual Record | Manual Record button. Click this button to enable manual recording. Also known as Panic Record. |
| Advanced Menu | |
| EZ Setup | Select this option to start EZ Setup Wizard |
| Audio | Select this option to set an audio channel to output; (Channel 1 through 4, Audio Mute). |
| Camera PTZ | Select this option and the PTZ user interface will appear. |
| Enabel Main Monitor Sequence | Select this option to enable/disable sequence function. |
| Disable Alarm Out | Click this button to enable/disable Alarm outputs |
| Manual Digital Deterrent | Window where users can manually trigger the digital deterrent audio "Right now it just says "use". |
| |  |
| Site Information | Press the button to view the record setting of a selected channel. |
| System Information | Press the button to view the system information. |
| |  |
| Export Help | Displays window with instructions for exporting video. |
| System Lock | Locks the DVR from user access. |
| System Shutdown | Click this button to shutdown system. |

5-1-1. PTZ Control


Table 5.1.3. Menu Items in PTZ Control Window

| Image | Item | Description |
|--|---|---|
|  | INITIALIZE | Initialize the PTZ settings of the selected camera |
| | PAN/TILT | Select PAN/TILT using the ▲▼◀ and ▶ button, then press SEL. Adjust the tilt (UP/DOWN)/pan (LEFT/RIGHT) position using the ▲▼◀ and ▶ buttons. |
| | ZOOM/FOCUS | Select ZOM/FOCUS using the ▲▼◀ and ▶ buttons, then press SEL. Adjust the zoom (UP/DOWN)/ focus (LEFT/RIGHT) position using the ▲▼◀ and ▶ buttons. |
| | OSD | Select OSD to enter the menu. Control keys are Right, Left, UP, Down, Select, Far (REW KEY), and Near (FF KEY). Press the ESC button to return to the previous menu. Press the PTZ button to close the OSD menu. |
| | AUTOSCAN | Press the right key(▶) to start auto scan. Press the left key (◀) to stop auto scan. |
| | PRESET | Select PRESET, then press the left key(◀). A number input window will appear. Set the number (3digits) using the number key, then press the SEL to confirm the preset number for the current position. Press the right key (▶) and enter the number (3digits) to go to the preset position. |
| | TOUR | Select TOU and press the right (▶) key. A number input window will open. Select a number (1digit) using a number key, then press SEL to start the tour. Press the left (◀) key to stop the tour. Preset the number of the tour group in the OSD menu. |
| | NUMBER | For the TOUR and PRESET menu. |
| |  | Press ESC to return to the main menu |


5-2. Digital Zoom in Live and Playback Screen

VX series supports Digital Zoom feature during live and playback mode.

1. Double click the target channel.

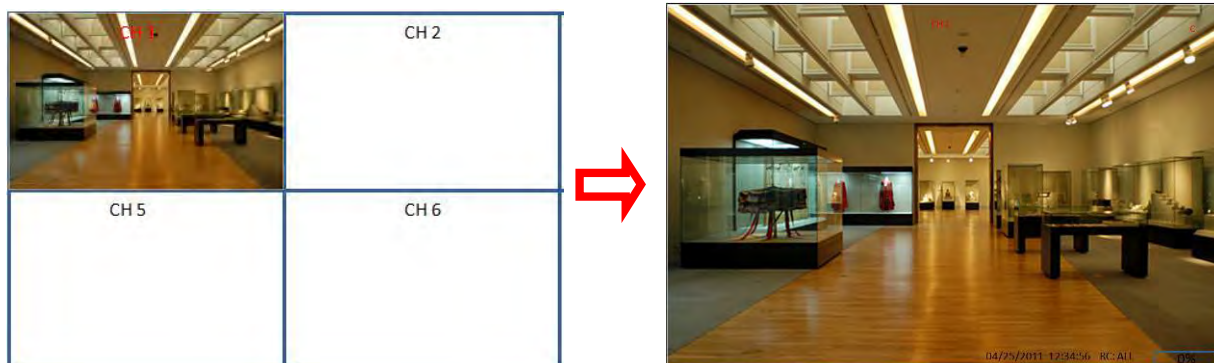

2. Click the left button of the mouse and drag to make rectangular shape.

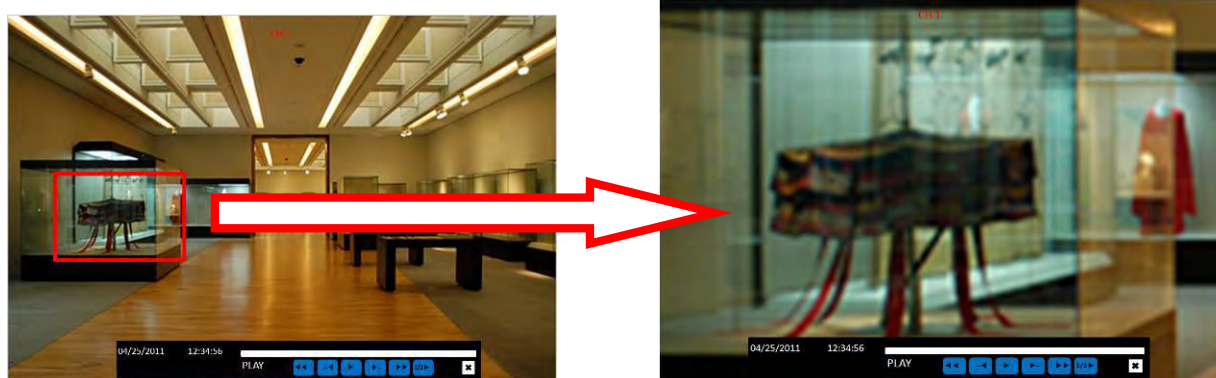

5-3. Search Screen

To enter the search screen menu, select Search menu on the screen using the mouse or press Search icon on live screen.

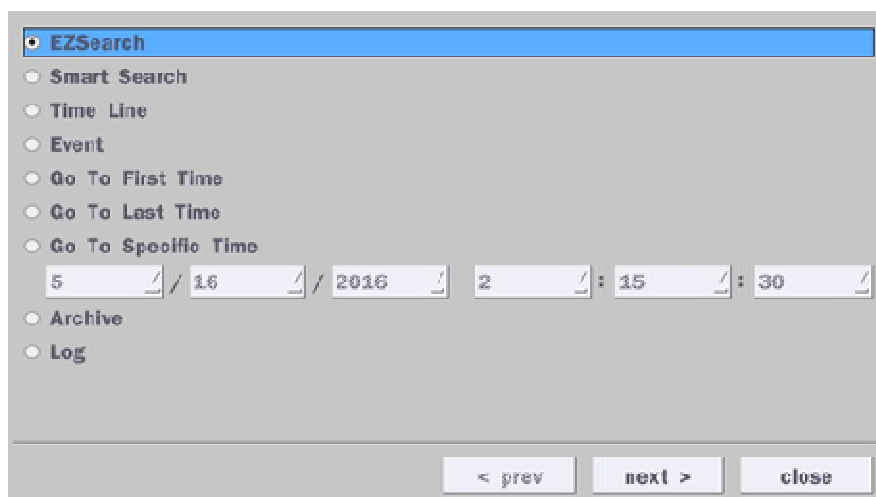


Figure 5.3.1. Search Screen

There are 7 options in the Search Menu, they are: EZSearch, Smart Search, Time Line (Calendar), Event, Go To First Time, Go To Last Time, Go To Specific Time, Archive list, and Log list on the screen.

5-3-1. EZSearch

The EZSearch window is used to find stored video with ease using the thumb nail playback screen.

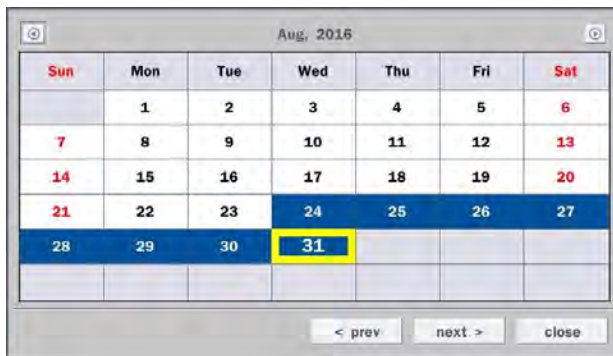


Figure 5.3.2. Calendar Screen



Figure 5.3.3. Channel Selection Screen



Step1. 24 Hourly Thumbnail Screen



Step2. Every 2 minutes and 30 seconds

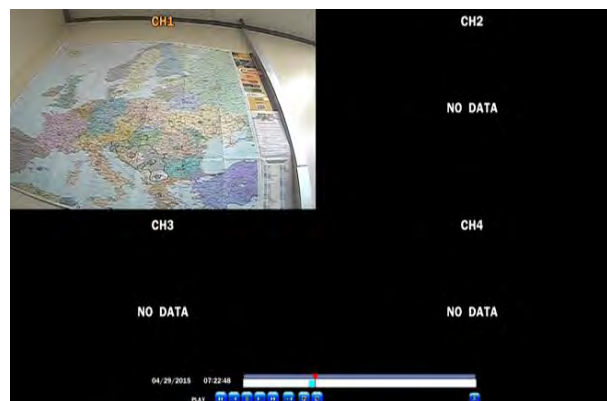


Figure 5.3.4. Second Thumbnail Screen

When the EZSearch menu is selected, a calendar is displayed that highlights dates with recorded data.

1. Select a specific date on the calendar.
2. Select a channel from Channel Selection Screen.

Then the Thumbnail Search screen displays 24 thumbnails, one for each hour of the day.

3. Second step shows every 2 minutes and 30 seconds screen.
4. Playback the selected image.

5-3-2. Smart Search

Smart Search is search the selected area quickly. User can search need to know area.

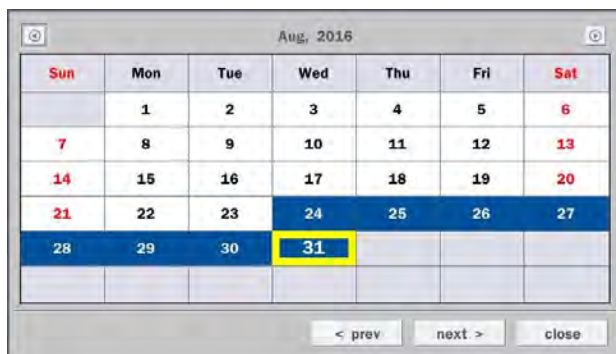



Figure 5.3.4. Calendar Screen




Figure 5.3.5. Channel Selection Screen




- 1) Select the start time and End time that user want to search
- 2) Set Zone as 'Partial' or 'Full'
- 3) Partial zone can select the area that user want.

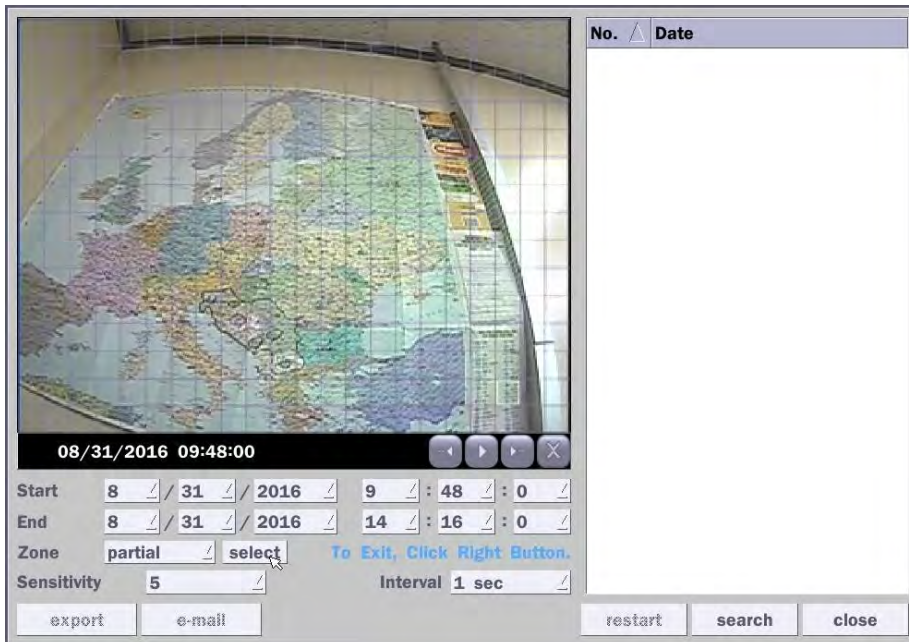

- 4) Click "select" button after selection as 'Partial' then user can drag the area.
- 5) Click **right mouse button** when the area selection was finished.
- 6) Select 'search' then show the detected motion lists at the right blank.

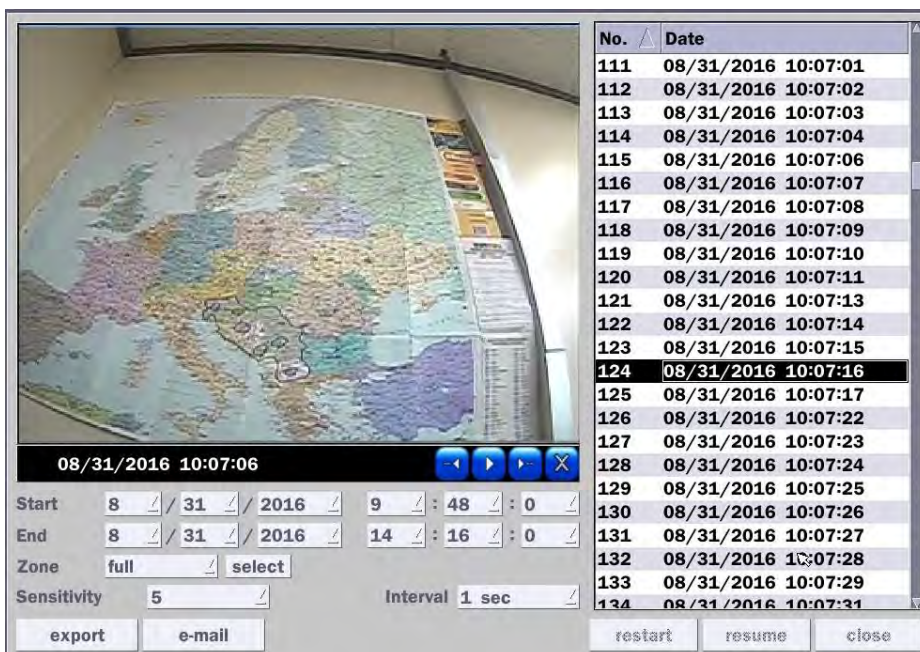

- 7) Click the list that user want to playback.

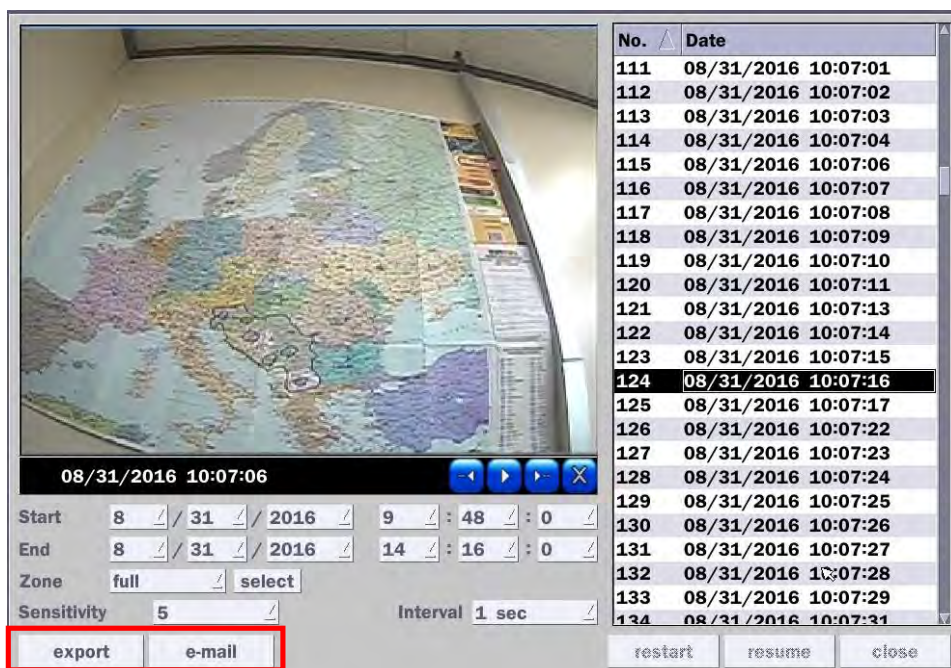

8) 'export' and 'e-mail' icon will be activate for backup or mail notice

5-3-3. Time Line Search

The Calendar Search window is used to find the stored video by using the time line bar.

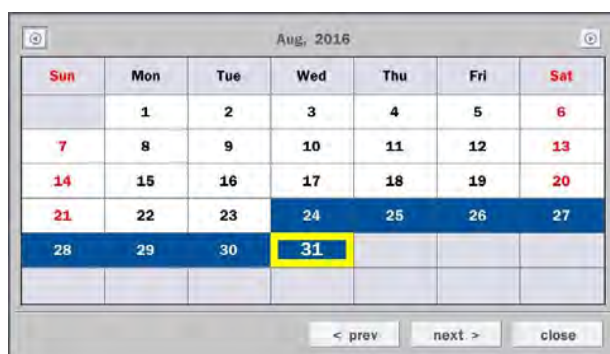


Figure 5.3.7. Calendar Screen

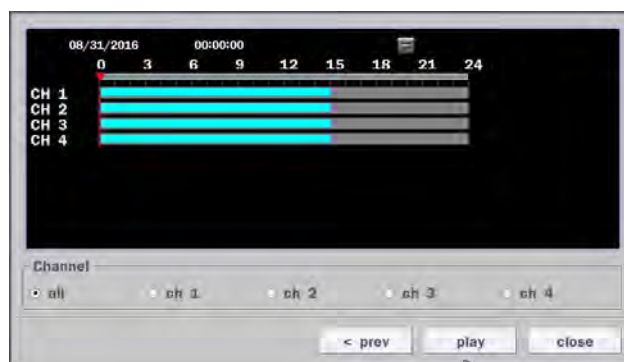


Figure 5.3.8. Time-Line Search Screen

When the Timeline menu is selected, the user can see a calendar, which displays recorded dates with highlights. Select a specific date and time. Click and drag the red time indicator bar to the desired hour. User can select a specific minutes using a button in the above red box. Press the "play" button after selecting the specific time. Press the "prev" to return to the Search window.

5-3-4. Event Search

The Event Search window is used to find stored video.

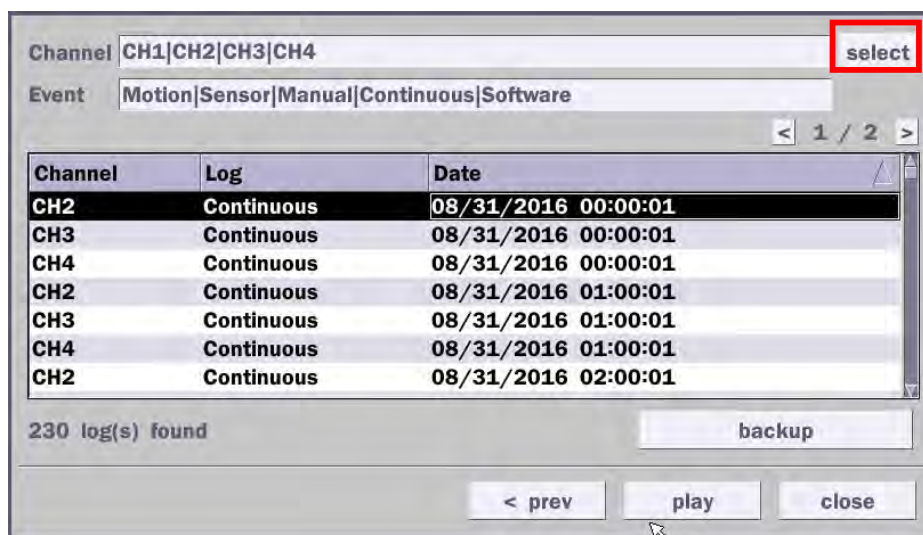


Figure 5.3.9. Event Search Screen

When the Event menu is selected, a calendar is displayed that highlights dates with recorded event data. Select a specific date and the event log will be displayed. After selecting the event, Press the “play” button to playback the recorded data or press the “backup” button to export the data. User can find a data of the specific channel and event using a button in the above red box as following Figure 5.3.9. Press the “prev” to return to the Search window.

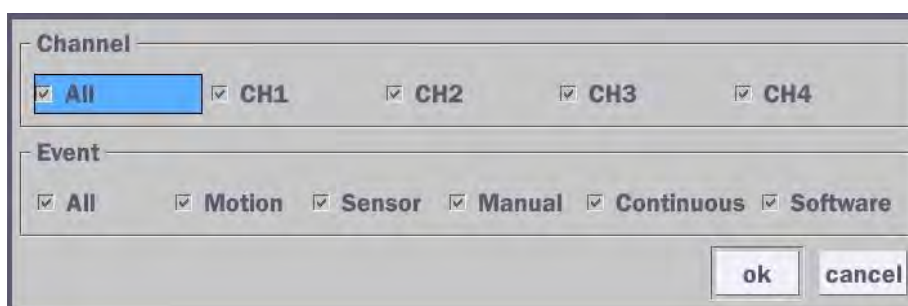


Figure 5.3.10. Event Search Screen

5-3-5. Go To First Time

You can access the oldest recorded data on the DVR hard drive by selecting Go To First Time on the Search window. Press the “prev” to return to the Search window.

5-3-6. Go To Last Time

You can access the latest recorded data on the DVR hard drive by selecting Go To Last Time on the Search window. Press the “prev” to return to the Search window.

5-3-7. Go To Specific Time

User can search for video data from a specific instance by setting the date and time in the GO TO SPECIFIC TIME menu. Use the mouse or the remote control to change the date and time value and press the PLAY button after setting. If there is no video data in the set date and time, No Data Exist message displays.

5-3-8. Archive List

The ARCHIVE Search window is used to find previously stored video or images.

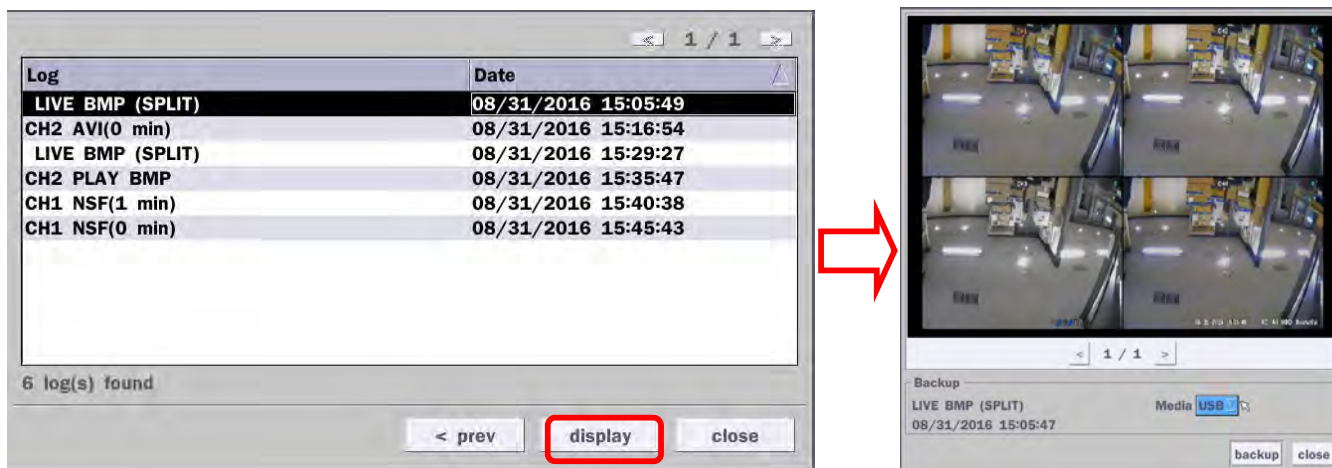


Figure 5.3.11. Archive Search Screen

When the Archive menu is selected, the user can see a calendar, which has archive data. Select a specific date and then the archived data will be displayed. Press the Display button to view the still image or the first frame of the selected video, then the user can export the selected data.

5-3-9. Log List

You can access the LOG list search screen by selecting LOG on the SEARCH window.

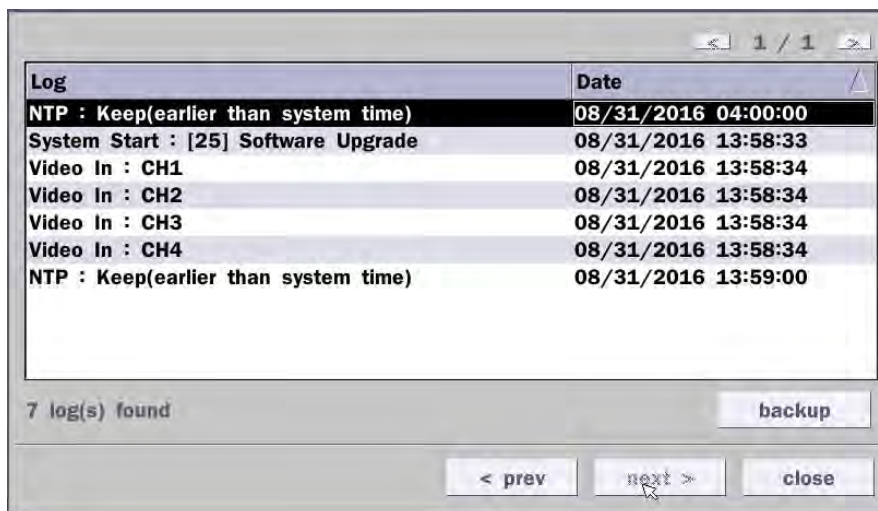


Figure 5.3.12. Log List Screen

When the Log menu is selected, the user can see a calendar, which has a log data. Select a specific date and press NEXT button, and then the log data will be displayed. Press the SAVE button to save the data and then the data is saved as a text file format.

5-4. Play Mode










During playback of a recorded event, the mode changes from SEARCH to PLAY. While in PLAY mode, you may return to the SEARCH screen by pressing the X button on the status bar.



Figure 5.4.1. Play Mode Screen

The following status bar hides automatically and appears again if a mouse pointer is positioned to the bottom of the screen.

Table 5.4.1. Button Functions in PLAY Mode


| Button | Description |
|---|--|
|  | <ul style="list-style-type: none"> • 1x, 2x, 4x, 8x, 16x, 32x for D4VX • 1x, 2x, 4x, 8x, 16x for D8VX • 1x, 2x, 4x, 8x for D16VX Single Channel backward playback speed 1x, 2x, 4x, 8x, 16x, 32x, 64x |
|  | Jump/Step backward. The playback position moves 60 seconds backward. |
|  | Press to play or pause recorded video. |
|  | Jump/Step forward. Playback position moves 60 seconds forward. |
|  | <ul style="list-style-type: none"> • 2x, 4x, 8x, 16x, 32x for D4VX • 2x, 4x, 8x, 16x for D8VX • 2x, 4x, 8x for D16VX Single Channel forward playback speed 1x, 2x, 4x, 8x, 16x, 32x, 64x |
|  | Slow Mode play. Forward playback speed x1/4, x1/2 |
|  | Press to back up the video. User can select archive file formats (Still image, NSF, AVI and EXE). |
|  | EZCopy button. User can copy video data as NSF, AVI and EXE format. |
|  | Return to the previous menu screen, search window, or exit from the Menu. |

6. Export and Back Up

6-1. Still Image Backup onto USB Flash Drive

Still images can be captured and archived onto a USB flash drive or an USB external hard drive in live mode or while playing back recorded video.

1. Select a specific channel, which wants to backup on live screen.
2. When you press “Snapshot” button on Quick operation window, the media selection window screen will display.

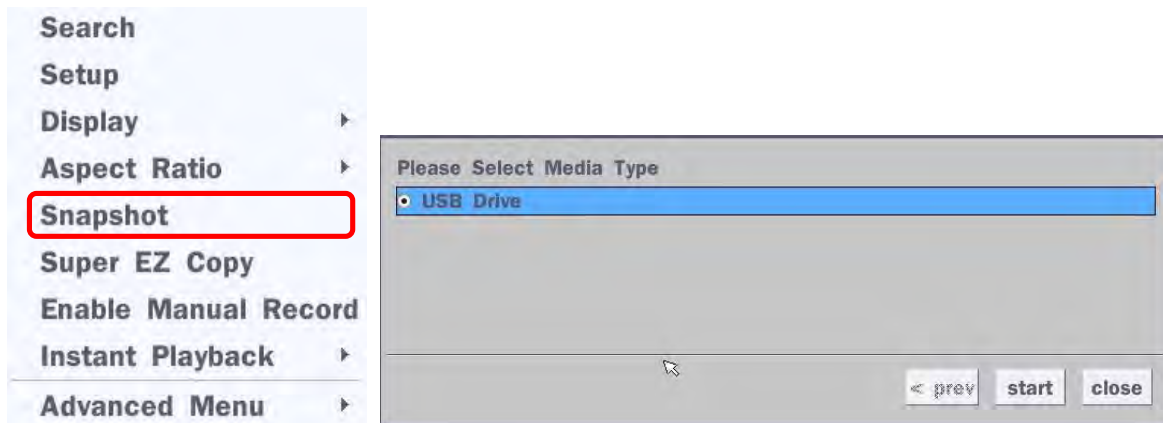

3. Once you press “start” button, the system will capture a still image and archive onto a USB flash drive.




NOTICE

USB Flash Drive must be in FAT32 file format.


6-2. Video Backup onto USB Flash Drive during playback

Video can be captured and archived onto the USB flash drive or a hard drive while playing back the recorded video. In playback mode, press the  **“Export”** button to launch the backup function.


1. When you press  **“Export”** button on the selected channel or all channels, the DVR will ask whether to archive a Still Image, NSF, AVI or EXE and select the proper media type.




2. Select USB Drive (Flash Drive) to back up less than an hour.
Select USB HDD (Large Backup) to back up from 1 hour to 24 hours. (Only for NSF type)

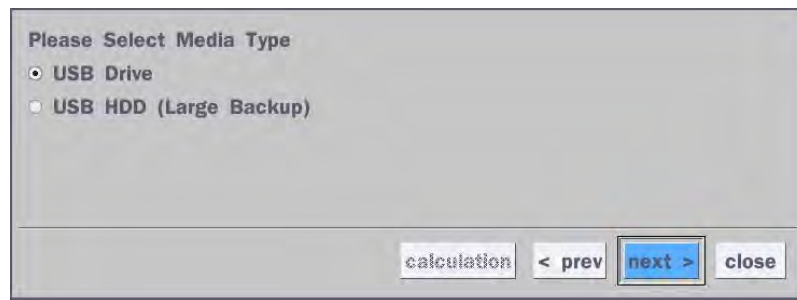


3. Once you select the channel and duration, the system will start to archive the data to the USB drive.

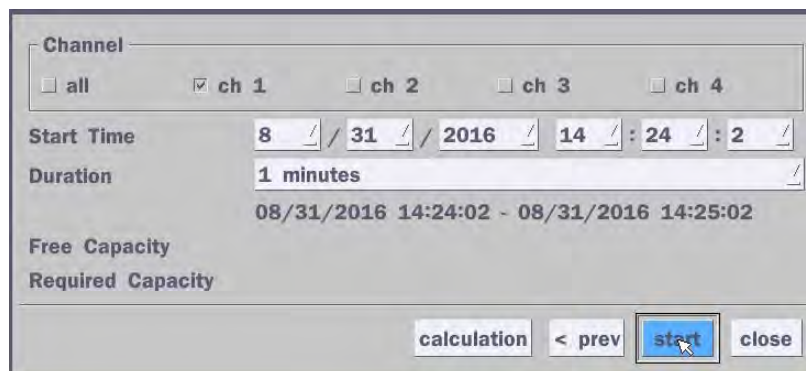

4. The following image shows the progress of archiving the data.

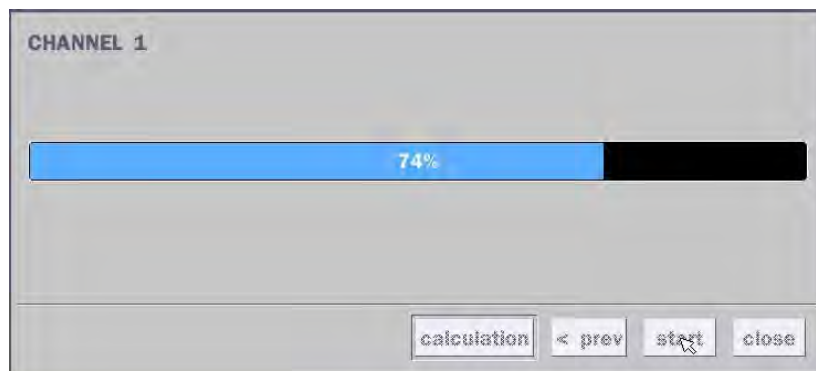

5. The following shows the image to complete the backup. Select lose to return to the previous screen.

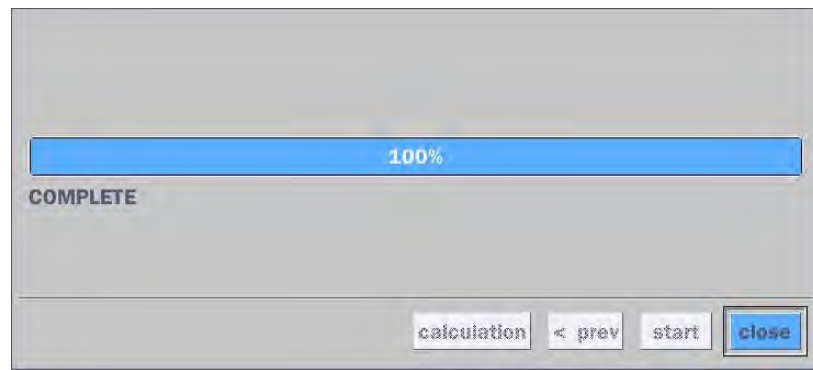


6-3. EZCopy: Video Backup onto USB Flash Drive during playback

Using EZCopy feature, Video can be easily archived onto the USB flash drive or a hard drive.


In playback mode, press the  “EZCopy” button to launch the backup function.

1. Press “EZCopy” button on the selected channel or all channels.

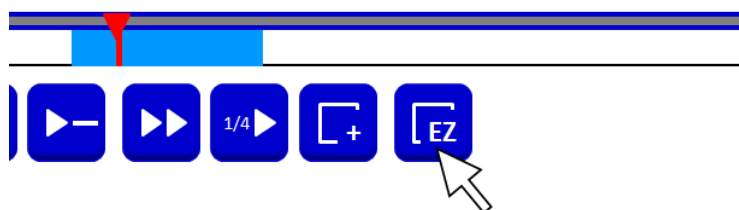


2. Then, EZCopy START time will display.



3. Move  time bar cursor to the time of end of backup and press EZCopy button. Then, EZCopy STOP time will display.



4. EZCopy window will display. The DVR will ask whether to archive a NSF, AVI or EXE.

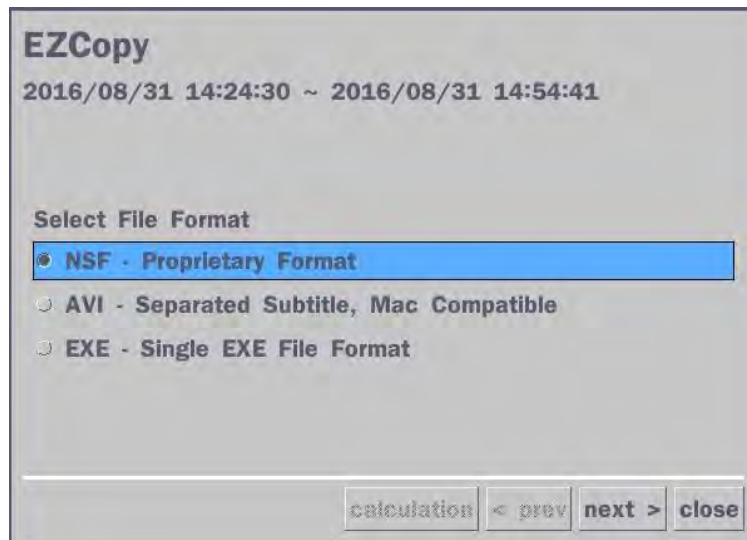

5. After backup format is selected, also select media type and channel(s) to archive the data to the media.

6-4. Transferring Still Images or Video from the ARCHIVE List

The stored data in the hard drive can be found in the ARCHIVE list in the SEARCH window.

User can back up still images or video into the storage device from the ARCHIVE list.

1. Select the date to begin searching and navigate through the days using the mouse or the remote control.
2. Once you have selected the date, press the NEXT button to open the list of stored data.
3. Use the mouse or the remote control to scroll through the archive list.
4. Select a list of stored events in the archive list.
5. Once the desired event has been selected, press the DISPLAY button to view the still image or the first frame of the selected video.
6. Press the BACKUP button to launch the archiving function in playback mode.
7. Press the CLOSE button to return to the SEARCH window.

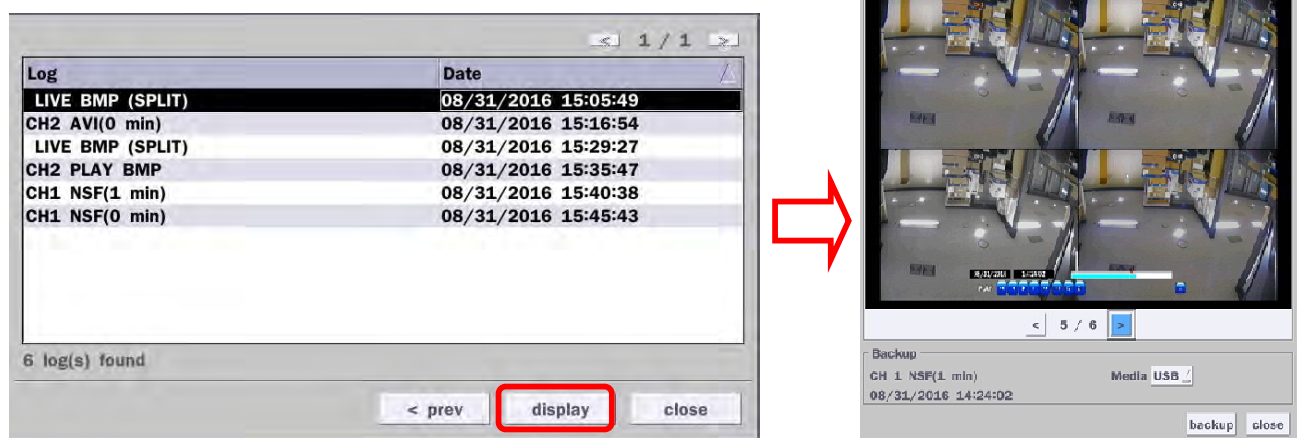



Figure 6.3.1. Archive Search Screen

6-5. Playback of Backup Video


6-5-1. AVI Format

AVI format: AVI format video can be played back by Window Media Player™ or other media player that is compatible with AVI format video.

1. Please install the Decoder Filter that the DVR copies “DvrPlayer” folder on USB flash drive with the video. Decoder Filter is exported to the “/DvrPlayer” folder of the USB drive.

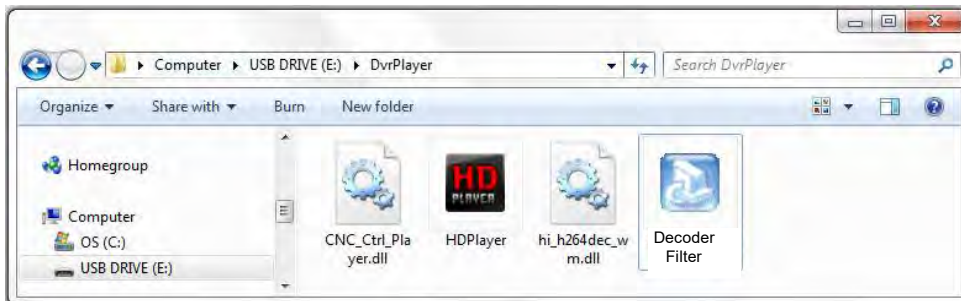


2. Otherwise, the video and time stamp over video can't be properly played back and wont be displayed on Window Media Player™.

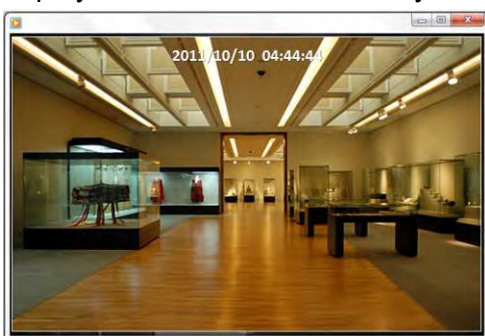

Timestamp On AVI. The subtitle is embedded to the video clip file.

The subtitle is embedded to the AVI file. To display a subtitle, user should install a special filter called “Decoder Filter”.

 6-5-2. NSF Format

NSF format: NSF format video can be played back using the  HDPlayer that the DVR copies to “DvrPlayer” folder on USB flash drive with video. Use the mouse scroll to use digital zoom in and out feature.



7. Network Access Using the Multi-Sites Network Viewer

7-1. Overview

The SpecoTech Multi Client is a multiple site monitoring client software with; video, audio, and alarm signals from the DVRs over the network. The SpecoTech Multi Client does not limit the number of DVR units to register.

The program displays up to 16 DVRs and supports dual monitors.

On the program, user may control PTZ cameras on the DVRs. By attaching a microphone and speaker system to devices on site, the user may make bi-directional audio communication over the network.

7-2. PC Requirements

Minimum PC Requirements

| | |
|------------|--|
| CPU | Intel Core i3 |
| | 1.8Ghz |
| Memory | 2GB DDR2 |
| VGA | 512MB |
| Resolution | 1280x720 |
| Disk Space | 1GB |
| OS | Windows 2000, XP Professional, XP Home, Vista, 7 (NOTE: Not all versions of Vista and 7 are supported) |
| Network | 10/100Base T |
| Others | Direct X 9.0c or Higher |

Recommended PC Requirements

| | |
|------------|--|
| CPU | Intel Core i5 |
| | 2Ghz or higher. |
| Memory | 4GB DDR3 or higher. |
| VGA | 512MB or higher. |
| Resolution | 1920x1080 |
| Disk Space | 1GB |
| OS | Windows 2000, XP Professional, XP Home, Vista, 7 (NOTE: Not all versions of Vista and 7 are supported) |
| Network | 10/100/1000Base T |
| Others | Direct X 10 or higher. |


Before installing the program, check the PC specifications. The DVR remote software may not perform correctly if the PC does not meet the minimum requirements.

7-3. Installation of the Program

1. Insert the provided CD in the CD drive and double-click “SpecoTech Multi Client (XXXX).exe”



2. Select a destination folder and click “Next”.

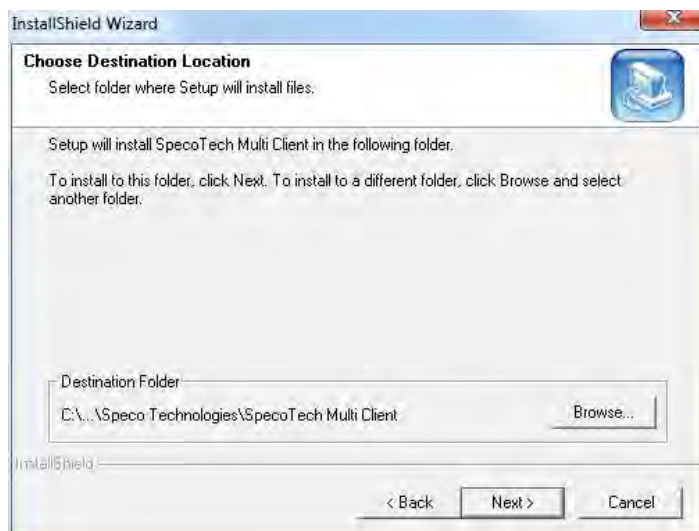

3. Select the program folder and click “Next”.




4. The installation status screen is displayed.
5. After the installation is completed, “**SpecoTech Multi Client**” icon displays on the desktop screen.










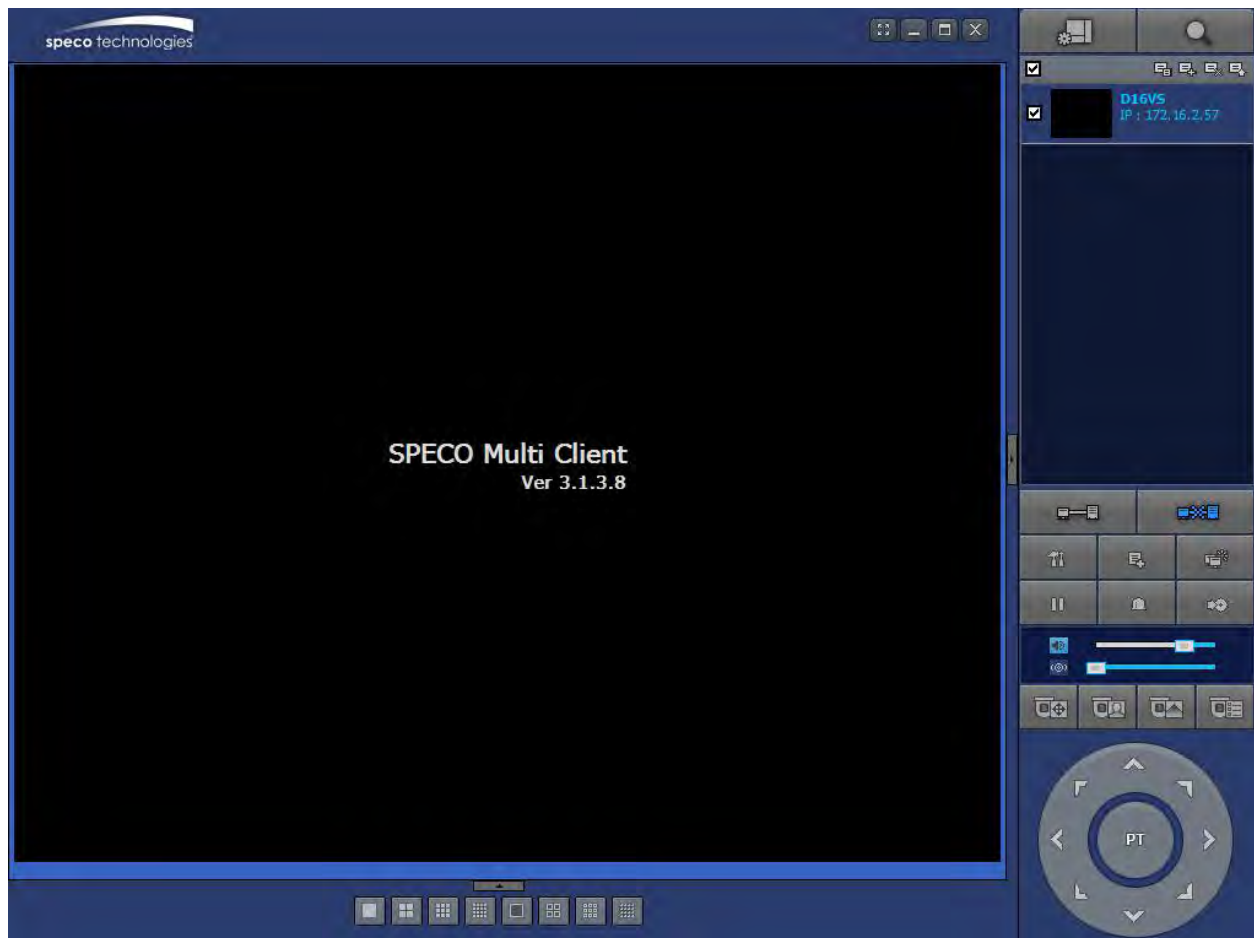




 


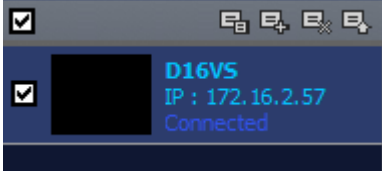




7-4. Live Window

When installation is completed, double click the “**SpecoTech Multi Client**” icon on your desktop to start the program.

7-4-1. Main User Interface




7-4-2. Control Buttons

| Button | Description |
|---|---|
|  LOCAL PLAYBACK | Click this icon to run a playback window to search and play videos that are recorded in the local PC. |
|  REMOTE PLAYBACK | Click this icon to run a playback window to search and play videos that are recorded in the remote DVR. |
|  SITE MANAGEMENT |  THUMBNAIL REFRESH: Click this icon to refresh and renew thumbnail image of the connected sites.  SITE ADDITION: Click this icon to open 'Site Addition' window.  SITE DELETE: Click this icon to delete site from the index window, after disconnect a site.  NET FINDER: Select the site from the index window and click this icon to modify the information of specific site. |
|  CONNECT | Click this icon to connect the selected site/sites. |
|  DISCONNECT | Click this icon to disconnect the selected site/sites. |
|  SETUP | Click this icon to setup configuration of SpecoTech Multi Client. |
|  CAPTURE | Click this icon to capture a still image. |
|  EVENT LIST | Opens list of events logged by the SpecoTech Multi Client. |
|  PAUSE | Click this icon to play/pause live video. |
|  ALARM ON | Click this icon to turn on/off alarm outputs. |
|  RECORD ON | Enable or disable recording of live video to local disk, which has set in setup menu. |
|  AUDIO | Use the volume control bar to set the audio level. |
|  MIC | Use the microphone volume control bar to set the micro phone level. |
|  PRESET/TOUR/SCAN/MENU | User can control PRESET/TOUR/SCAN/MENU |
|  CHANNEL SPLIT | To select the numbers of display channel/channels (Single, quad, 9 channels, and 16 channels) of highlighted site. |
|  DVR SITE SPLIT | To select the numbers of DVR/DVRs (1 DVR, 4 DVRs, 9 DVRs, 16 DVRs) on main display screen. |







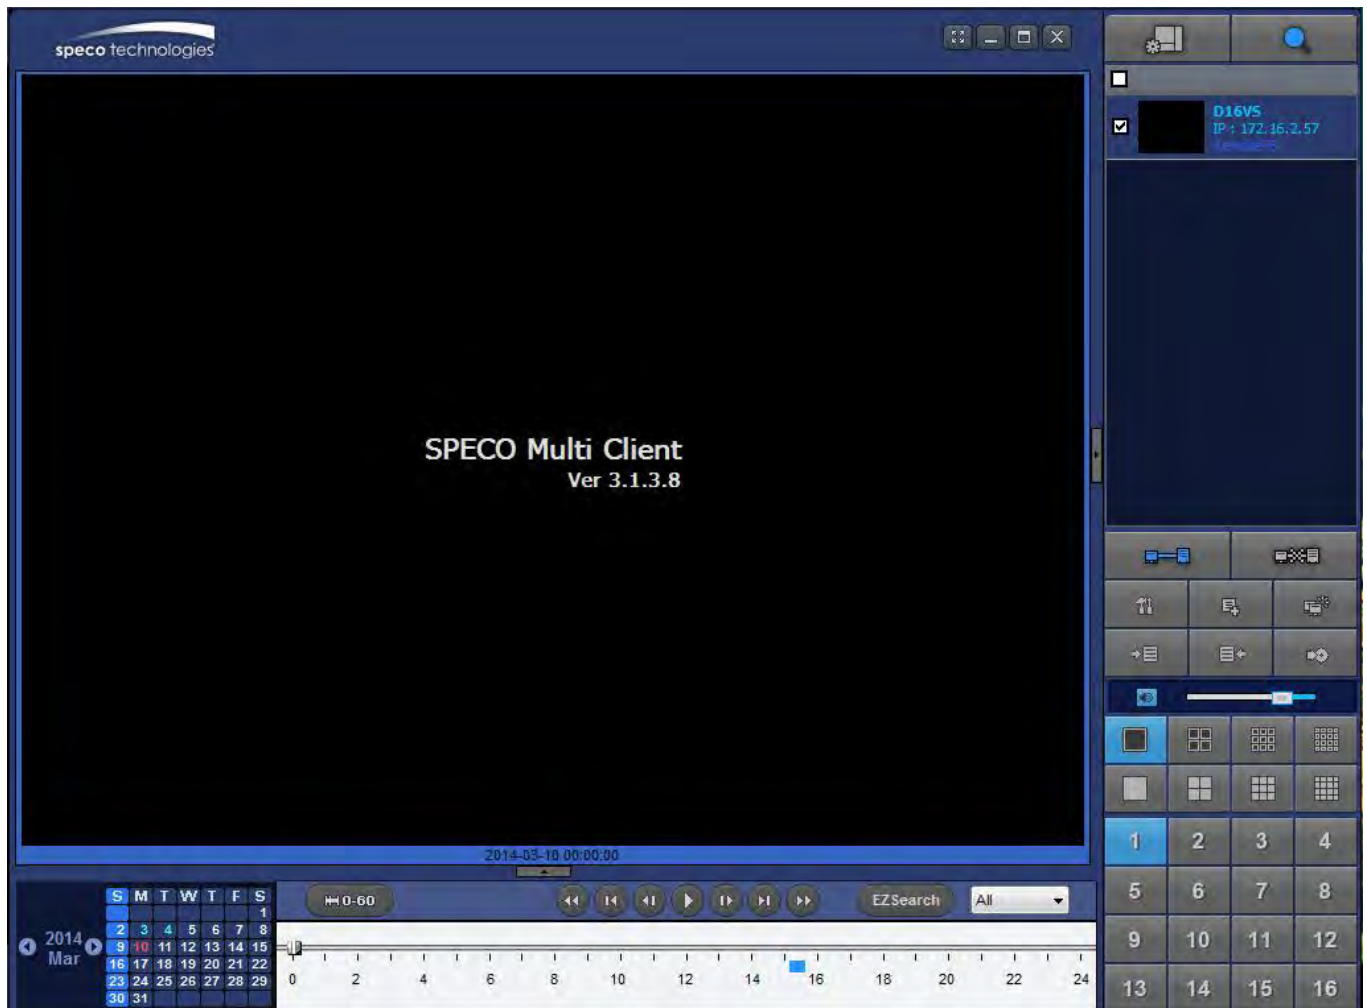 







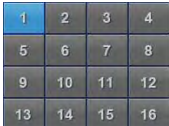


7-5. Search and Playback Window

 



7-5-1. Main User Interface

You can access to search window by clicking the search icon (Local Playback / Remote Playback) on the upper right of the Live Window.





7-5-2. Main Control Panel

| Button | Description |
|---|--|
|  LOCAL PLAYBACK | Click this icon to run a playback window to search and play videos that are recorded in the local PC. |
|  REMOTE PLAYBACK | Click this icon to run a playback window to search and play videos that are recorded in the remote DVR. |
|  | Display the site information and the connection status. |
|  CONNECT | Click this icon to connect the selected site/sites. |
|  DISCONNECT | Click this icon to disconnect the selected site/sites. |
|  SETUP | Click this icon to setup configuration of SpecoTech Multi Client. |
|  CAPTURE | Click this icon to capture a still image. |
|  EVENT LIST | Opens list of events logged by the SpecoTech Multi Client. |
|  EZCopy Start | Click this icon to set the beginning time for backup of the recorded video in AVI format. |
|  EZCopy End | Click this icon to set the ending time for backup of the recorded video in AVI format. |
|  BACKUP | Click this icon to backup the recorded video in AVI format. |
|  AUDIO | Use the volume control bar to set the audio level. |
|  | To select the numbers of DVR/DVRs (1 DVR, 4 DVRs, 9 DVRs, 16 DVRs) on main display screen. |
|  | To select the numbers of display channel/channels (Single, quad, 9 channels, and 16 channels) of highlighted site. |
|  | To select the channel to playback. |
|  | The calendar shows dates with recorded video in color. |
|  | To display the recorded data of selected channel or all channels on a time line scale. |



| | |
|---|--|
|  | <p>To change a timeline scale from 24 hours to 60 minutes.</p> <p>The timeline shows recorded data in color on the bar. You can adjust the timeline scale and move it to the time you wish to playback. Then click the play icon to display the recorded video.</p> |
|  | <p>Playback buttons.</p> |
|  | <p>EZSEARCH: Thumbnail search over the network.</p> <ul style="list-style-type: none"> - Shows 24 thumbnail images, one for each hour from 00:00 to 23:00. - Each hour is further broken up 24 segments; each is 150sec. - Then select the tile to play <p>* Click the "PREVIOUS" button to go the previous step.</p> |
|  | <p>Digital Zoom Window in Live and Playback. (Only available in Single Channel Viewing)</p> |

7-5-3. SMART SEARCH

- 1) User can search with selected area
- 2) Click right mouse button when playback

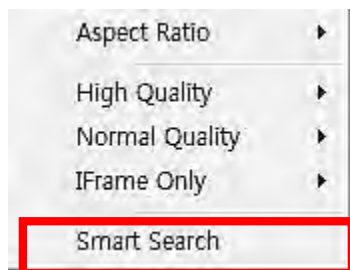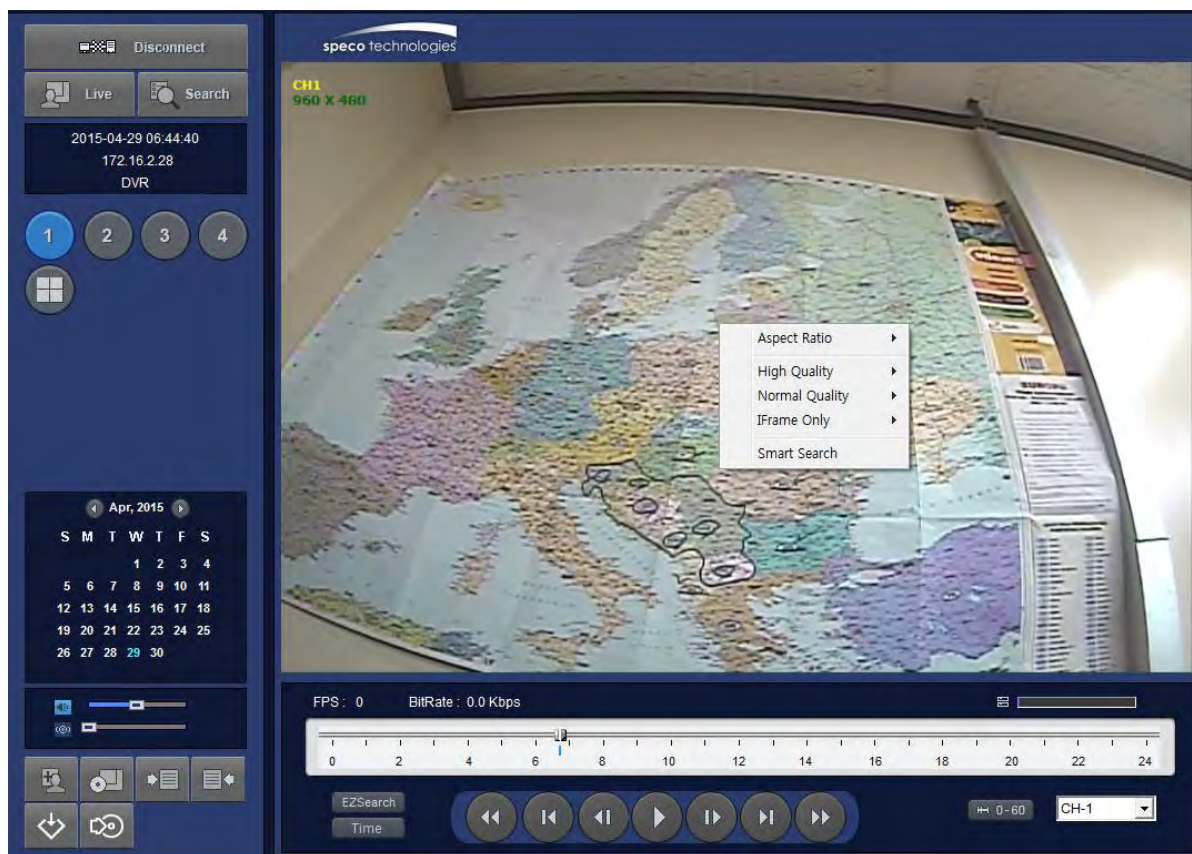

- 3) 'Smart Search' will search in the selected area only.
- 4) 'Smart Search' checking the motion and event from the selected area.
- 5) User can set, Sensitivity, Internal, Thumbnail size, Date and Time

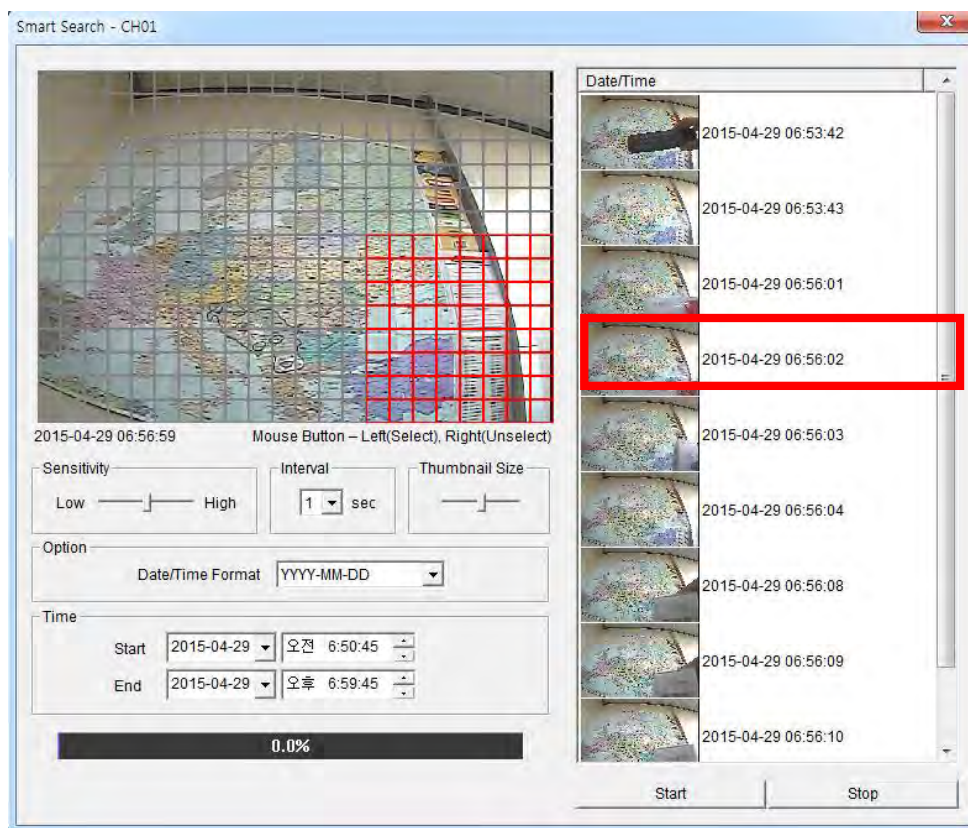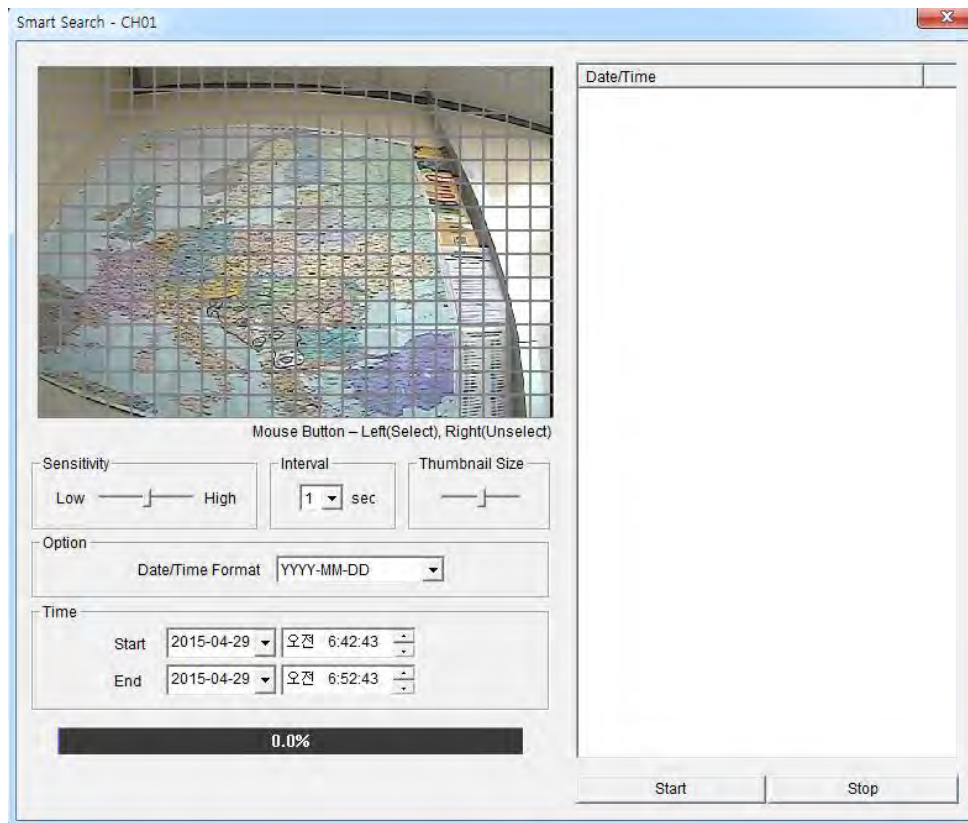

6) Select any of search Thumbnail then selected event will playing.

Setup of SpecoTech Multi Client



Click the setup icon to setup the configuration of SpecoTech Multi Client software. The SETUP window is displayed as below.

7-6-1. General

Security Option: Set a password for security options. Select security options and set a password.

Then when you access any of selected functions, you need to enter the password.

You can also set the save path for capturing and backup.

Save Path: Specify the location to save captured still image for Capture and Backup data.

Miscellaneous

Automatic Reconnection: If enabled, the software will automatically try to reconnect to the last successful IP address. But, when CLIENT ACCESS is OFF on the DVR, the software will not try to reconnect even if it is enabled.


Always On Top: If enabled, the software display will be continuously on the top of other windows.

Time Format: Change the way the Client software displays the time.

7-6-2. Event

Event log can be archived and searched.

Event Log: Specify the location to save event logs and select event to archive.

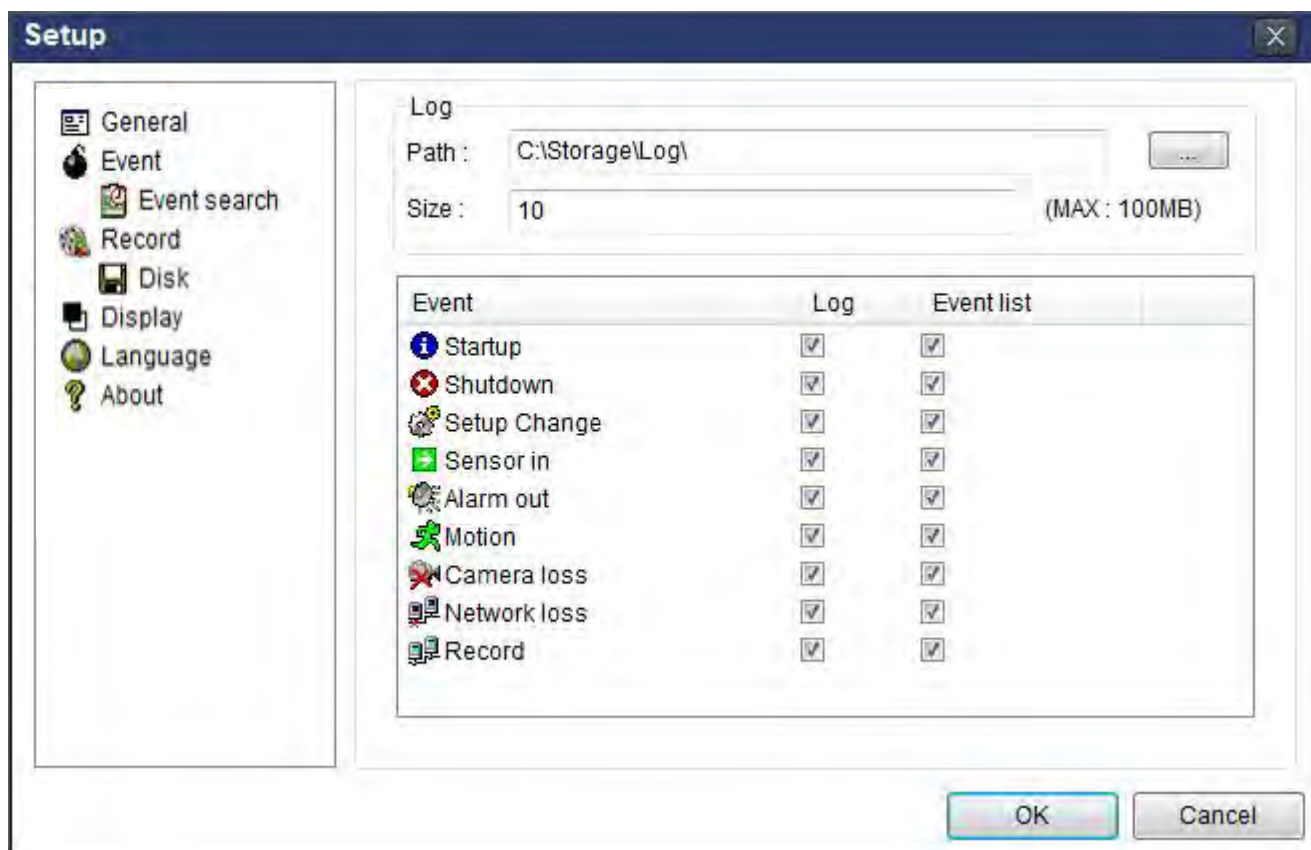

Setup


General
Event
Event search
Record
Disk
Display
Language
About

Log
Path : C:\Storage\Log\
Size : 10 (MAX : 100MB)

| Event | Log | Event list |
|--------------|-------------------------------------|-------------------------------------|
| Startup | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Shutdown | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Setup Change | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Sensor in | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Alarm out | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Motion | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Camera loss | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Network loss | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Record | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

OK Cancel

Event Search: Event log can be searched from the selected time.

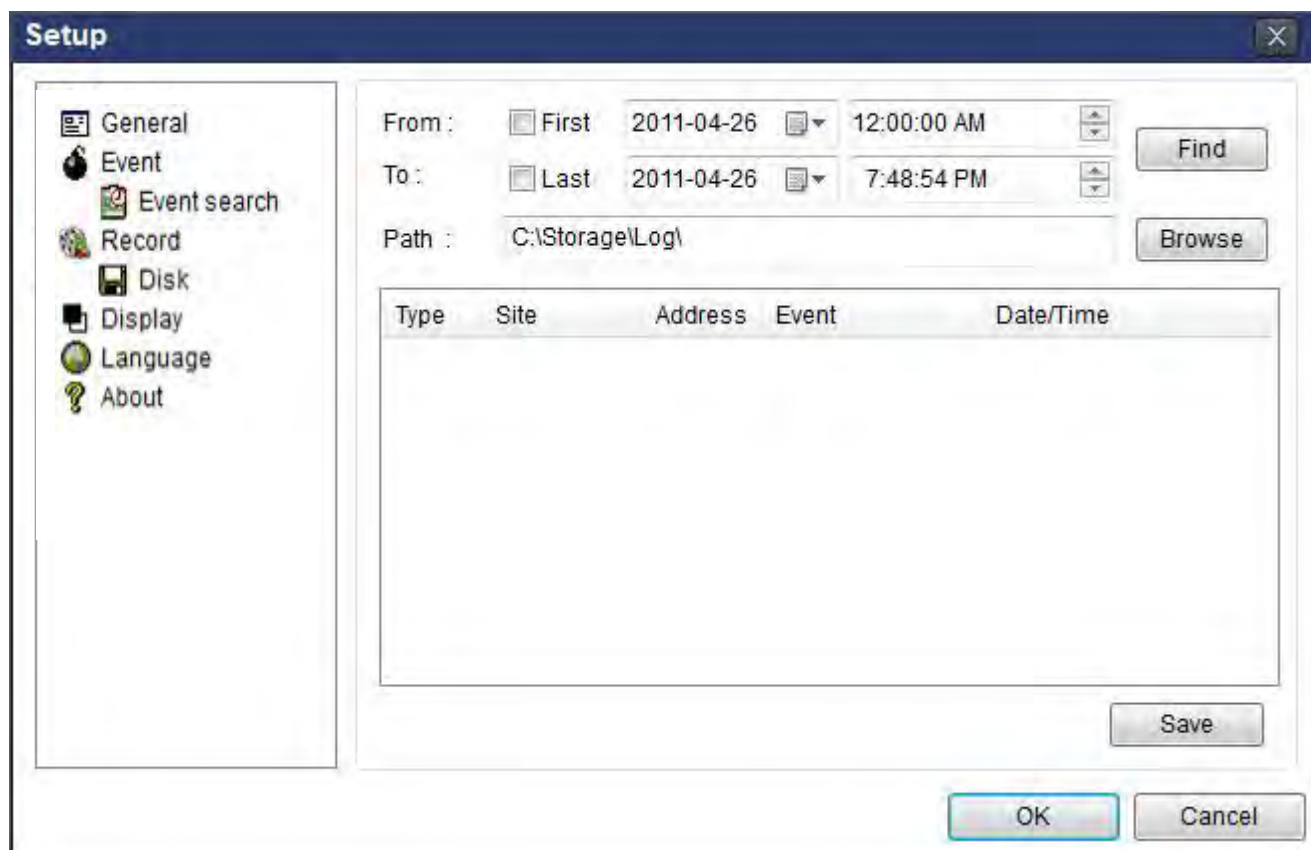

Setup

General
Event
Event search
Record
Disk
Display
Language
About

From : ☐ First 2011-04-26 12:00:00 AM
To : ☐ Last 2011-04-26 7:48:54 PM
Path : C:\Storage\Log\
Find
Browse

| Type | Site | Address | Event | Date/Time |
|------|------|---------|-------|-----------|
|------|------|---------|-------|-----------|

Save

OK Cancel

7-6-3. Record

Record Setup: You can set the recording conditions as the following; Always, Event, or Auto record. And you can also select target DVR/DVRs and channel/channels. When you set the recording condition to event, you can set event for motion or alarm with duration.

Setup

Record Condition

☒ Always ☐ Event ☐ Auto record

Event

☐ Motion ☐ Alarm Duration : 5 Sec

Channel

Site : Site 1 ☐ All site

☐ All

| NO. | CH |
|----------------------------|-----------|
| <input type="checkbox"/> 1 | Channel 1 |
| <input type="checkbox"/> 2 | Channel 2 |
| <input type="checkbox"/> 3 | Channel 3 |
| <input type="checkbox"/> 4 | Channel 4 |
| <input type="checkbox"/> 5 | Channel 5 |
| <input type="checkbox"/> 6 | Channel 6 |

OK Cancel

Record Local Storage Setup: You can select the local disk to record and the amount of disk space you want to allow the program to use for recording. You can also select the option to overwrite data or stop recording when the maximum amount of disk space is full.

Setup

Disk Space : C:\ 4 GB

Disk Info

Total space : 465 GB

Free space : 398 GB

Disk full


☒ Replace oldest files.

☐ Stop recording.

OK Cancel


7-6-4. Display

You can select the OSD (On Screen Display) to be displayed.

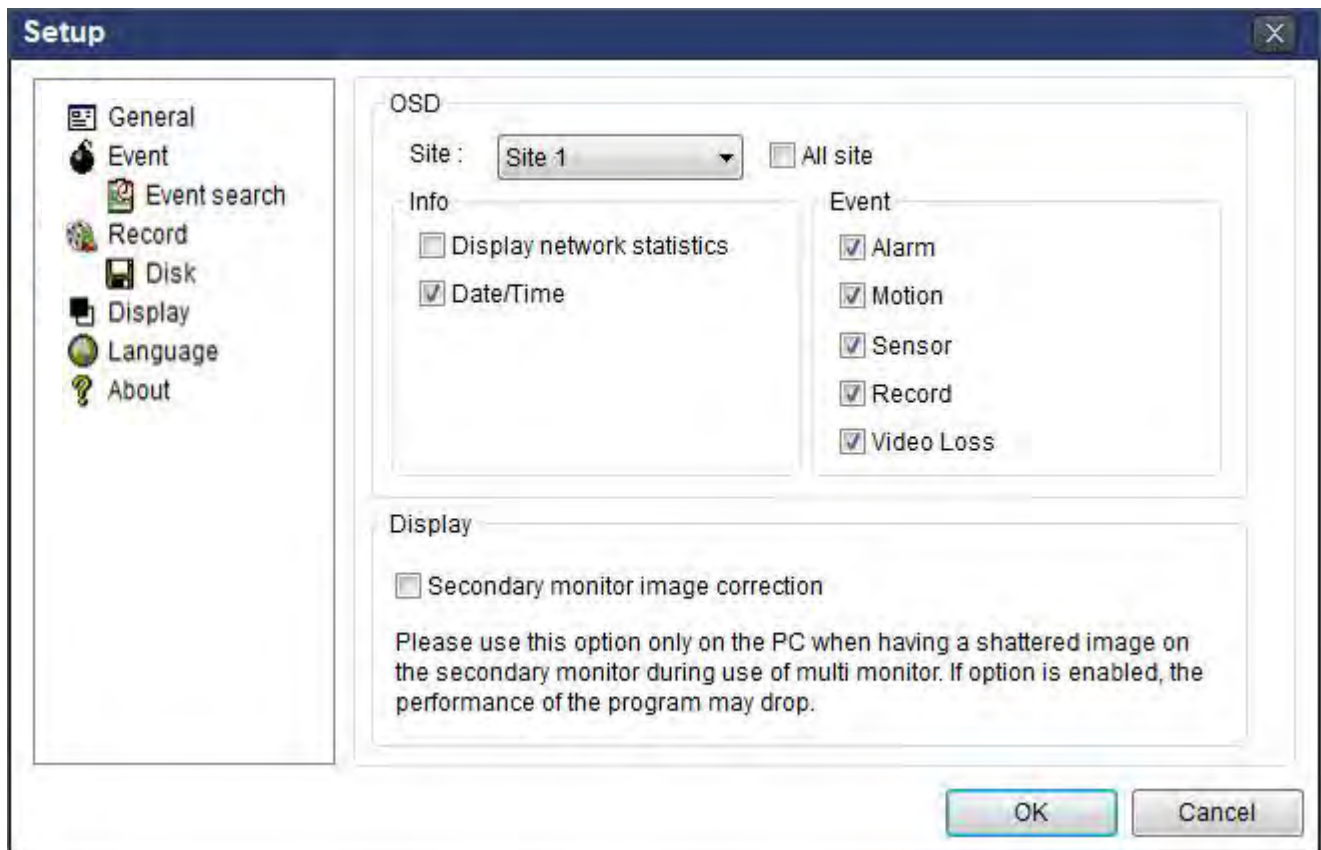


7-6-5. Language

English, French and Spanish is selectable.

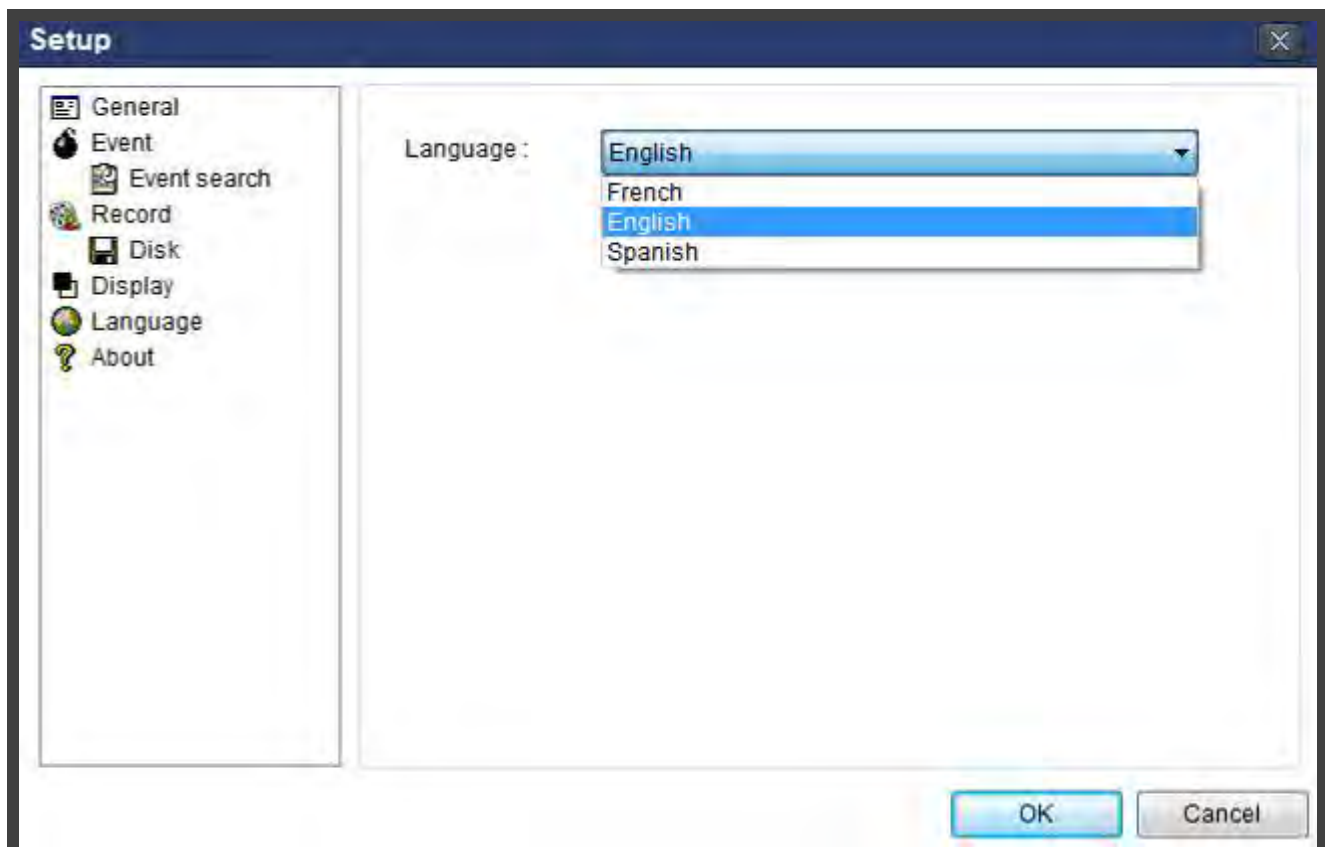

7-6-6. About


“About” provides network client version information.

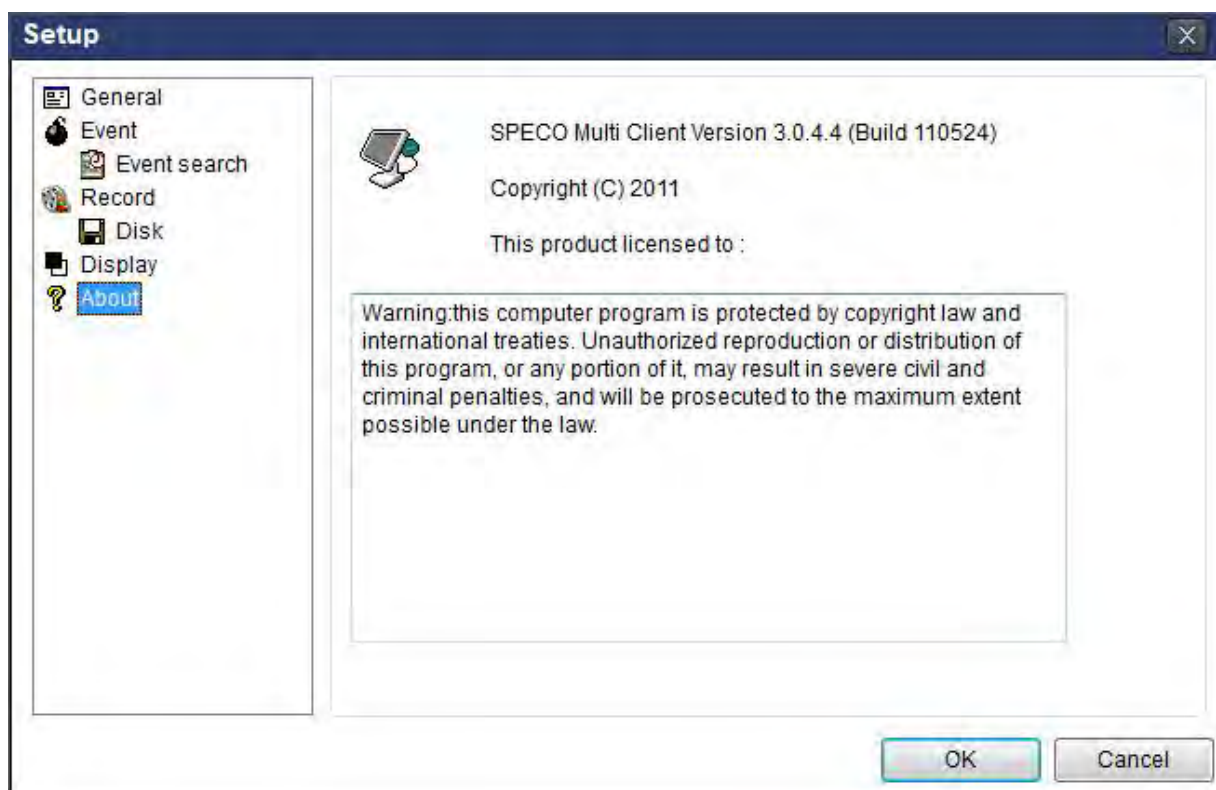

7-7. Remote Setup

The menu settings for the DVR unit can be set over network.

Put the cursor of the mouse on the channel, which is connected to the site and right click on the mouse to open the submenu. Then the following window is displayed as below. Select the **REMOTE SETUP**.

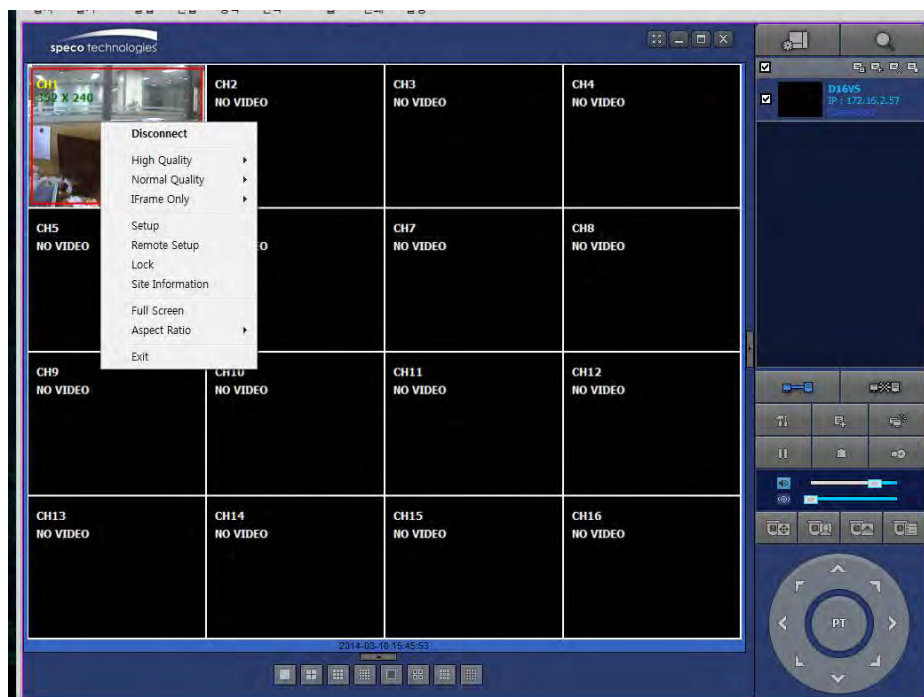

Then the setup window is displayed. The specified menu screen is displayed on the upper left of the screen. Enter the password of the DVR when prompted. (NOTE: The password is same with DVR setup password.) Setting is the same as with the DVR menu setting. Refer to the corresponding pages for details on the setting items.



NOTICE

Web Setup is prohibited when DVR is in local Setup Menu.



7-7-1. System

Select **System** to set system and time settings.

The screenshot displays a web-based configuration interface for a system. The top navigation bar includes tabs for SYSTEM, RECORD, DEVICE, DISPLAY, NETWORK, USER MANAGEMENT, STORAGE, UPGRADE, and INFORMATION. The left sidebar lists configuration categories: DATE DISPLAY FORMAT, CLIENT ACCESS, NTP SETUP, SEND E-MAIL SETUP, and SYSTEM EVENT NOTIFICATION. The main content area is divided into several sections:

- DATE DISPLAY FORMAT:** A dropdown menu showing 'MM/DD/YYYY'.
- CLIENT ACCESS:** A radio button selection for 'ON' (selected) or 'OFF'.
- NTP SETUP:** Fields for 'PRIMARY SNTP SERVER' (Pool.ntp.org), 'SECONDARY SNTP SERVER' (Time.nist.gov), 'TIME ZONE' (GMT -5:00 (Montreal/New York)), and 'TIME' (03:00 AM).
- SEND E-MAIL SETUP:** Fields for 'SERVER TYPE' (Gmail), 'MAIL SERVER', 'MAIL PORT', 'SECURE OPTION' (SSL), 'ID', 'PASSWORD', 'MAIL TO', 'MAIL FROM', and 'SEND MAIL TEST'.
- DISK EVENT SETUP:** A section for 'HEALTH CHECK' with a 'PERIOD' dropdown (DAILY) and a 'HDD TEMPERATURE' field (60°C 140°F).
- VIDEO CLIP SETUP:** Fields for 'PRE RECORD' (2 SECOND(S)) and 'POST RECORD' (1 SECOND(S)).
- EVENTS AND NOTIFICATION:** A table with columns for 'ALARM-OUT', 'BEEP', and 'E-MAIL' for various events like HEALTH CHECK, RESTART, SHUTDOWN, PANIC RECORD, ALARM-IN, MOTION DETECTION, VIDEO LOSS, HDD TEMPERATURE, HDD BAD SECTORS, HDD ALMOST FULL, HDD FULL, and HDD FAILURE.

At the bottom, there is a 'SYSTEM RESTART' button and a 'RELOAD' button. The URL bar shows 'http://172.16.2.57/cgi-bin/websetup.cgi#tabs-4'.

- **DATE DISPLAY FORMAT:** Select the date display format.
- **CLIENT ACCESS:** Enable/Disable remote access through network client software.
- **NTP SETUP:** Sets whether to synchronize the time using NTP server or not.
 - **Primary SNTP Server:** Input the NTP primary server address.
 - **Secondary SNTP Server:** Input the NTP secondary server address.
 - **Time Zone:** Select the time zone.
 - **Connection Mode:** Select the connection mode to NTP time server.
- **SEND E-Mail SETUP:** Sets whether to enable/disable e-mail sending function.
 - **SEVER TYPE:** Select GMAIL, HOTMAIL, AOL, YAHOO or MANUAL)
 - **MAIL SERVER:** Input the SMTP server name as well as the user ID and password.
 - **MAIL PORT:** Mail port setting.
 - **SEURE OPTION:** Select a secure mail server connection. (SSL or TLS)
 - **ID :** Email User ID
 - **PASSWORD :** Email User Password
 - **MAIL TO:** Input the appropriate email address to enable sending e-mail reports
 - **MAIL FROM (Return Mail Address):** Set the source e-mail address to be notified to the destination.

- **SEND MAIL TEST:** Examine the function with registered information.
- **USER NAME:** Name the DVR
- **SYSTEM RESTART**
- **SYSTEM EVENT NOTIFICATION**

Allows the user to set EVENT NOFICIATION ON or OFF

- **HEALTH CHECK**
(Allows the user to set MAIL STATUS periodically) : DAILY or WEELY or MONTHLY
- HDD TEMPERATURE
- HDD BAD SECTOR
- HDD ALMOST FULL
- **VIDEO CLIP SETUP: Setting the duration for pre and post recording.**
- **EVENTS AND NOTIFICATION**
- HEALTH CHECK / RESTART / SHUTDOWN / PANIC RECORD
Enable Email Notification in the event a problem occurs with the VX.
- ALARM-IN : Enable Email Notification when the camera detects sensor
- MOTION DETECTION : Enable Email Notification when the camera detects motion
- VIDEO LOSS: Enable Email, Beep and Alarm output Notification when the camera signal is lost.
- HDD TEMPERATURE : Enable Email Beep and Alarm output Notification when the HDD reaches the maximum temperature
- HDD BAD SECTOR: Enable Email Notification when the HDD has bad sectors.
- HDD ALMOST FULL: Enable Email Notification when the HDD is almost full.
- HDD FULL: Enable Email Notification when the HDD is full.
- HDD FAILURE: Enable Email, Beep and Alarm output Notification when the HDD fails.

7-7-2. Record

Select **RECORD** tab to set the recording conditions.

The screenshot shows the RECORD tab in a system configuration interface. The top navigation bar includes tabs for SYSTEM, RECORD, DEVICE, DISPLAY, NETWORK, USER MANAGEMENT, STORAGE, UPGRADE, and INFORMATION. The RECORD tab is active.

Settings for the selected channel (CH1) are as follows:

- SITE: CH1
- RESOLUTION: D1
- FRAME RATE: 30 FPS
- QUALITY: LEVEL 5(H)
- RECORDING MODE: MOTION
- SENSOR RECORDING: - - - -
- PRE RECORD: 1 MINUTE(S)
- POST EVENT RECORD: 10 SECOND(S)
- AUDIO: ☒ ON ☐ OFF
- SCHEDULE: SENSOR

A calendar grid shows the recording schedule for the month of June. The days of the week are listed on the left, and the days of the month (0-23) are on the top. The grid shows recording days (S) and non-recording days (M) for each day of the month.

Below the calendar, the EZRecord section shows settings for all channels:

- RESOLUTION: D1
- FRAME RATE: 30 FPS
- QUALITY: LEVEL 5(H)
- RECORDING: MOTION
- DAYS TO RECORD: 29 DAY(S) 7 HOUR(S)

These settings apply to the specified channel only.

- **Recording Setup**
 - **RESOLUTION:** Sets the resolution for the recordings. The value applies to an individual channel.
 - **FRAME RATE:** Sets the recording rate.
 - **QUALITY:** Sets the image quality in 5 levels.
 - **RECORDING:** Sets the recording mode.
 - **RECORDING MODE:** CONTINUOUS, SCHEDULE, MOTION, SENSOR
 - **PRE RECORD:** Sets whether to perform or not prerecording.
 - **POST EVENT RECORD:** Sets the duration of the event recording.
 - **AUDIO:** Sets whether to perform or not audio recording.
 - **SECHDULE:** Sets the schedule recording.

These settings apply to all channels.

- **EZRECORD**
 - **RESOLUTION:** Sets the resolution for the recordings. The set value applies to an individual channel.
 - **FRAME RATE:** Sets the recording rate.
 - **QUALITY:** Sets the image quality in 5 levels.
 - **RECORDING MODE:** Sets the recording mode.
 - **RECORD DAYS:** By the setting value, the Recording Days will change accordingly.

7-7-3. Device

Select **Device** to set Spot Out, Enable/Disable CVBS Out, motion zone.

The screenshot shows the 'SPECO WEB SETUP' interface with the 'DEVICE' tab selected. The interface includes a top navigation bar with tabs: SYSTEM, RECORD, DEVICE, DISPLAY, NETWORK, USER MANAGEMENT, STORAGE, UPGRADE, and INFORMATION. The main content area is divided into several sections:

- ALARM-OUT:** Includes fields for ALARM DURATION (set to 1), DIGITAL DETERRENT (set to INFINITE), and FILE UPLOAD (with an UPLOAD button).
- CHANNEL:** Includes a dropdown for CHANNEL (set to CH1) and a dropdown for SOUND TYPE (set to NONE).
- SCHEDULE:** A grid for setting digital deterrent function by day and time. The days are SUN, MON, TUE, WED, THU, FRI, SAT. The times are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23.
- CONTROLLER:** Includes fields for SPEED (set to 9600) and ID (set to 0).
- PTZ:** Includes fields for CHANNEL (set to CH1), CAMERA (set to ---), SPEED (set to 9600), and ID (set to 0).
- SPOT OUT:** Includes fields for SPOT ON EVENT (set to OFF), SPOT EVENT DWELL TIME (set to OFF), SEQUENCE (set to OFF), and SEQUENCE DWELL TIME (set to OFF).
- SPOT CHANNEL:** A grid of checkboxes for selecting spot channels (1-16).
- MOTION:** Includes fields for SITE (set to CH1), MOTION ZONE (set to FULL ZONE), MOTION SENSITIVITY (set to 5), KEY TONE (set to ON), REMOTE CONTROLLER ID (set to 0), SENSOR (set to 1), and TYPE (set to OFF).

At the bottom right, there are buttons for 'RELOAD' and 'APPLY'.

- **ALARM OUT:** Set the alarm out duration.
- **DIGITAL DETERRENT:** Set the schedule of digital deterrent function and upload the sound file to DVR.
- **CONTROLLER:** Set the controller baud rate and ID.
- **PTZ:** Set the PTZ baud rate, protocol, and ID.
- **SPOT:** Enable/Disable the SPOT OUT and SEQUENCE.
- **MOTION: Setup the motion detection area and the sensitivity.**
 - **SITE:** Select the channel
 - **MOTION ZONE:** FULL Zone or PARTIAL Zone
 - **MOTION SENSITIVITY:** 1~9 (High sensitivity level)
- **KEYTONE:** Sets On or Off of Key Tone.
- **REMOTE CONTROLLER ID:** Sets an ID number on the supplied remote control for its identification.
- **SENSOR:** Select the type of each sensor.

7-7-4. Display

Select the **DISPLAY** tab to set the DISPLAY conditions.

The screenshot shows the 'DISPLAY' configuration tab. It contains settings for OSD (On-Screen Display) and MAIN MONITOR SEQUENCE. The OSD settings include: CHANNEL NAME (radio buttons for ON/OFF), VIDEO LOSS (radio buttons for ON/OFF), STATUS BAR / ICON (radio buttons for ON/OFF), OSD CONTRAST (a slider set to 100), MAIN MONITOR SEQUENCE (radio buttons for ON/OFF), SEQUENCE-DWELL TIME (a dropdown menu set to 3 SECOND(S)), SITE (a dropdown menu set to CH1), NAME (a text field set to CH1), COVERT (radio buttons for ON/OFF), BRIGHTNESS (a slider set to 45), CONTRAST (a slider set to 40), HUE (a slider set to 50), and SATURATION (a slider set to 50).

These settings apply to all channels.

- **OSD**: Sets whether to display or not, the date and time as well as channel number on the screen.
- **OSD CONTRAST**: Adjust the character contrast on the screen.
- **MAIN MONITOR SEQUENCE**: Setting for automatically switching the displayed video.
SEQUENCE DWELL TIME: Sets the interval for automatically switching the screens.
- **SITE**: Name, Covert, Brightness, Contrast, Hue, Saturation

These settings apply to the specified channel only.

7-7-5. Network

The screenshot shows the 'NETWORK' configuration tab. It contains settings for NETWORK TYPE, IP, SUBNET MASK, GATEWAY, DNS (PRIMARY), DNS (SECONDARY), DDNS, ENABLE DDNS, HOST NAME, SUBMIT/UPDATE, ezDDNS, NETWORK PORT, NETWORK AUDIO PORT, WEB PORT, NETWORK STREAM, RESOLUTION, FRAME RATE, QUALITY, and USE MOBILE. The NETWORK TYPE is set to Static. The IP is 172.16.2.33, SUBNET MASK is 255.255.0.0, GATEWAY is 172.16.1.254, DNS (PRIMARY) is 168.126.63.1, and DNS (SECONDARY) is 168.126.63.2. DDNS is set to ON, ENABLE DDNS is set to ON, HOST NAME is hostname, SUBMIT/UPDATE is set to ON, ezDDNS is set to ON, NETWORK PORT is 5445, NETWORK AUDIO PORT is 5446, WEB PORT is 80, NETWORK STREAM is set to CH1, RESOLUTION is CIF, FRAME RATE is 15 FPS, QUALITY is LEVEL 5(H), and USE MOBILE is set to OFF.

- **NETWORK TYPE**
 - **STATIC**: The address setting mode is manual. Input IP, Gateway, Subnet Mask, and DNS IP.
 - **DHCP**: The address setting mode is automatic.
- **DDNS**: Set whether to use DDNS service or not.
 - **HOST NAME**: Allows the user to setup a domain name manually
 - **SUBMIT/UPDATE**: Select ON to submit the settings
 - **ezDDNS**: Enable/disable ezDDNS to register the host name automatically
- **NETWORK PORT**: When connecting multiple DVRs to the network, set a unique port number.
- **NETWORK AUDIO PORT**: Display the network audio port (NETWORK PORT + 1).
- **WEB PORT**: Set a web server port number.
- **NETWORK STREAM**: Set the Resolution, Frame Rate, and the Quality and enable/disable USE MOBILE.

7-7-6. User Management

Select the **USER MANAGEMENT** tab to set the DISPLAY conditions.

SPECO WEB SETUP (Ver 1.10.16)

SYSTEM RECORD DEVICE DISPLAY NETWORK **USER MANAGEMENT** STORAGE UPGRADE INFORMATION

AUTHORITY SETUP

| | PASSWORD | SETUP | PB | PTZ | REC OFF | NETWORK |
|----------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| PASSWORD CHECK | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| ADMIN | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER3 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

USER NAME SETUP
NEW USER NAME
PASSWORD SETUP
CHANGE
NEW PASSWORD
CONFIRM PASSWORD
PLAYBACK AUTHORITY

USER1
USER2
ADMIN
KEEP

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|-------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| ADMIN | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| USER3 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

RELOAD APPLY

7-7-7. Storage

Select **Storage** to configure continued recording settings by overwriting the hard disk and the storage period for the recording data.

SPECO WEB SETUP (Ver 1.10.16)

SYSTEM RECORD DEVICE DISPLAY NETWORK **USER MANAGEMENT** **STORAGE** UPGRADE INFORMATION

OVERWRITE
DISK INFO
HDD SIZE : 435 GB (FREE : 431 GB)
HDD LAST TIME : 03/10/2014 15:53:00
HDD 1
MODEL NAME : ST3500410SV
TEMPERATURE : 24 Celsius (75 Fahrenheit)
HEALTH (GOOD/NORMAL/BAD) : GOOD
REALLOCATED SECTORS : 0
CURRENT PENDING SECTORS : 0
UNCORRECTABLE SECTORS : 0
SPIN RETRY SECTORS : 0
RECORDING LIMIT : OFF
RECORDING LIMIT DAYS

ON OFF

RELOAD APPLY

- **OVERWRITE:** Continues recording by writing over previous recordings when HDD is full.
- **DISK INFO:** Shows the information of HDD installed in DVR
- **RECORDING LIMIT:** Sets whether to limit or not, the recording data storage period.

7-7-8. Remote Upgrade

SPECO WEB SETUP (Ver 1.10.16)

SYSTEM RECORD DEVICE DISPLAY NETWORK **USER MANAGEMENT** **STORAGE** **UPGRADE** INFORMATION

Model Name : D16VS
Current Software : Ver 3.10.0_20140225

BROWSE

UPGRADE

RELOAD APPLY


Shows the current Firmware version installed on DVR.


- **Browse:** Select BROWSE to locate the firmware file.
- **Upgrade:** Select UPGRADE to upgrade the firmware of the DVR.

7-8. Operation

7-8-1. Addition, Delete, and Modify of DVR Sites

7-8-1-1. Addition of Sites

1. Click  SITE ADDITION button. And then the following window will be displayed as below.

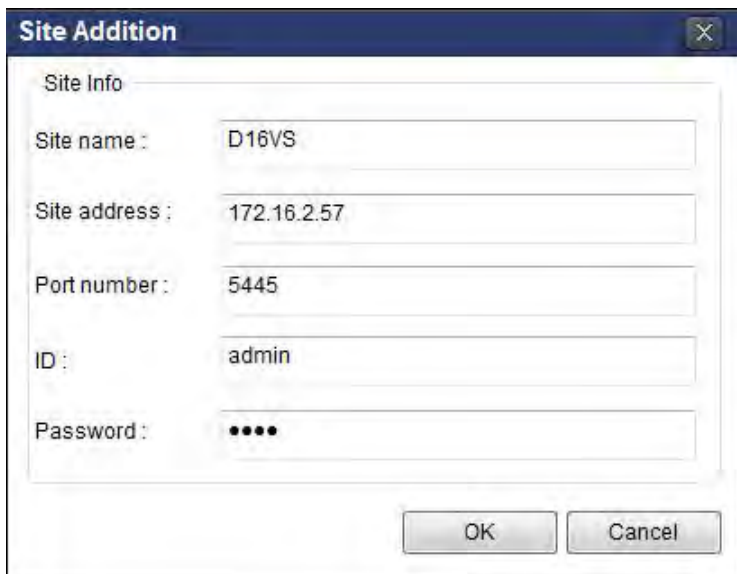


The 'Site Addition' dialog box contains the following fields:

| Site Info | |
|----------------|-------------|
| Site name : | D16VS |
| Site address : | 172.16.2.57 |
| Port number : | 5445 |
| ID : | admin |
| Password : | •••• |


Buttons: OK, Cancel


- **Site Name:** Input a name that properly describes a site.
 - **IP Address:** Input IP address (Public IP address of a router that DVR is connected.) or Domain name
 - **Port Number:** Default Port Number is “5445”.
 - **ID:** Input ID of DVR. Default ID is “admin”.
 - **Password:** Input network password of DVR that is same with DVR setup password.
2. Click OK button. And then the registered site is added on the directory window.

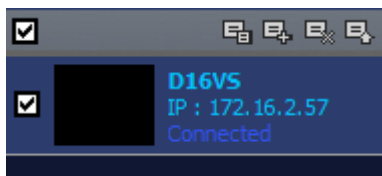

7-8-1-2. Deleting a Site


1. Select the site/sites to delete from the directory window.

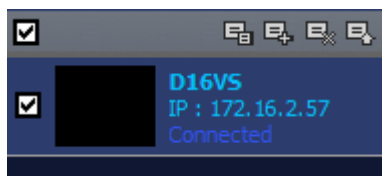


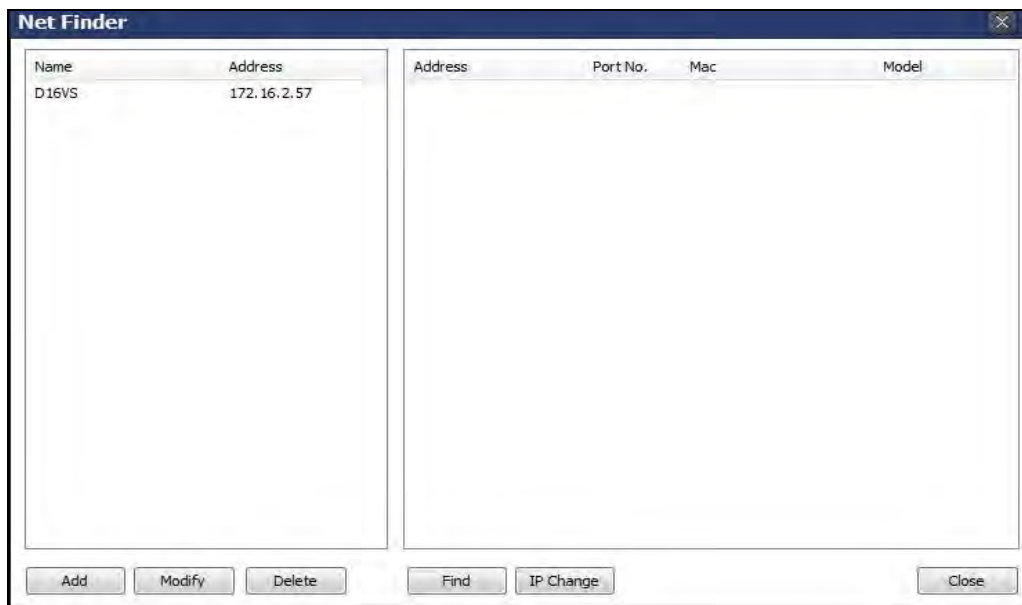
2. Click  SITE DELETE button. And then the selected site/sites is/are deleted.

7-8-1-3. Modify of Sites


1. Select the site/sites to modify from the directory window.

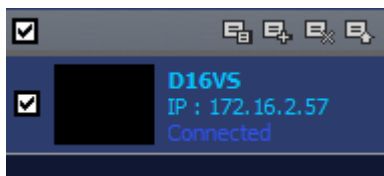

2. Click  NET FINDER button. And then the following window will be displayed as below.




3. Click MODIFY button. And then the modified information is displayed as below.

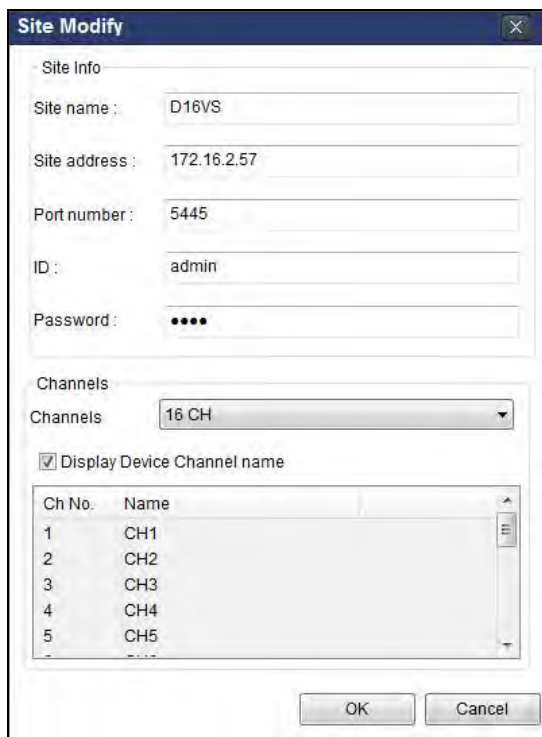


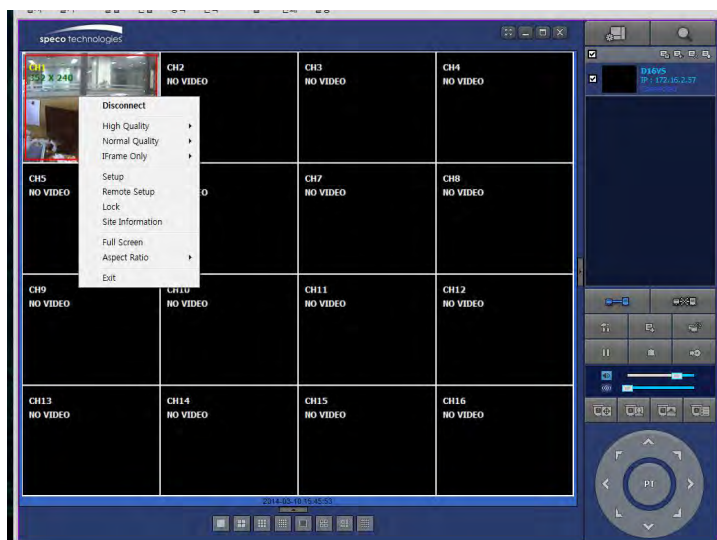
7-8-2. Connect and Disconnect

7-8-2-1. Connect

1. Select site/sites to connect from the directory window.

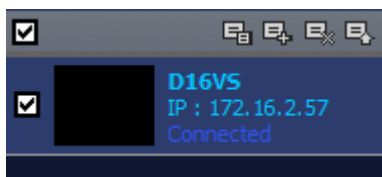


2. Click  CONNECT button, and then site/sites displays/display as connected.




7-8-2-2. Disconnect

1. Select site/sites to disconnect from the directory window.

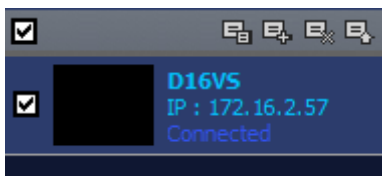



2. Click  DISCONNECT button, and then selected site/sites disconnected.

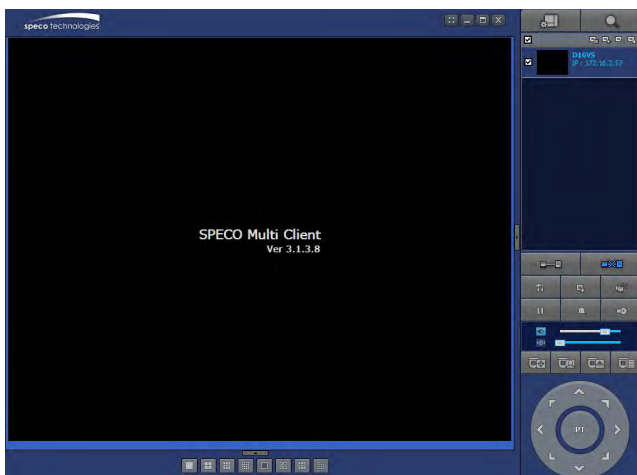

7-8-3. Still-image Capture During Live

 
1. Double-click a channel to capture from the display screen. (Otherwise all channels will be captured.).

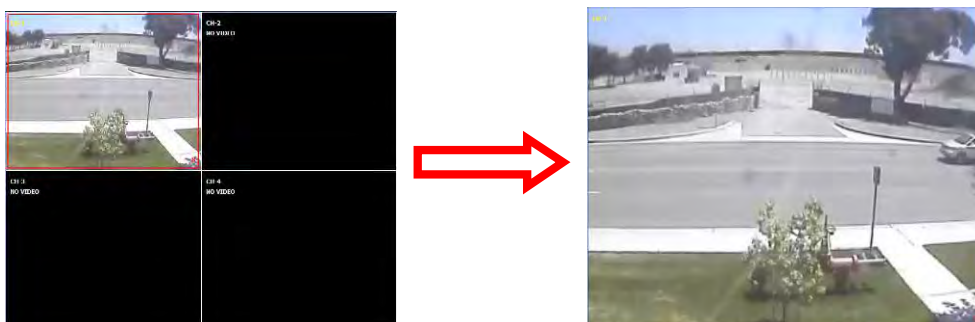


2. Click  CAPTURE button. And then a Capture window will be displayed as below.




3. Set Save Path, File Name, and File Format. And then click OK button.
4. Still image is saved as set in Capture window.

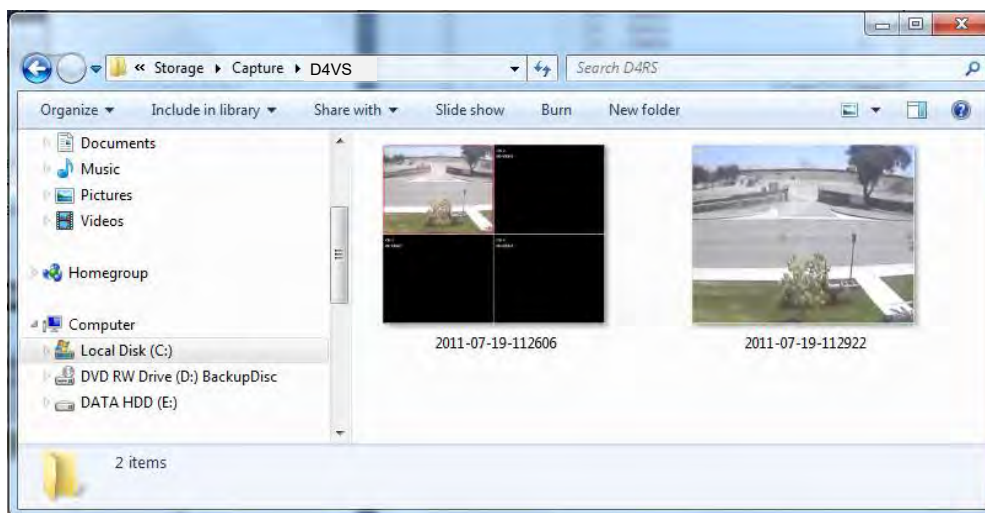



7-8-4. Recording Video on Local PC During Live


1. Click  SETUP button. And then a setup window will be displayed as below.
2. Select Record and set the values.

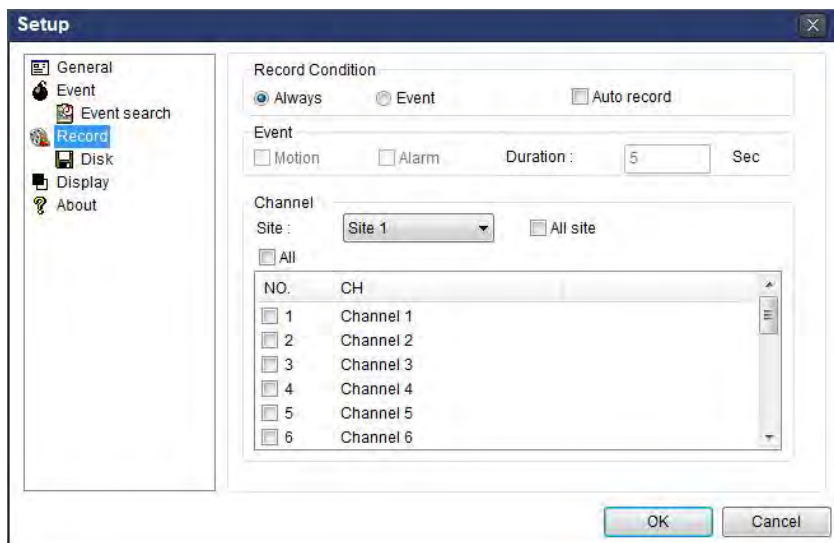

3. Select Disk and set the values.

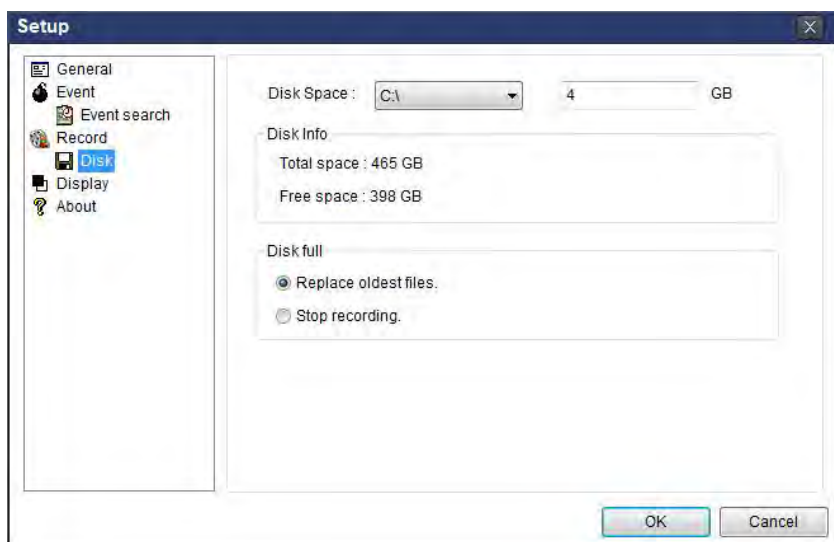


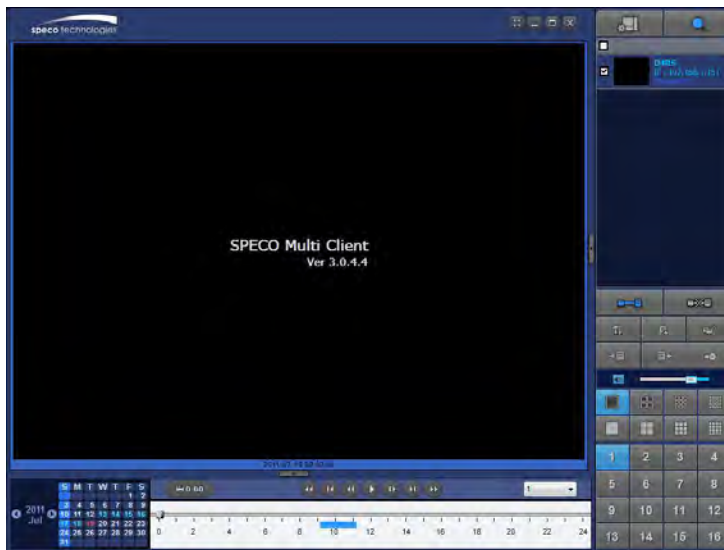
4. Click  RECORD ON button. And the color of button is changed.
5. Live video data is recorded as set in Record and Disk setup. These video data can be searched and play-backed with Local Playback.

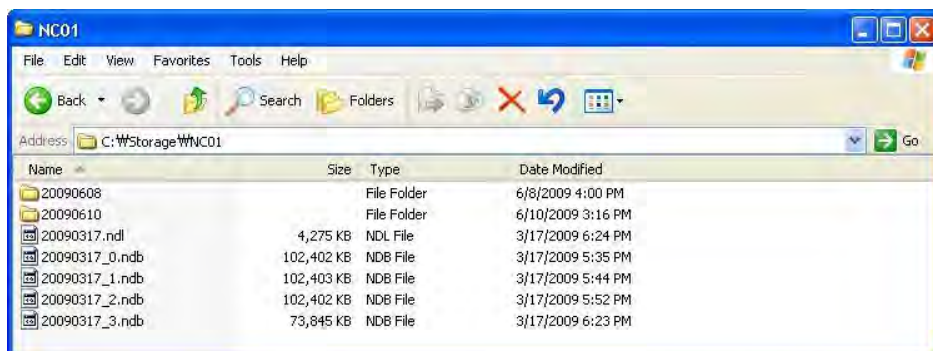


7-8-5. Local Playback and Remote Playback

7-8-5-1. Playback of Recorded Video on a Local PC

1. Click  LOCAL PLAYBACK. And then Playback Window will be displayed over the Live Window.



2. Select site/sites to connect from the directory window.

3. Click  CONNECT button. And then Green bar displays on Search calendar and timeline scale window.



6. Move the marker on the timeline scale to where there is video data and press the PLAY button.




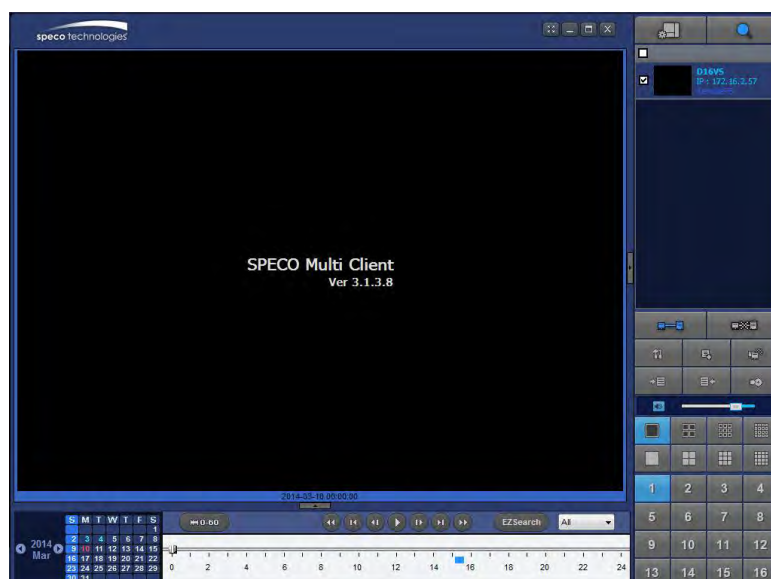
7. Video data that is recorded on local PC will be play-backed.




8. Use the mouse scroll to digitally zoom in and out from a single channel display.

7-8-5-2. Playback of Recorded Video on Remote DVR

1. Click  REMOTE PLAYBACK. And then Playback Window will be displayed.

 


2. Select the site to connect from the directory window.

3. Click  CONNECT. And then Green bar displays on Search calendar and timeline scale.



4. Move the marker on the timeline scale to where there is video data and press the PLAY button.



5. Video data that is recorded on the remote DVR is play-backed.




7-8-6. AVI Backup during Playback

 
You can back up the recorded videos in AVI format during playback.

1. Double-click the target channel to backup.
2. Select the beginning time by using the search calendar and timeline scale bar.




3. Click  EZCOPY START button on the timeline scale to select the beginning point of the backup.

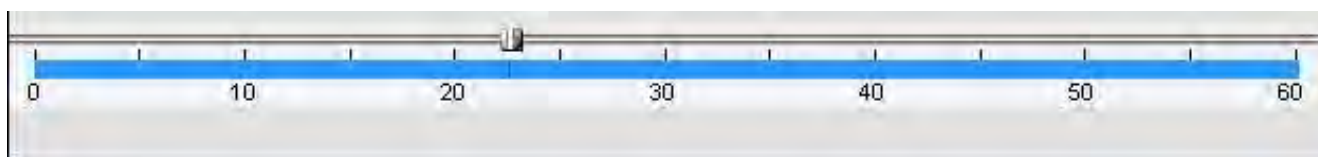


4. Click  EZCOPY END button on the timeline scale to select the ending point of the backup. Then, the selected starting point and the ending point on the timeline scale bar will be marked in green.



5. Click  BACKUP. And then the BACKUP window will be displayed as below.

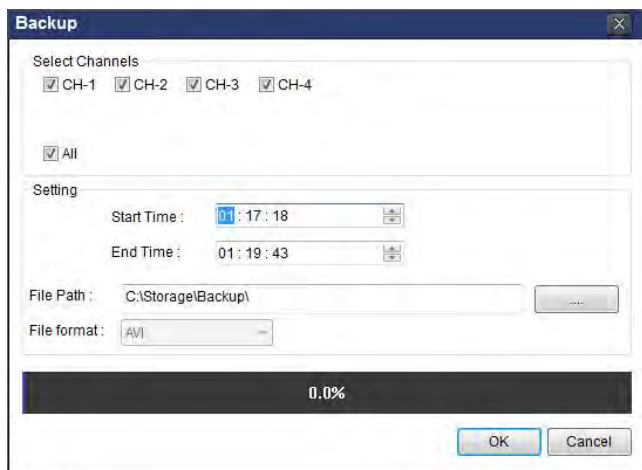

6. You can also set the beginning time and ending time on this window. After selecting a channel for backup, click the OK button. The backup will begin.

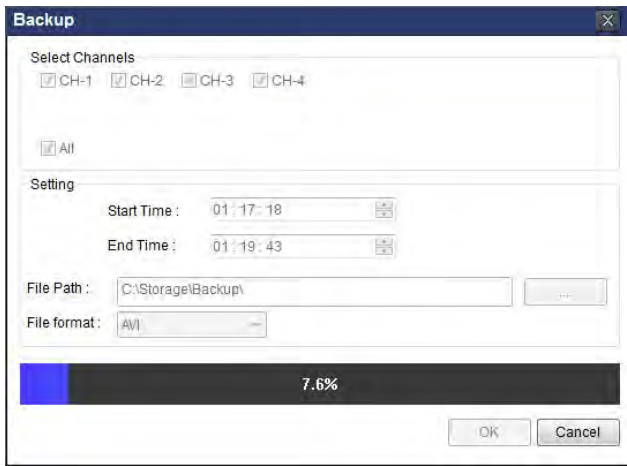

7. AVI video data is recorded as selected in AVI Backup window. AVI format video can be played back by using Window Media Player™ or other media player that is compatible with AVI format video.



8. Network Access Using the Web-Browser Viewer

The DVR provides a live remote monitoring feature by web-browser viewer. (NOTE: Web-Browser is only available for Internet Explorer)


1. Check the IP address of the DVR from SETUP>SYSTEM>DESCRIPTION>IP ADDRESS or
2. Input the IP address or Domain name address that you pre-registered.



3. Click this bar. Then the dialog box is displayed.




4. Click "Install" to download and install the ActiveX control.

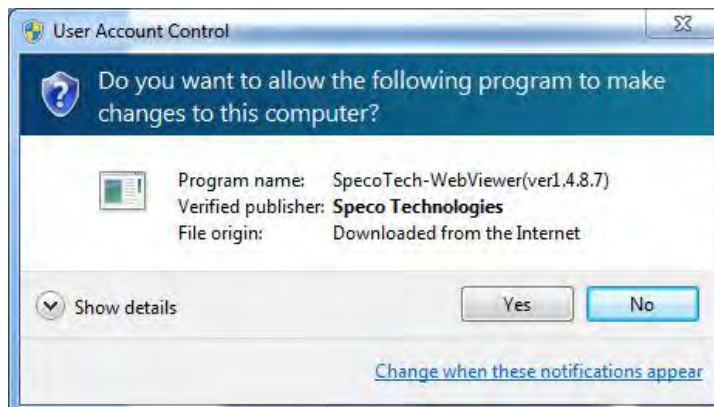

5. The Web Browser Viewer will be displayed as below after the ActiveX installation



6. Click the CONNECT button on the Left upper corner of web-viewer. Then "Connect" dialog is displayed.

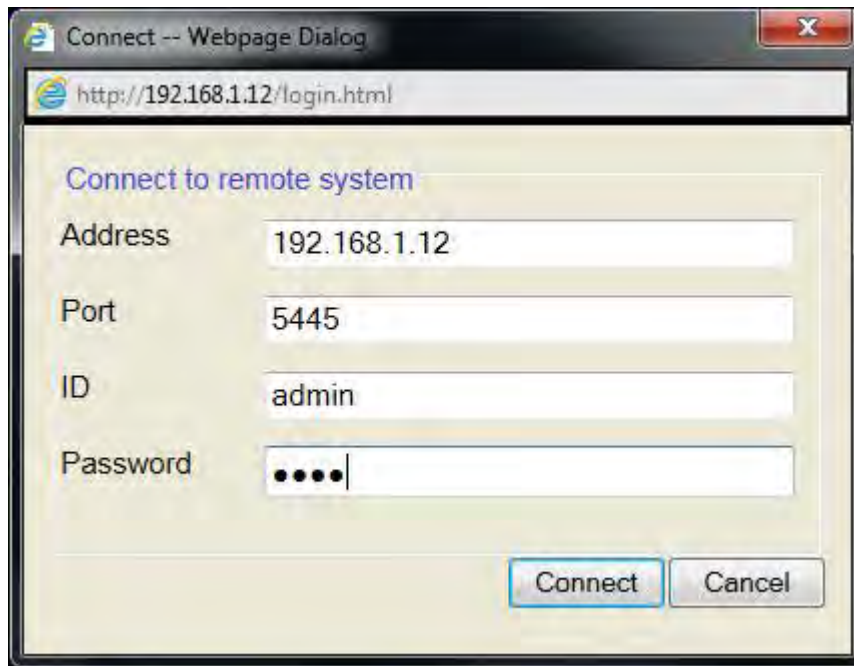

- **Site Name:** Input a name that properly describes a site.
 - **IP Address:** Input IP address (Public IP address of a router that DVR is connected.) or Domain name
 - **Port Number:** Default Port Number is “5445”.
 - **ID:** Input ID of DVR. Default ID is “admin”.
7. **Password:** Input network password of DVR that is same with DVR setup password.
 8. Then the cameras connected to the DVR are displayed on the screen.
 9. Use mouse scroll to digitally zoom in and out from a single channel display.



9. Network Access Using the Smart Phone Viewer



Notice

Data Usage applied without Wi-Fi connection. Please check with your Phone Carrier.

9-1. App Viewer for iPhone

1. Enter the Apple App Store.




2. Search “Speco Player” in the App Store.



Notice

SPECO Player is for the **VX**, VT, HT, HS, ZS, NS, DS, RS, WRS and HD series DVRs. SPECO VIEWER is not compatible with the T Series DVR's (TH, TN or TL) or the PC


9-1-1. Live

1. Open the installed “Speco Player” App and click  button to add a remote device.
2. Enter the site name, IP or DDNS address, Network Port number (default 5445), ID(default admin) and Password that is same with DVR setup password. Then, click “Save” button.




* Note: Network Port and Web Port must be forwarded before adding a new site.

3. Select a registered device and select “Live”. Then click “Connect” button.

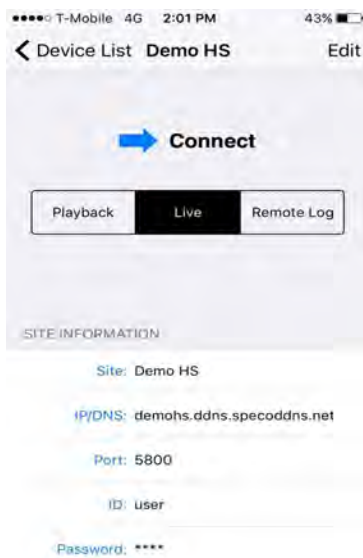

4. The app will display the selected channel(s). Double tap the channel screen to switch 1 channel display to 4, 8, 10, 16 channels split display depending on the DVR.

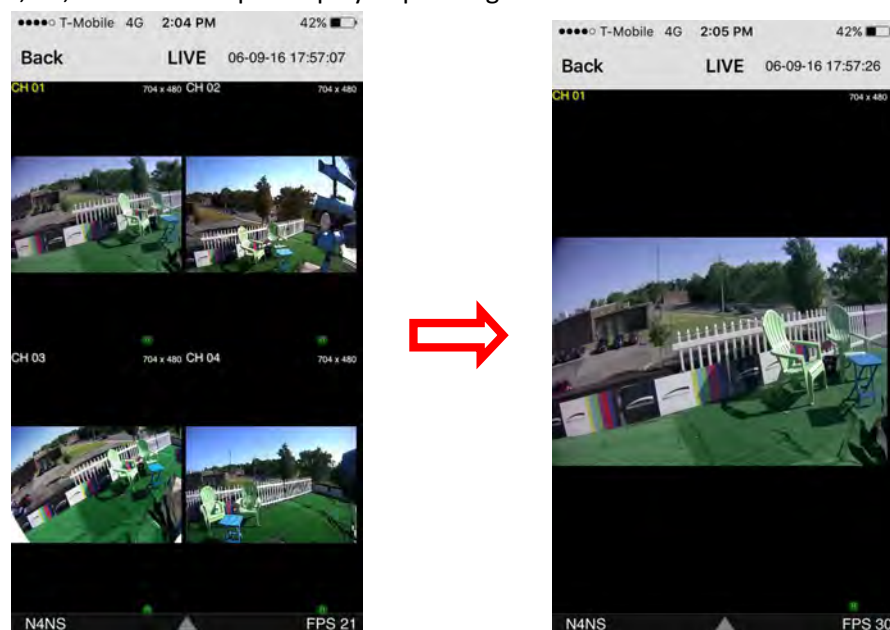

5. To select the display mode(1, 4, 9, 10 or 16 split display), tap the arrow menus button



 
6. Drag and drop channels
Touch and drag one channel to the other channel to swap the channel location. To swap the channel, drag a channel to another channel.
7. Digital Zoom In-Out
Double tap on the desired channel to view in 1channel mode. Then use the iPhone zoom feature using two fingers to pinch the screen to zoom in or out on the video image. User can also move the zoomed image around by touching the desired spot and dragging the zoom image.



9-1-2.PTZ Control

To control the PTZ functions of the camera, tap the menu button. Then PTZ menu icons will display. Using the PTZ icon on the screen, can control PTZF functions.



9-1-3. Playback


1. Select mode as 'Playback'  and click 'Connect' button. Then select Date & Time and click 'Connect' button.

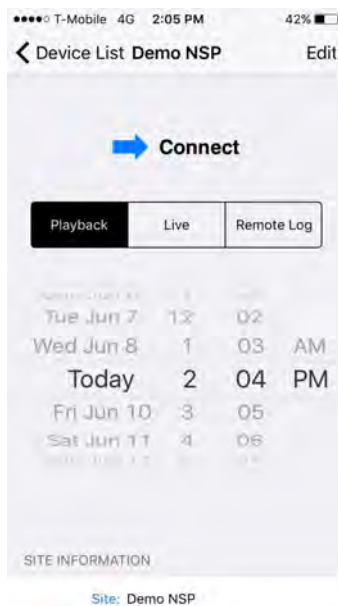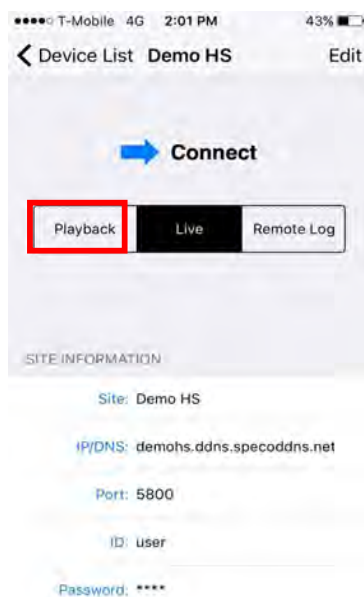

2. The app will display the selected channel(s). Double tap the channel screen to switch 1 channel display to 4, 8, 10, 16 channels split display depending on the DVR.



3. Tap the menu button. Then Playback menu icons will display.

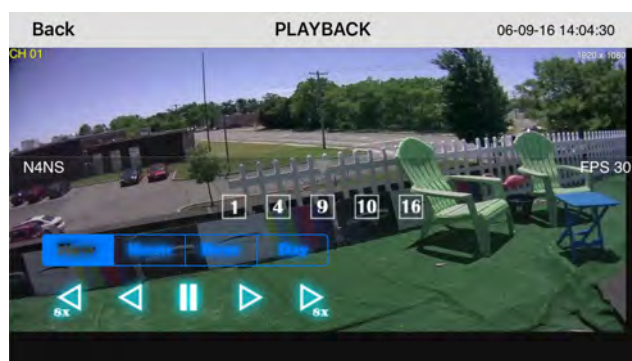

9-2. App Viewer for Android Phone

1. Enter the Android Play Store.



2. Search "Speco Player" in the Android Market and install the "Speco Player" app.





Notice


SPECO Player is for the **VX**, VT, HT, NS, HS, DS, RS, WRS and HD series DVRs.
SPECO VIEWER is not compatible with the T Series DVR's (TH, TN or TL) or the PC

9-2-1. Live

1. Open the installed "Speco Player" App and select the "Live view / Playback". Then click the menu button of the phone to add a remote device.
2. Select the registered device and select 'Live view' and select up to 4 channels to monitor. Then click 'Start' button.

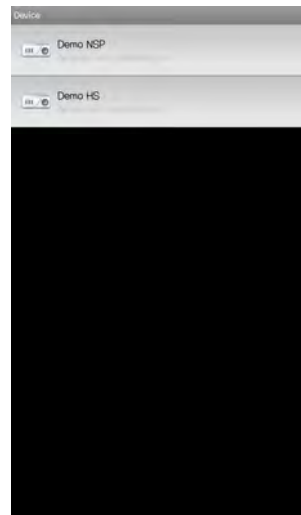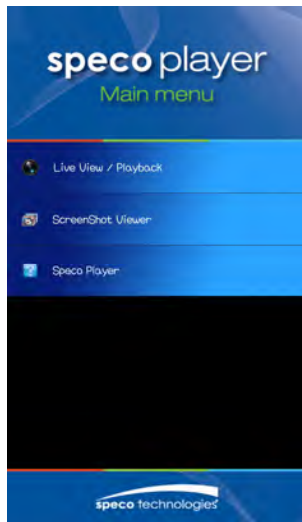

3. The app will display the selected channel(s). Double tap the channel screen to switch 1 channel display to 4 channels split display.

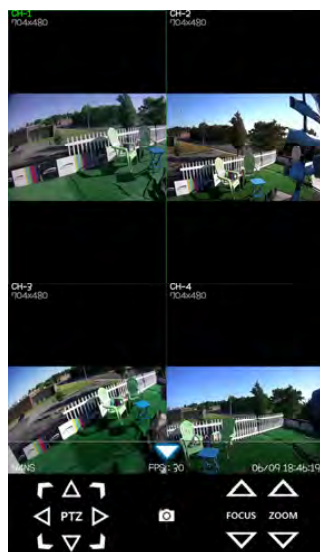

9-2-2. Playback

1. Select the registered device and select 'Play back' and select up to 4 channels to search. Then click 'Start' button. As soon as setting the date and time to search, the app will start the playback.





- The app will display the selected channel(s). Double tap the channel screen to switch 1 channel display to 4 channels split display.




9-2-3.PTZ Control

To control the PTZ function of the camera, tap the channel screen, and then the channel name will be highlighted in Light Green. Using the PTZ menu icons on the screen, control PTZF.

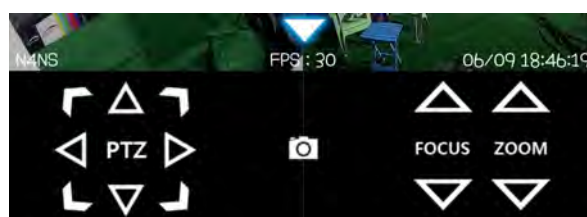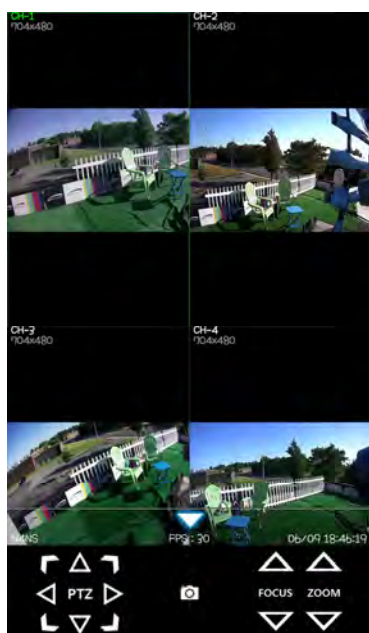


APPENDIX: Network Connection - LAN

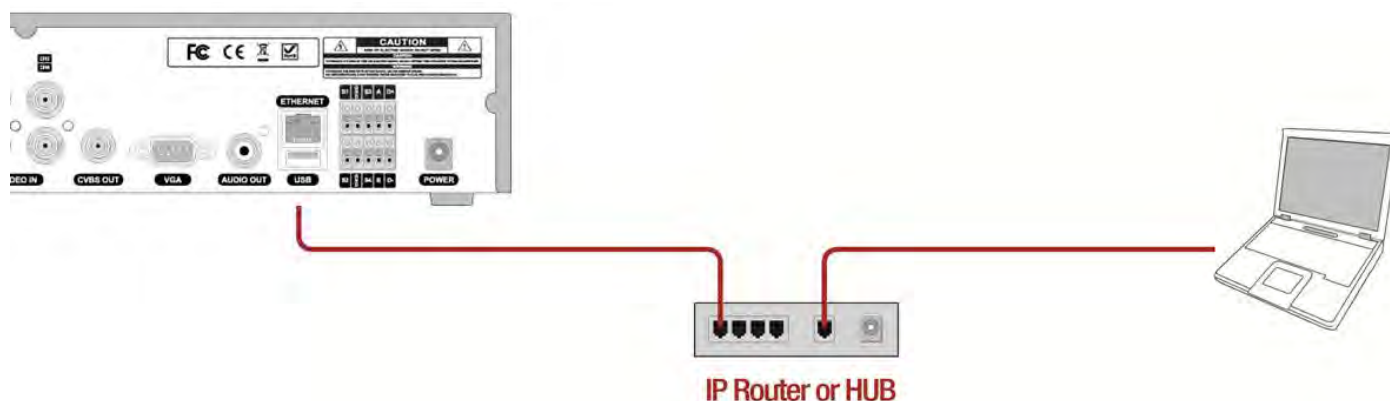

1. Install the network client software from the supplied CD.
2. Check the IP address from SETUP > SYSTEM > DESCRIPTION or SETUP>NETWORK of DVR.



3. Run the network client software.

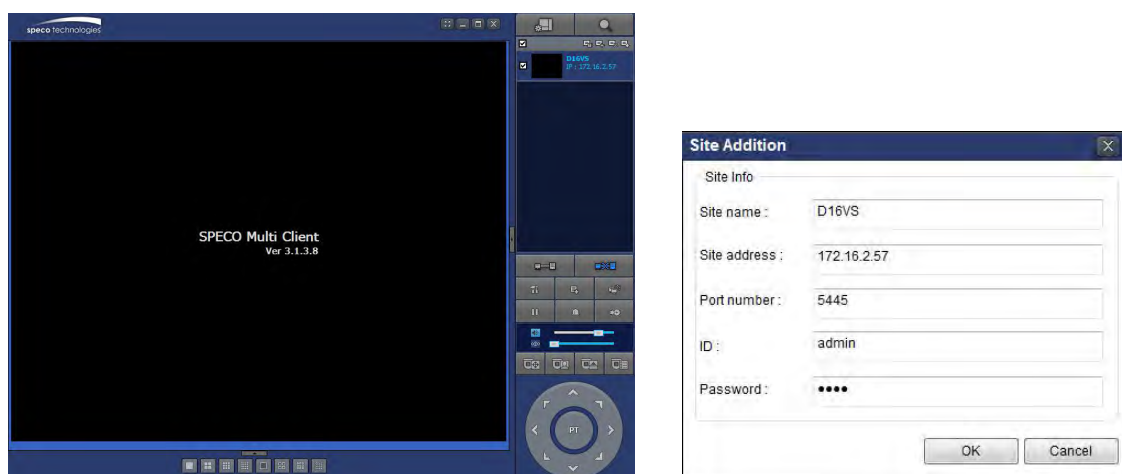


4. Input Site Name, Site Address (IP address), Port Number, and Password on the connect window.
 - **Site Name:** Input a name that properly describes a site.
 - **IP Address:** Input IP address
 - **Port Number:** Default Port Number is "5445".
 - **ID:** Input ID of DVR. Default ID is "admin".
 - **Password:** Input network password of DVR that is same with DVR setup password

5. Select a site by checking the box, and Press  button to connect to the site.



APPENDIX: Network Connection – Internet and DDNS

Dynamic Domain Name System (DDNS) allows a domain name to be constantly synchronized with a dynamic IP address. A current dynamic IP address is being associated with a static domain name.

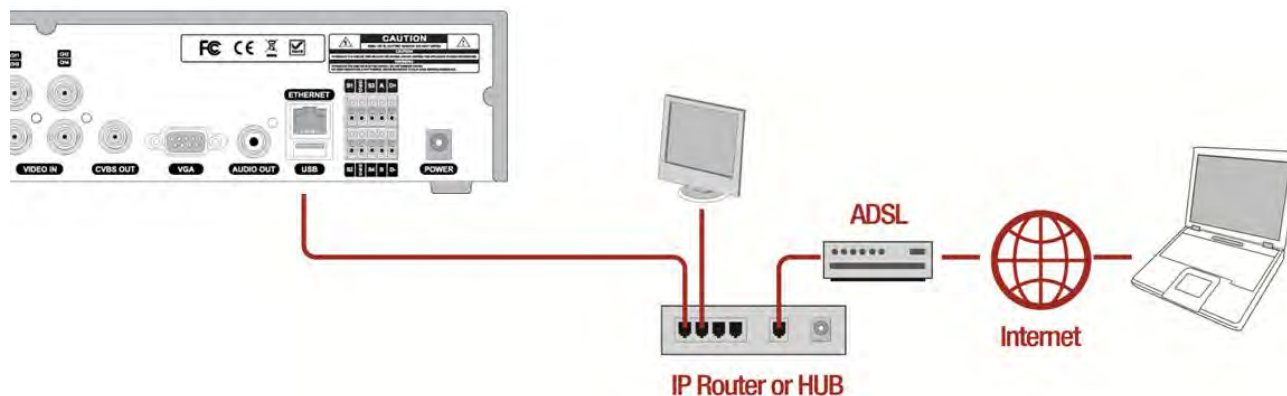

1. Go to SETUP>NETWORK>DDNS and set the DDNS SERVER to ON.

| | |
|---|--------------|
| Enable DDNS | on |
| Host Name | d16vx_0b06e4 |
| Submit/Update | on |
| ezDDNS | off |
| <input type="button" value="Apply"/> <input type="button" value="Close"/> | |

If you set **ezDDNS** to ON, the host name is automatically generated and registered.

2. Go to SETUP>NETWORK>DDNS>HOST NAME. Manually enter a domain name using the virtual keyboard and click ENTER button.

| | | | | | | | | | | | | | | | | |
|-----------|--------------|-------|---|---|---|---|---|---|---|---|---|-------|-------|--|--|--|
| Host Name | d16vx_0b06e4 | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 | - | = | ← | | | |
| | | q | w | e | r | t | y | u | i | o | p | [|] | | | |
| | Caps | a | s | d | f | g | h | j | k | l | ; | ' | Enter | | | |
| | Shift | z | x | c | v | b | n | m | , | . | / | > | Shift | | | |
| | Clear | Space | | | | | | | | | | Close | | | | |

3. When a manual host name is completed, Go to SETUP>NETWORK>DDNS>SUBMIT/UPDATE and select ON to submit the settings on the SPECO DDNS.


Once the setting is completed, the DDNS address will be:

<http://hostname.ddns.specoddns.net>

For example, if you enter the host name as "D16VX", then the address will be:

<http://d16vx.ddns.specoddns.net>


4. When DDNS setting is done, click the APPLY button. Otherwise DDNS setting will not be applied.
5. When you exit SETUP menu, DDNS NOTIFIY window will pop up.

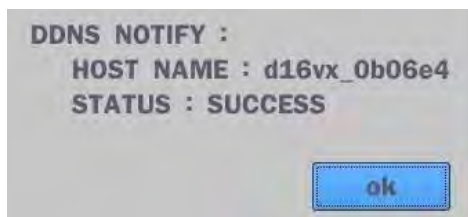

6. DDNS registration status can be checked from SYSTEM INFORMATION or SETUP>SYSTEM>DESCRIPTION>DDNS STATUS



7. Check the NETWORK PORT (Default: 5445), WEB PORT (Default: 80), and the IP Address of the DVR from SETUP>NETWORK.

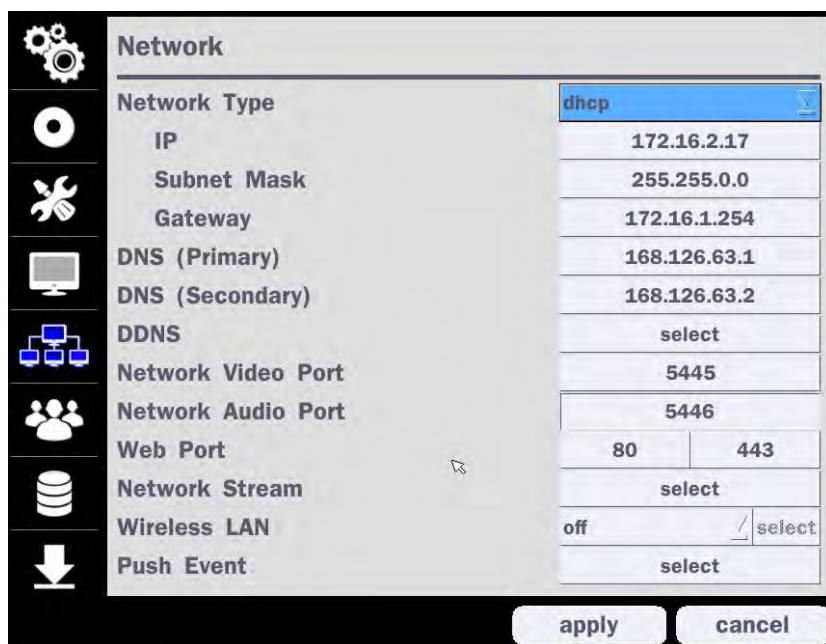


8. Port forward the NETWORK PORT (Default: 5445) and WEB PORT (Default: 80) of the private IP Address of the DVR on the network router.



Please refer to the user manual and guide for the detailed steps for port forwarding for specific router model.

9. Run the network client software.

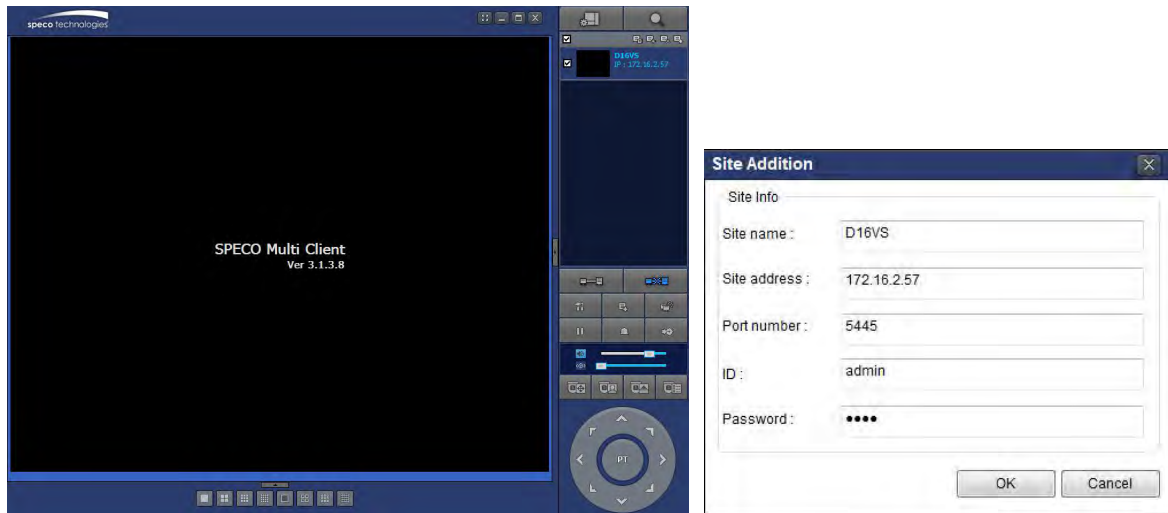

10. Input Site Name, Site Address (IP address), Port No., and Password on the connect window.

- **Site Name:** Input a name that properly describes a site.
- **IP Address:** Domain name or Public IP address of a router that DVR is connected.
- **Port Number:** Default Port Number is “5445”.
- **ID:** Input ID of DVR. Default ID is “admin”.
- **Password:** Input network password of DVR that is same with DVR setup password.

11. And select the OK button. Then, press  button after checking the left check box.

