




HB0635 to HB1240 PARTS VIEW

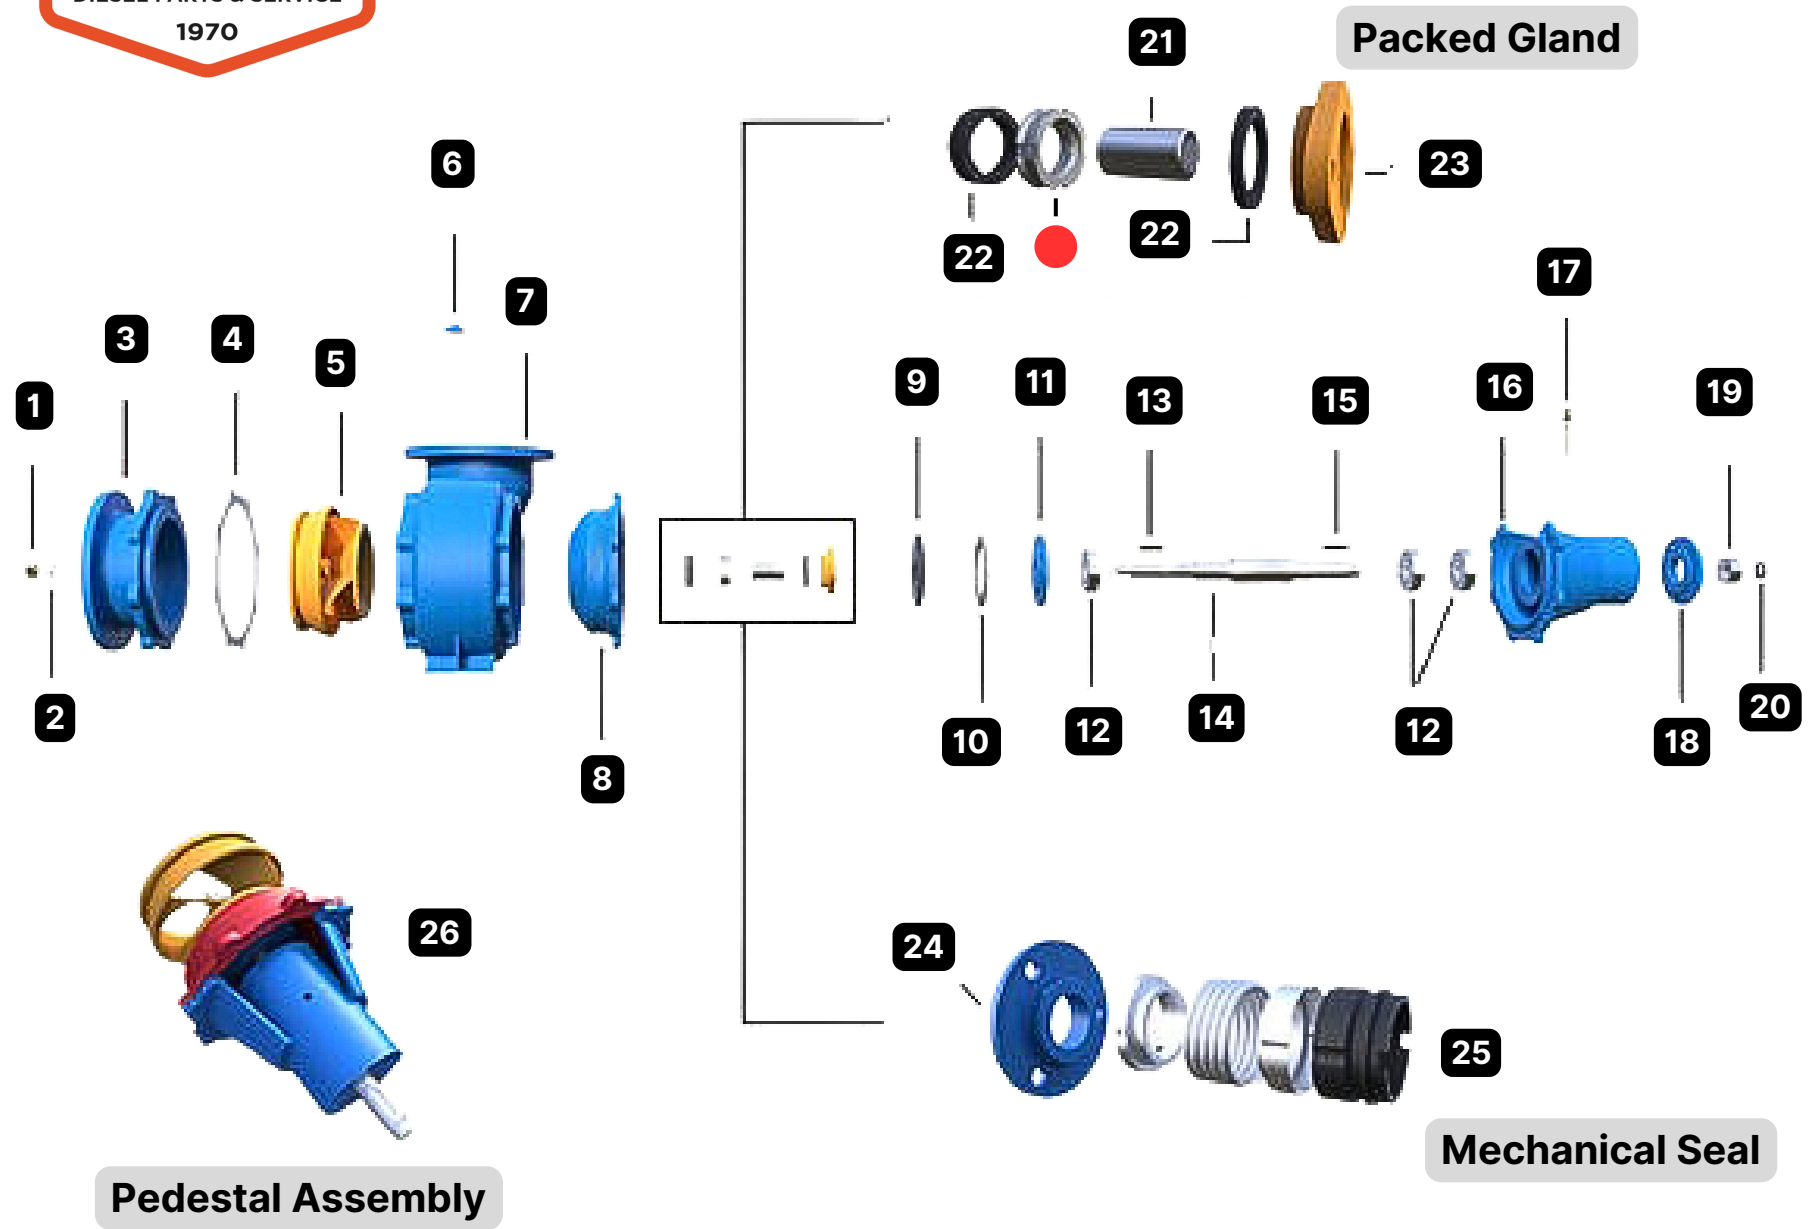

1	Impeller Nut
2	Impeller washer
3	Shroud
4	Gasket
5	Impeller
6	Plug
7	Casing
8	Stuffing Box
9	Slinger
10	Seal
11	Bearing Cover
12	Bearing x 3
13	Impeller Key
14	Shaft
15	Drive Key
16	Bearing Housing
17	Dip Stick
18	Bearing Cover
19	Shaft Sleeve
20	Circular Nut
21	Gland Sleeve
22	Gland Packing
23	Gland
24	Seal Retainer
25	Mechanical Seal

Item Not Required