



Innovation In and Out of Parlour

Reader Wired Sync Manual

Version - 2.1

Date - November 2021





Index

Manual Version	3
Plug from master AI Mk1 reader (black) to slave GT Mk1 reader (black)	4
Plug from master AI Mk1 reader (black) to slave GT Mk2 reader (blue)	5
Plug from master AT Mk2 reader (blue) to slave GT Mk2 reader (blue)	6





Manual Versions

v1.0 - 2015	FirstVersion of Manual (plug from shedding gate multiplex PCB)
v2.0 - 2016Added two new diagram	ns - AI to GT Mk1 reader to Mk2 slave and Mk2 reader to Mk2 slave
v2.1 - November 2021	Updatedwiring connection points for sync






Plug from Master AI Mk1 Reader (Black) to Slave GT Mk1 Reader (Black)

Reader "Wired Sync" PCB RWS226 ISS A



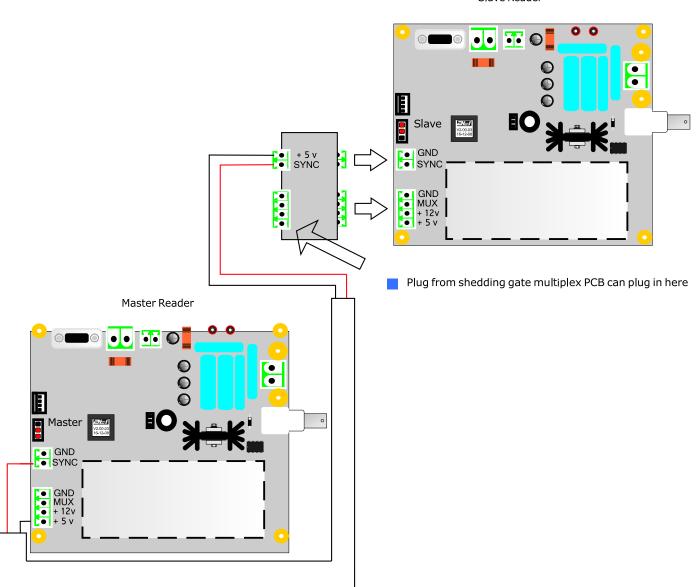






Plug from Master AI Mk1 Reader (Black) to Slave GT Mk2 Reader (Blue)

Slave Reader

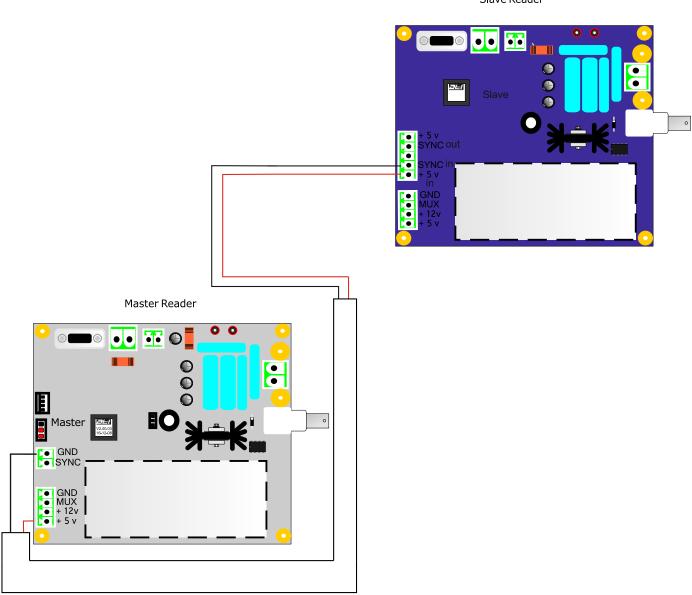





Plug from Master AI Mk2 Reader (Blue) to Slave GT Mk2 Reader (Blue)

Slave Reader

