

DATA SHEET: 60 ATL Cowculator for Windows Command Lines #1:

ATL Cowculator for Windows can be commanded to perform actions from arguments entered into the command line.

The ATL In Parlour and Out of Parlour Controls.

a. To upload to a system:

Cowculator -send [-to] [File Name] [-format]

[-to] this can be one of the following:

-ip For In Parlour

-oop For Out of Parlour

[-format] this can be one of the following:

-win The native file format of ATL Cowculator for Windows

-dos The old style format

-xml An XML serialization file

b. To download from a system

Cowculator -get [-from] [File Name] [-format]

[-from] this can be one of the following:

-ip For In Parlour

-oop For Out of Parlour

-oopatn For Out of Parlour Attention Lists

[-format] this can be one of the following:

-win The native file format of ATL Cowculator for Windows

-dos The old style format

-csv A Comma Seperated Values File

-xml An XML serialization file