

# Setting up WiFi on your Yealink T46 Handset

This is our handy guide showing you how to set up a WiFi connection on your Yealink T46 handset.

## 1. Access the main phone menu



Fig. 1

Press the soft key highlighted in fig. 1.

This displays the phone's main menu and settings.

## 2. Navigate to 'Basic'

Using your Yealink T46's arrow keys, navigate to 'Basic'.

When selected, press the 'OK' button.

## 4. Choose option 4

Using the arrow keys, navigate to option 4. Available Network(s).

When selected, press the 'OK' button.

## 6. Find your network

Using the arrow keys, navigate to your network.

When selected, press the 'OK' button.

## 8. Press 'OK'

Once you have entered the correct password, press the 'OK' button to confirm.

## 3. Navigate to 'Wi-Fi'

Using the arrow keys, navigate to option 7. Wi-Fi.

When selected, press the 'OK' button.

## 5. Press 'scan'

Using your soft key highlighted in fig. 2, press the scan option.



Fig. 2

## 7. Input your password

Using the number pad on your handset, input your WiFi password.

You can use the soft key in fig. 3 to toggle between numbers, lower-case letters, upper-case letters and '2aB' style.



Fig. 3

## 9. Return to home screen

Press the soft key in fig. 4 four times to return to the main menu.



Fig. 4

If you've got any issues connecting your Yealink T46 handset to your WiFi network—give us a call on 03331 301 021.