


# VOLTSAFE WINTER

Magnetic Block Heater Plug with App Controlled Timer



## Parts Identification

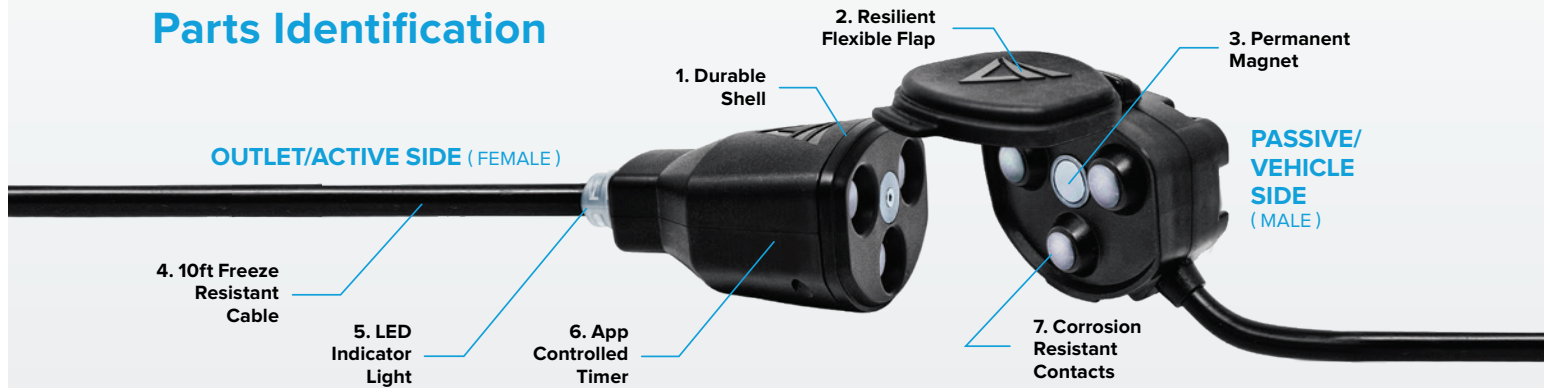

**1. Durable Shell** - Rugged shell protects VoltSafe Winter in most weather conditions and environments. When not in use, put down product gently, as is not meant to be dropped from heights above 4 feet.

**2. Resilient Flexible Flap** - Easily snaps back in place to protect the face of the connector. If snow, ice or debris gets stuck under flap, clean with a soft fabric when not in use. Do not use metal instruments or metal scour pads to clean, as it may negatively affect magnet and/or electrical contacts.

**3. Permanent Magnet** - High-grade permanent magnet allows for secure connection (n52). Not meant to be used with any other magnet than those on the VoltSafe Winter. Clear any metal debris from magnet with soft fabric for ideal working condition.

**4. 10ft Freeze Resistant Cable** - Easily reaches vehicle's front grill and is freeze resistant to -50°C. Ideal temperature range is -35°C - +35°C

**5. LED Indicator Light** - Indicates when power is flowing. If light turns on when male and female sides of VoltSafe Winter are not connected, immediately discontinue use and return to manufacturer/dealer or contact warranties@voltsafe.com

**6. App Controlled Timer** - Control the plug from your phone to set timer and to start saving money! VoltSafe App available in Google Play & App Stores.

**7. Corrosion Resistant Contacts** - Nickel-plated contacts resistant to oxidization from moisture and salt. Do not use metal or abrasive products to clean pads. Wipe with soft towel to remove any debris.

## Important Safeguards

Basic safety precautions should always be followed when using electrical products, including the following:

1. Read all instructions before using.
2. To protect against electrical shock, do not submerge the cord or plug in water or other liquids.
3. This product is not intended to be used by children. Close supervision is necessary when any electrical product is used by or near children.
4. Do not operate any electrical product with a damaged cord or plug or after the product malfunctions or has been damaged in any manner. Return product to the nearest authorized dealer for examination, repair or adjustment.
5. The use of electrical attachments not recommended by the manufacturer may result in fire, electric shock or injury.
6. Do not let the cord or plug touch hot surfaces. Do not place on or near a heating element or hot automotive parts.
7. Do not use the magnetic block heater plug for anything other than its intended use and under recommended conditions.
8. Do not rub or clean metal contacts with other metal material or scouring pads as it could affect magnet and/or electrical contacts, creating a risk of malfunction and electric shock.
9. Ensure there is nothing in between male and female surfaces before connecting them, and do not attempt to insert anything between the male and female sides when they are in contact and power is flowing.
10. Make sure indicator light turns on when both sides come in contact.
11. If indicator light is turned on when both sides of the plug are not in contact, immediately unplug from power source, stop use and return for inspection and/or exchange. Contact support@voltsafe.com.
12. The VoltSafe Winter block heater plug is a smart plug and has computerized elements inside the plug. Despite its durability, place plug down gently when not in use. It is not intended to be dropped at heights above 4 feet.

## Before First Use

1. Read all instructions and important safeguards.
2. Remove all packaging materials and make sure items are received in good condition.
3. Ensure all items are in the box: (male plug with attached cord, female plug with attached cord, 2 zip ties, instruction manual)
4. Tear up and discard any plastic, as it can pose a risk to children.
5. Despite its weather resistance, do not fully immerse the cord or plug in liquid at any time.