



Oak Remote Control User Guide




Remote control layout

- | | | | |
|----|--|----|---------------------------------------|
| 1 | TV standby button | 10 | Set-top box standby button |
| 2 | PVR or (with SHIFT) AV source select button | 11 | Mute button |
| 3 | Electronic Program Guide button | 12 | Set-top box PVR transport buttons |
| 4 | Previous channel select button | 13 | Stop button |
| 5 | Set-top box menu button | 14 | Information button |
| 6 | Back button | 15 | Navigation and OK buttons |
| 7 | Volume up and down buttons | 16 | Exit button |
| 8 | Colour navigation buttons | 17 | Channel up and down buttons |
| 9 | Teletext button (press and release) and SHIFT function | 18 | Page up and down buttons |
| 10 | Set-top box standby button | 19 | Channel select buttons and text entry |
| 11 | Mute button | 20 | Subtitles button |
| 12 | Set-top box PVR transport buttons | | |
| 13 | Stop button | | |
| 14 | Information button | | |
| 15 | Navigation and OK buttons | | |
| 16 | Exit button | | |
| 17 | Channel up and down buttons | | |
| 18 | Page up and down buttons | | |
| 19 | Channel select buttons and text entry | | |
| 20 | Subtitles button | | |

Note: Some button functionality (e.g. PVR) may not be available on specific models of set-top box (STB), and functionality also varies with the type of TV service delivered by your service provider.

1. Inserting batteries

1. Slide the battery housing cover downwards to remove.
2. Insert 2 x AAA batteries observing the correct polarity.
3. Refit the battery housing cover.

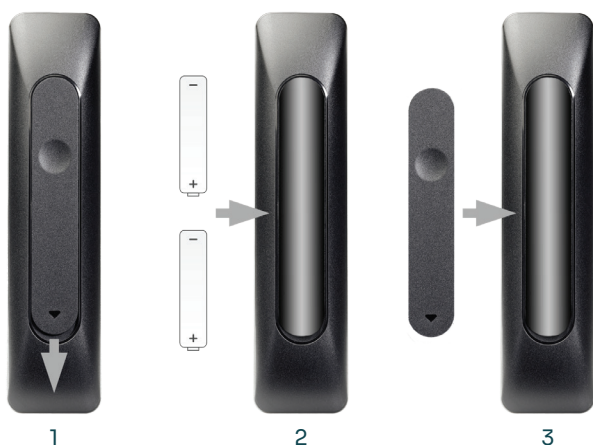

Battery information

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries with the remote control. Do not attempt to recharge the batteries.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.

Immediately remove any leaking batteries. Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.

2. Operation

When the remote control is first operated all buttons transmit commands for the STB. The exact button function will depend on your service provider. When pressing a remote control button point the remote control towards the front of the STB to ensure correct operation. Do not cover the infra-red (IR) window at the front of the STB.

When a button on the remote control is pressed, either the STB standby button or the TV standby button (if a TV brand has been entered) will flash, depending on which product is being controlled by the remote control.

If a button is pressed for more than 30 seconds the remote control will stop transmitting commands to preserve battery life.

3. TV control setup: Brand Search

The remote control can be programmed to operate certain functions of your TV set. To do this, follow the instructions below.

In case of a mistake, the process can be exited at any point by pressing and holding the **TEXT/SHIFT** button and at the same time pressing the **STOP** button. The remote control will revert to normal operation and no TV brand code will be stored.

1. Note the brand of your TV set.
2. Find the 4-digit brand code for your TV set by referring to the brand code tables on the Amino resources page (www.amino.tv/resources). Make a note of the brand code.
3. Make sure your TV set is turned on. (The STB does not need to be turned on to perform this programming feature).
4. On the remote control, press and hold the **1** and **3** buttons simultaneously for approximately 3 seconds until the TV standby button remains lit, then release both buttons.
5. Enter the 4 digit brand code for your TV set. On each digit entry the TV standby button will flash. When you enter the 4th digit the TV standby button will flash then remain lit.
6. Point the remote control at your TV set then press and hold down the **TV standby** button or the **Mute** button on the remote control.
7. The TV set will either turn off or display the MUTE symbol on screen (this may take a few minutes). When this happens, release either the TV standby or the Mute button.
8. Press and hold the **TEXT/SHIFT** button and at the same time press the **STOP** button to finish setting up the TV control mode. The TV standby button will go out. The TV control function is now programmed into the remote control.

The following buttons will now operate the TV set: **TV standby, AV source select, Volume Up, Volume Down, Mute.**

If any of these buttons do not operate the TV set, then a **KEY FIX** operation can be performed (see below).

If you change your TV set to a different brand and the remote control requires re-programming, repeat this brand search procedure with your new TV set.

If the remote control cannot find the TV brand, the TV standby button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored.

4. TV control setup: Auto Search

If the TV brand cannot be found by the previous **Brand Search** method then **Auto Search** can be used.

Note: this process may take several minutes to find your TV code.

Make sure your TV set is turned on. The STB does not need to be turned on to perform this programming feature.

1. On the remote control, press and hold the **1** and **3** buttons simultaneously for approximately 3 seconds until the TV standby button remains lit, then release both buttons.
2. Point the remote control at your TV set then press and hold down the **TV standby** button or the **Mute** button.
3. When the TV either turns off or brings up the MUTE symbol on screen, release either the TV standby button or the Mute button. This may take a few minutes to happen.
4. Press and hold the **TEXT/SHIFT** button and at the same time press the **STOP** button to finish setting up the TV control mode. The TV standby button will go out. The TV control function is now programmed into the remote control.

If the remote control cannot find the TV brand, the TV standby button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored.

If **Auto Search** cannot set up operation of the TV set, then the remote is unable to control that TV set.

5. TV control setup: Auto Search

When a TV brand has been programmed into the remote control using either of the previous methods, the following additional buttons can also control the TV set. These can be accessed by pressing and holding the **TEXT/SHIFT** button and at the same time pressing:

Digit buttons 0 – 9, Left, Right, Up, Down, OK, Channel Up, Channel Down, the 4 colour keys

Note: operation of these buttons is not guaranteed to control the functions of your TV set.

6. Key fix

If not all the buttons listed under TV shift functionality operate the TV set, then a **KEY FIX** operation can be performed as follows:

1. Press and hold the **1** and **9** buttons simultaneously for approximately 3 seconds until the **TV standby** button is lit.
2. Try all the above mentioned TV buttons.
3. If the TV does not respond to a button, then hold that button down permanently. The remote control will now step through alternative settings. When the TV responds correctly, release the button.
4. Repeat the procedure for other buttons if necessary.
5. When you have finished, press **TEXT/SHIFT** and **STOP** simultaneously.

7. Removing TV functionality

To reset the remote control and erase the TV functionality:

1. Press and hold the **1** and **6** buttons simultaneously for approximately 3 seconds until the **TV standby** button is lit.
2. Enter the key sequence **9 9 6**. The TV settings will be deleted from the remote control.