

Silas Desk

Assembly Instructions




STOCK Ref.: DOSIL


Imported By: Koble Designs (Justwise Group Ltd). CB11 3AP. United Kingdom

Main Components


Please check you have all the parts listed below

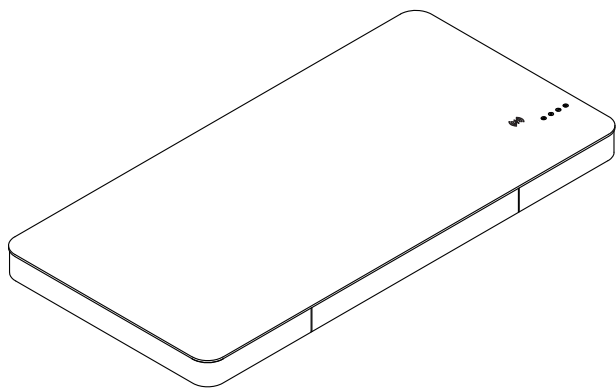

1 Table top Qty 1 (120*60*6.8cm)

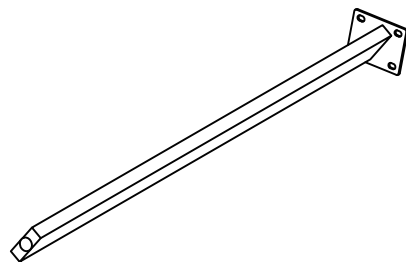

X Leg Qty 2 (72*5*2cm)

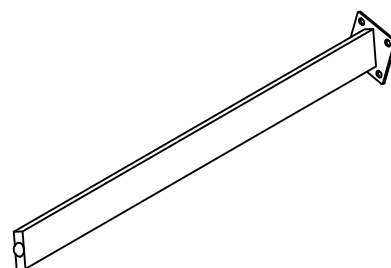


Y Leg Qty 2 (72*5*2cm)

Fixings, Fittings And Tools

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 A



25mm Screw Qty 16

 B




Ø16.5mm Washer Qty 16

C




Cable tidy clip Qty 1

 D




Allen key Qty 1

E

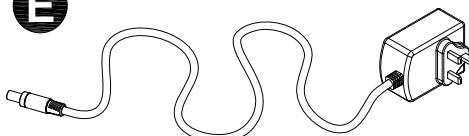

2 m Power cable Qty 1

F

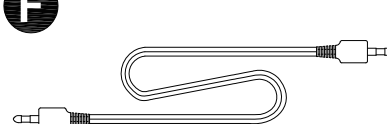

AUX Cable Qty 1

For missing or damaged parts, call our Customer Helpline: 01799 513466 or email help@kobledesigns.com

Assembly Steps

Step 1

Carefully place table top **1** upside down onto a clean flat surface.

Ensure the surface is suitably protected to prevent any damage to top **1**.

Step 2


Assemble legs **X** and **Y** to table Top **1** using fixings **B** and **A**.

Note: Legs **X** must be located diagonally opposite each other.


Legs **Y** must be located diagonally opposite each other.

Step 3

Secure power cable **E** to the underside of top using cable clip **C**.

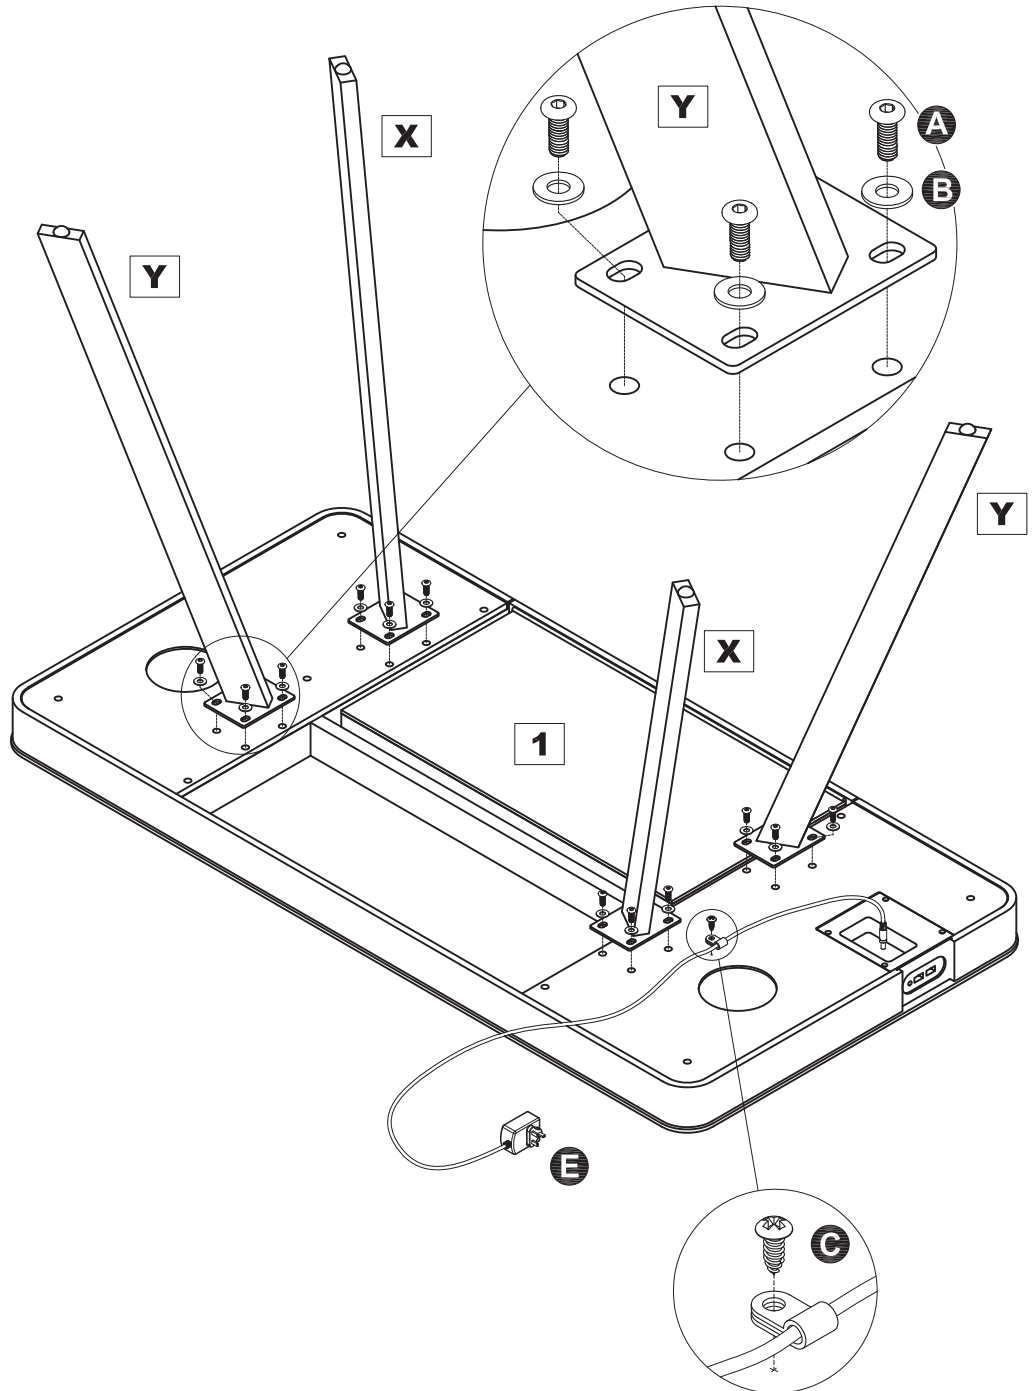


A

 

25mm Screw Qty 16

 B




Ø16.5mm Washer Qty 16

C



Cable tidy clip Qty 1

 D



Allen key Qty 1


E




2 m Power cable Qty 1

Connector assembly diagram


Connection on underside of desk top

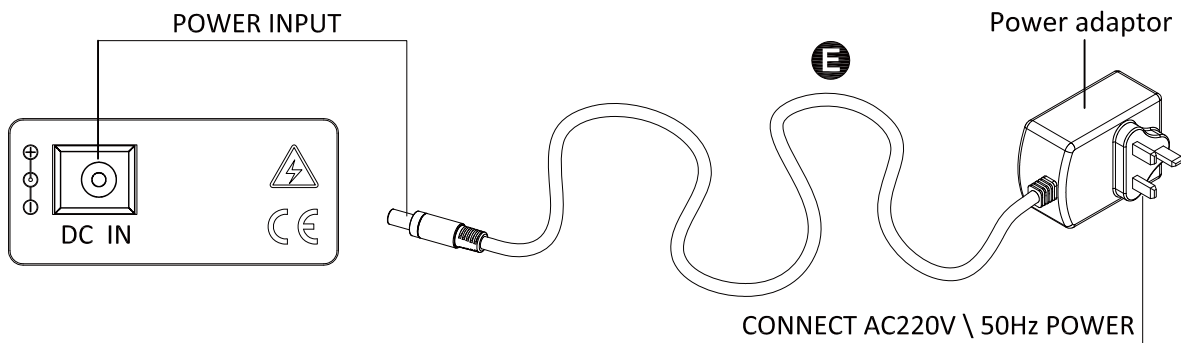

Connection on side of desk top

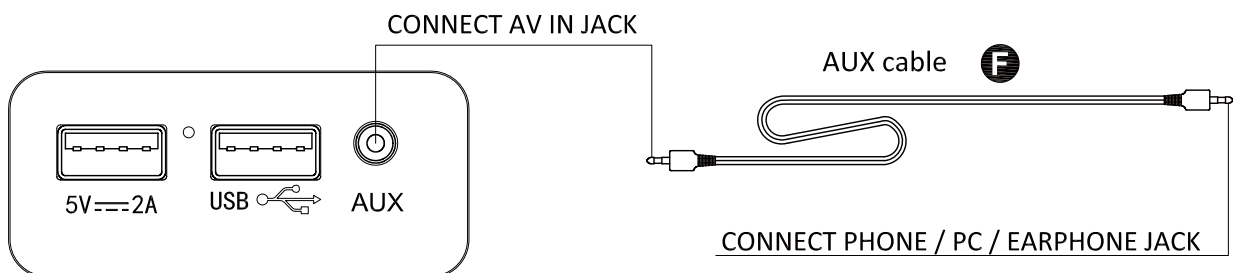

USB Panel Function

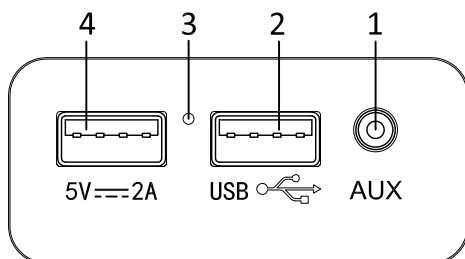

1. AUX IN. Connects with Computer, tablet, phone MP3 etc Audio output
2. USB socket. Supports USB input through memory stick and Android recharge. It will not support audio output from any phone or tablet. It may not support iPhone recharging (higher power demand).
3. Power light
4. USB socket. Supports iPhone / Android recharge. It will not support USB input or data reading through any mobile device.

Music Playback Modes

On switching on the desk, it will automatically enter 'Bluetooth Mode', with an audible announcement
Change to 'USB Mode' by inserting a memory stick into USB Port 2 (audible confirmation is heard)
Change to 'Aux Mode' using the Aux cable supplied (audible confirmation is heard)

Table Top Controls



e



d



c



b



a

a. Function key

System default Bluetooth mode. The Function key changes the audio frequency signal source (Bluetooth / USB). You will hear a voice prompt for Bluetooth / USB mode. Press and hold the Function key to turn off music playback.

b. Volume + / Next

Press and hold to increase volume. Press once to select the next track.

c. Play / Pause


Play / Pause tracks.

d. Volume - / Previous

Press and hold to decrease volume. Press once to select the previous track.


e. Wireless charging function

Location for wireless charging. (Place mobile device on top to charge)

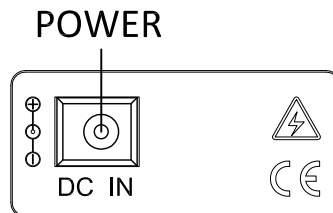


"DC IN" is for power input. Connect the power adaptor cable.



AUX / LINE

Plug the AUX cable into AUX IN  to connect with computer, mp3 and other devices for Audio output.

USB

Press functional key  on the top panel to change over to USB mode.


Bluetooth

1. Press Function key  on the top panel to change over to Bluetooth mode. You will hear a voice prompt in Bluetooth / USB mode.
2. Activate the Bluetooth function on the device which is to be connected and select pairing.
3. Pair your device with the Bluetooth name "Koble".
4. Hold down the play button  on the top panel for 3 seconds to pair with Bluetooth devices.
5. This unit can only be paired with one device at a time. To connect to a different device, first disconnect from the original device and start pairing again with the new device.
6. This unit is Bluetooth 4.2.

Wireless charging function

In the case of wireless charging compatible devices, please put the phone on the wireless charging indicator and check if the phone is successfully connected to the charging function. If not, move the mobile phone near the logo until the connection is successful.


Wireless charging will only work with wireless charging compatible mobile devices.

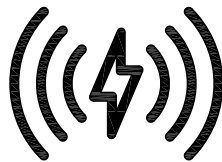

wireless charging function

Electrical system

WARNINGS!! Please read carefully

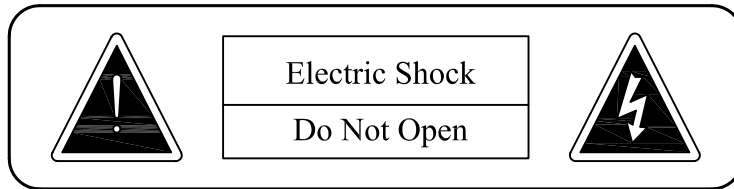

This symbol is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to cause an electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance Instructions in this user manual.

- a. In order to avoid accidents, do not open any electrical covers. Refer to a professional if the circuit is faulty.
- b. Do not expose the unit to damp or moisture.
- c. Keep the unit away from containers holding liquid. If any liquid enters into the unit, it may be damaged.
- d. Do not expose the unit to dust or smoke.
- e. If the unit will not be used for a long time, please unplug the power.
- f. When using the unit, if smoke appears, or if there is a peculiar smell, please turn off the power, pull out the socket and seek professional help.
- g. Pull out the plug before cleaning the surface of the machine. It can be cleaned with a damp cloth and soap.

Main Features

- a. Bluetooth function.
- b. Support Line in / Aux in.
- c. USB model input.
- d. high quality loudspeaker.
- e. Independent power adaptor, 12V direct voltage.
- f. Supports smart phone playback and recharge (with wireless charging compatible devices)

Trouble shooting

When a failure occurs, please refer to the following solutions, find out the presumable causes and solve the problem, if these are of no help, please refer to a professional.

PROBLEM	PROBLEM CAUSE	REMEDY
No power display	Power plug not inserted properly. There is no power in the socket. The power is not switched on.	The jack must be electrical. Press the plug. Turn on the power.
No sound	Audio sound cable not properly connected. The volume was set to the minimum.	Connect the audio sound cable correctly. Set the volume to normal standard.
No high or low sound	High / low volume set to minimum.	Set the volume to normal standard.
No wireless charging	Power not connected. Mobile device does not have wireless charging function.	Check power is connected and on. Check your mobile device has wireless charging capability.

Technical specification

ITEM	PARAMETER	ITEM	PARAMETER
VOLTAGE	AC100V-240/50-60HZ	S / N	≥65dB
OUTPUT POWER(RMS)	8W*2	DISTORTION	≤0.5%
FREQUENCY RESPONSE	80HZ-20KHZ	SEPARATION	≥40dB

Disposal



■ If disposal of this product becomes necessary, please do this in an environmentally responsible way. Contact your local government office or authority for suitable disposal or recycling options in your local area. Do not dispose of this product, or it's components, with your general domestic waste.

After Sales Support / Product Returns

In the unlikely that you need to return the unit because it is faulty, please follow the `Product Returns` instructions at www.kobledesigns.com website.

Should you need to request replacement parts, please contact our after sales support team at:-

Email - returns@kobledesigns.com

Tel: + 44 (0)1799 513 466

Address: Koble Designs, 6 The Shires, Shirehill industrial Estate, Saffron Walden, Essex, CB11 3AP