



### PURPOSE

A Dump Bailer is used to deposit acid into the wellbore. It can also be used to spot cement on or into downhole equipment.

### ASSEMBLY PARTS

1. Fishneck (Top Fill Sub)
2. Barrel
3. Shear Disc Sub
4. Shear Disc
5. Sleeve
6. Dart
7. Spring
8. Bottom Sub

### OPERATION

Assemble the Dump Bailer with the fill sub elevated. Fill with desired material through slot in fill sub and hoist into lubricator.

Lower the tool into the wellbore to the desired depth. Jar down to puncture the shear disc and release material. Remove from the wellbore.

### PRECAUTIONS

Ensure all connections are tight to prevent leakage. Inspection and maintenance of components will extend the life of the bailer, especially in corrosive environments.

Nominal Size		1.75"	2.25"
Assembly Number		0601DB175A0	0601DB225A0
Item	Part Name		
1	Fishneck	0601DB17501	0601DB17501
2	Barrel	0601DB17502	0601DB22502
3	Shear Disc Sub	0601DB17504	0601DB17504
4	Shear Disc	0601DB17505	0601DB17505
5	Sleeve	0601DB17506	0601DB17506
6	Dart	0601DB17508	0601DB17508
7	Spring	0601DB17512	0601DB17512
8	Bottom Sub	0601DB17509	0601DB17509
Top Thread Connection		0.938" – 10 UN	0.938" - 10 UN
Max O.D.		1.75"	2.25"
Fishneck size		1.375"	1.189"

\* Non stock item. Please call for price and delivery. Dump Bailers can be made in other diameters and various barrel lengths. \*