




## QTao™ G2 Rev 3 Quick Startup Guide

## **MATERIALS NEEDED**

- Installed QTao<sup>™</sup> G2 unit with Internet access (via Ethernet cable)
- Flathead screwdriver

## **PROCEDURE**

- 1. Open the QTao G2 enclosure with a large flathead screwdriver.
- 2. Power up the QTao. Wait 30 seconds for the device to boot.
- 3. Verify that the green and orange LEDs on the QTao Ethernet port are blinking. Note: contact the installer if there are issues (i.e. Ethernet light are not blinking or device does not power on).
- **4.** Call Quadlogic Control Technical Support at 212-930-9300 (ext. 709) to verify remote connection.
- Technical Support will request the QTao (QT) number (see red arrow in diagram below).

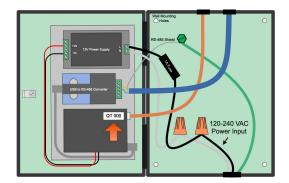

6. Technical support will ask for information about the comm devices connected to each USB Link. USB Link locations are labeled in the diagram below.





Technical Support will verify that the QTao
is communicating with the QuadQloud database.
Once verified, leave the device powered on and
close the QTao enclosure with a large flathead
screwdriver.

## **ACCESSING METER DATA**

Successful completion of steps 1-7 means the QTao is now connected to the QuadQloud database.

Please reach out to Quadlogic Control Billing at (212) 930-9300 (ext. 2) for information on how to access metering data.