

I'm not robot



1 Introduction Congratulations on buying a Universal Remote control from GE. This manual will help you to set it up and use it. 2 Setup The universal remote requires two (2) AA batteries (not included). Use alkaline batteries for best results. 3 Button Functions - Power : Turn devices On/Off. - Input : Select video inputs. - TV, strn, b-ray, cbl, dvd, aud: Select the device to control. - Home/Guide : Access features on today's streaming devices or Guide on cable/satellite receivers. 4 Programming Your Remote You need to program the remote for your devices. There are two methods: - Direct Code Entry - Enter the first 4-digit code from the Code List. - Test buttons and wait for red light to go off. - Auto Code Search - Read instructions before starting. - If device turns off, try another code. 5 Troubleshooting - The remote does not work: Ensure batteries are fresh and installed correctly. Aim at your device. Congratulations on purchasing this GE universal remote control! This remote control can operate thousands of audio/video devices, including TVs, DVD/Blu-ray players, and more. Configuration The universal remote uses two (2) AA batteries (not included). It's recommended to use alkaline batteries. Battery Installation 1. Press down on the textured surface at the back of the remote and slide the battery cover off to remove it. Button Functions strn b-ray app1 app2... Page 19 Button Functions 1. Power - Turn devices on or off 2. Input - Select video inputs 3. TV, strn, b-ray, cbl, dvd, aud - Choose the device you want to control 4. Menu and Guide - Easily access functions for web content transmission devices or cable/satellite receivers 5. Remote Control Programming This GE universal remote is designed to control multiple audio/video devices using a single remote. To use this remote, you need to program it to control your devices. There are two ways to program the remote: Direct Code Entry or Automatic Code Search... Page 21 Remote Control Programming 4. Use the number buttons on the remote to enter the first 4-digit code that's circled in the Code List in Step 1. The red light will turn off after entering the fourth digit. Remote Control Programming Automatic Code Search Automatic Code Search is a process where you can search all stored codes in the remote to find one for your device. It's recommended to read through all steps before starting the process. Remote Control Programming Did the device turn off? • If YES, it means you've found a code for your device. Press and release the same button from Step 3. This action will store the code in the remote. Using Your Remote La característica de volumen maestro del dispositivo le permite elegir un solo equipo que siempre esté controlado por los botones de volumen. Por ejemplo, el control remoto puede estar en modo de televisor mientras que los botones de volumen controlan el volumen del receptor de audio o la barra de sonido en lugar del televisor. Uso del Control Remoto 1. Mantenga presionado el botón de configuración (SETUP) hasta que la luz roja se encienda, luego suelte. 2. Presione y suelte el botón correspondiente al dispositivo (TV, b-ray, aux, cbl, strn, aud) para el que desea obtener el código. Solución de Problemas Si el control remoto no funciona con su dispositivo: - Asegúrese de que las pilas sean nuevas y estén bien colocadas. - Apunte directamente al dispositivo con el control remoto. - Verifique que haya seleccionado en el control remoto el dispositivo correcto (por ejemplo, TV para el televisor y CBL para el receptor de cable). Información Adicional GE es una marca comercial con licencia otorgada a Jasco Products Company LLC. Este producto tiene una garantía limitada de 90 días. Este dispositivo cumple con las regulaciones de la FCC y está sujeto a dos condiciones: no causar interferencia negativa ni aceptar interferencias recibidas. Características del Dispositivo - Diseño ergonómico cómodo de sujetarlo - Botones grandes y fáciles de leer para una navegación sencilla - Capacidad para controlar hasta 2 dispositivos - Compatible con TV, Blu-ray/DVD, receptores cable/satélite, cajas Roku, reproductores multimedia y más. Instrucciones Adicionales - Requiere 2 pilas AA (no incluidas) - Alkalinas recomendadas para las baterías Contacto Si tiene alguna pregunta o desea información adicional, visite nuestro sitio web www.byjasco.com o llame a nuestra Línea de Soporte Técnico al 1-800-654-8483. To replace the batteries in the remote, pull down on the textured surface and slide the battery cover downward. Match the (+) and (-) marks on the new batteries with the corresponding marks inside the battery compartment, then insert two AA batteries. Make sure to use fresh batteries and position the battery cover slightly below the opening before pushing upward to lock it into place. If the remote stops working properly, try replacing the batteries with new ones. When disposing of old or weak batteries, be sure to follow local and national regulations for proper recycling and disposal. The remote has a built-in feature that automatically turns off if the buttons are held down for more than 8 seconds, which helps conserve battery life. If you need to change the batteries without losing any programmed codes, you can do so within 10 minutes. The remote also features a sleep function that can be accessed by pressing the corresponding button. To control devices such as Satellite Receivers, Digital Converter Boxes, Streaming Media Players, or other devices listed in the Code List, follow these steps: 1. Identify the device you want to control and find its corresponding code on the list. 2. Use the CBL device button on your remote to enter the first 4-digit code by pressing the number buttons on the remote. 3. The red light on the remote will turn off after entering the fourth digit. 4. Point the remote at the device and test the buttons on the remote to see if it responds as expected. 5. If the buttons don't work, go back to Step 1 and try the next code for that device. Repeat these steps for each device you want to control. This is a list of various electronics brands and their corresponding model numbers. The brands listed include: * Audio equipment manufacturers: JVC, Kenwood, KLH, Kloss Novabeam, Konka, Kurazai, Luxman, Magnasonic, Majestic, Marantz, Medion, Megatron, Mei, Memorex, MGA, Midland, Minut, Mitsubishi, Monivision, Montgomery Ward, Motorola, Multitech, Multivision, Myron & Davis * TV manufacturers: Panasonic, Philips, Polaroid, Portland, Precision, Proscan, Proton, Pulsar, Quasar, Radio Shack, RCA, Realistic, Rhapsody, Runco, Sampo, Samsung, Sanusui, Santea, Sanyo, Scotch, Scott, Sears * Other electronics manufacturers: LG, LiquidVideo, Lodgenet, Loewe, Logik, Luce, Magnavox, MGA, Motorola, Multitech, NEC, Net TV, Nextech, Nikei, Nikko, Norcent, NTC, Olevia, Oncommand, Onking, Onwa, Optimus, Optoma, Optonica, Orion, Panasonic * Brands with multiple model numbers: JVC (6), Kenwood (9), LG (7), Loewe (2), Magnavox (10), Mitsubishi (5), Motorola (4), NEC (8), Philips (24), Radio Shack (13), RCA (17), Samsung (14) Note that this list is quite long and contains a large number of model numbers, but it's not clear what the purpose or context of the original text is. Programming Notes: Some devices may have limited functionality with certain codes, so it's best to try other codes in the Code List for more features. If your device doesn't respond to any codes, use the Auto Code Search method to find one that works. For combination devices like TV/DVD or TV/VCR, you may need to enter a code for each device. Write down the remote codes used so you can refer to them later. Auto Code Search: 1. Turn on the device you want to control. 2. Press and hold the SETUP button until the red light turns on, then release it. 3. The red light will remain on. 4. Press and release the device button (e.g., TV). 5. The red light will blink once and stay on. 6. Press and release the POWER button to send 10 codes to the device. 7. Turn off the device manually. 8. Point the remote at the device and press VOL + to resend the first code. 9. Try using the remote to turn the device back on and test its buttons to see if it responds as expected. If the buttons don't work, go back to Step 2 and keep trying new codes until you find one that works for each device. If the device turns off, it means you've found a code. Press and hold the same button as in Step 3, then release it - this will save the code in the remote. If not, press VOL + repeatedly until the device turns off, making sure to wait 3 seconds between presses. If you want to control multiple devices, repeat this process for each one. The VOL - button can be used to go back through previous codes if needed. The Master Volume Feature allows you to set a single device that controls volume, regardless of what mode the remote is in. To enable it, press and hold SETUP until the red light turns on, then release it and press the desired device button, MUTE, and VOL +. To disable the feature, follow the same steps but use VOL - instead of VOL +. The Code Identification process involves pressing SETUP, a device button, ENTER, and the # buttons to count the code's digits. Finally, resetting to factory settings requires holding SETUP until it turns on, then releasing it and pressing MUTE and #0, which will reset everything. If your remote control isn't working, first check that the batteries are fresh and properly installed. Make sure there are no obstructions between the remote and your device. Ensure you've selected the correct device on the remote (TV for TV or CBL for cable box). If it still doesn't work, try using a different code by referring to the "Direct Code Entry" section. Be aware that some remotes may not be compatible with all devices or operate all features. You might need to use a different code to access specific functions. It's also important to note that this remote control may have limited functionality compared to your original remotes, and button names might differ. Keep this manual handy for future reference. If you encounter any issues or have questions, visit our website at www.byjasco.com or contact our Technical Support Group at 1-800-654-9483 from Monday to Friday between 7:00 AM and 8:00 PM CST. This product is covered under a 90-day limited warranty. If your unit proves defective within this period, return it prepaid with dated proof of purchase to Jasco Products Company at the address listed below. Visit our website for more information on warranty details. In case you have any questions or concerns, please feel free to reach out to us at 1-800-654-8483 between 7:00 AM and 8:00 PM CST. FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to two conditions: this device must not cause harmful interference, and it must accept any interference received. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. This device may cause interference with radio communications if not used according to instructions. However, there's no guarantee that interference won't occur in a specific installation. If issues arise, try relocating the receiving antenna or increasing the separation between devices. Consult a dealer or technician for assistance. The remote control can be programmed to turn off both TV and cable with separate button presses. It's compatible with Direct TV and some Viewsonic TVs but not Xfinity's new X1 platform due to limited functionality. The enter buttons don't work, making it difficult to confirm channel changes. This device can select channels on Frontier TV cable boxes and works with some Element TVs. However, it may not operate a DVR or smart TV as it lacks the necessary buttons. Mediacom cable compatibility is uncertain but possible. I got the function to work after doing an affordable setup, it operates smoothly and even features a sleep timer option. Does this product support my DXL3210A Dynex TV? Our remote control has a compatible code that works with top brands like Dynex, Sony, GE, Panasonic, and more.

Ge universal remote manual code list pdf. Ge universal remote 33709 manual. Ge roku universal remote manual. Ge 4 universal remote manual. Ge 4 device universal remote manual. Ge universal remote programming manual. Ge universal remote manual pdf. Ge universal remote manual code list. Ge universal remote c15 7252 manual. Ge universal remote user manual. Ge ultra pro universal remote manual. Ge 6 device universal remote control manual. Ge 8 device universal remote control manual. Ge big button universal remote manual. Ge universal remote instruction manual.