

Ed. 001 04/2015

**INSTRUCTIONS, USE AND MAINTENANCE MANUAL**





## CONTENTS

|           |  |           |
|-----------|--|-----------|
| <b>1.</b> | <b>Delivery and warranty</b>   | <b>5</b>  |
| 1.1       | Foreword   |           |
| 1.2       | Preserving and using the manual                                      |           |
| 1.3       | Warranty   |           |
| 1.4       | Description of the machine   |           |
| 1.5       | Permitted use  |           |
| 1.6       | Improper use - not permitted use                                     |           |
| 1.7       | Identification of the equipment                                      |           |
| 1.7.1     | Warning plates   |           |
| 1.8       | Safety devices and protections                                       |           |
| 1.9       | Operating station  |           |
| <b>2.</b> | <b>Technical features</b>  | <b>9</b>  |
| 2.1       | <i>Main components</i>   |           |
| 2.2       | <i>Technical specifications</i>                                      |           |
| 2.3       | <i>Dimensions and weight of the machine</i>                          |           |
| 2.4       | <i>Noise level</i>   |           |
| 2.5       | <i>Electrical diagrams</i>   |           |
| 2.5.1     | <i>Single-phase wiring diagram</i>                                   |           |
| <b>3.</b> | <b>Controls and indicator lights</b>                                 | <b>11</b> |
| 3.1       | List of controls and indicator lights                                |           |
| <b>4.</b> | <b>Inspection, shipping, delivery and installation</b>               | <b>11</b> |
| 4.1       | Inspection   |           |
| 4.2       | Shipping and handling the machine                                    |           |
| 4.3       | Installation   |           |
| 4.3.1     | Disposing of the packaging   |           |
| 4.3.2     | Handling the machine   |           |
| 4.4       | Electrical connections   |           |
| 4.4.1     | Single-phase machine 220 Volt 50 hz                                  |           |
| <b>5.</b> | <b>Start up and shut down</b>  | <b>13</b> |
| 5.1       | Checking the electrical connections                                  |           |
| 5.2       | Checking the presence and effectiveness of safety devices and guards |           |
| 5.3       | Checking the effectiveness of the emergency button                   |           |
| 5.4       | Machine start up   |           |
| 5.5       | Machine shut down  |           |
| <b>6.</b> | <b>Using the machine</b>   | <b>13</b> |
| 6.1       | Instructions   |           |
| 6.2       | Dough preparation  |           |
| 6.3       | Extrusion  |           |
| 6.4       | Using the dough cutter   |           |

|  |           |
|--|-----------|
| <b>7. Maintenance</b>  | <b>14</b> |
| 7.1 Lubrication  |           |
| 7.2 Cleaning the machine   |           |
| 7.3 Removing the locking ring, extruder, spiral and cleaning the spout |           |
| 7.3.1 Extruder maintenance   |           |
| 7.3.2 Assembling the spiral, the extruder and the locking ring         |           |
| 7.4 Disassembling the shovel and the tank                              |           |
| 7.4.1 Assembling the paddle  |           |
| 7.5 Waste Electrical and Electronic Equipment WEEE                     |           |
| <b>8. Trouble-shooting</b>   | <b>17</b> |
| 8.1 Trouble-shooting   |           |

## 7.5 Waste Electrical and Electronic Equipment WEEE

### INFORMATION INTENDED FOR USERS

Pursuant to article 13 of the Legislative Decree n. 151, July 25<sup>th</sup>, 2005 "implementation of Directive 2002/95/EC, 2002/96/EC and 2003/108/EC, related to the restrictions on the use of hazardous substances in electrical and electronic equipment, as well as waste disposal"



The crossed bin symbol on the device or its packaging indicates that, at the end of their life, the product must be collected separately from other waste.

The separate collection at the end of this machinery life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment must contact the manufacturer and follow the procedure adopted to allow separate collection at the end of life.

Appropriate separate collection and subsequent decommissioning for recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and health, and promotes the reuse and / or recycling of materials the equipment is made of.

**Illegal disposal of the product involves application of administrative sanctions provided by law.**

## 8 - Trouble-Shooting

### 8.1 - Trouble-shooting

#### Problem

- 1 - The machine does not start up
- 2 - The fun is not working
- 3 - The dough does not flow out

#### Cause

- 1.1 The differential switch is positioned to "0".
- 1.2 The main switch is positioned to "0"
- 1.3 The start up button is faulty
- 1.4 Ensure all safety devices are enabled and working properly
- 2.1 - The light switch is not lit
- 2.2 - The fun got burnt out
- 3.1 - The extruder is dirty
- 3.2 - The machine is running in mixing mode

#### Solutions

- 1.1 - Bring the switch to "I" position
- 1.2 - Bring the switch to "I" position
- 1.3 - Contact the Technical Assistance
- 1.4 - Check the safety devices and protections
- 2.1 - Start the fun up by means of the light switch
- 2.2 - Contact the Technical Assistance
- 3.1 - Clean the extruder
- 3.2 - Shut the machine down and push the extruding mode button

## 7.4 - Disassembling the shovel and the tank

- Unlock the fixing paddle rod by lifting the lever (fig. 7.4.1)
- Grab the knob fixing rod and pull until it is out and has freed the paddle
- Open the cover and remove the paddle by pulling it out of its seat.
- Clean and wash the paddle
- Clean and wash the inside of the basin by removing the product residues

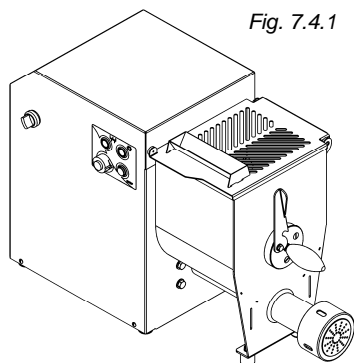


Fig. 7.4.1

Fig. 7.4.2

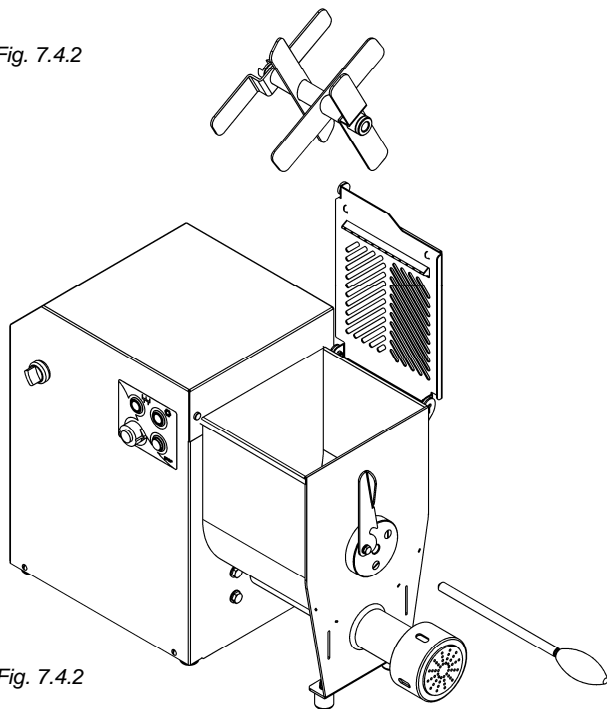


Fig. 7.4.2

### 7.4.1 Assembling the paddle

- With the cover open, insert the paddle in the basin; make sure it is firmly fitted in its housing.
- Grab the knob fixing rod and push it down to lock the paddle
- Lower the lever and lock the paddle fixing rod
- Close the cover.

## 1 - Delivery and warranty

### 1.1 - Foreword

#### WARNING!

The symbols used in this manual are intended to draw the reader's attention to points and dangerous operations as regards personnel and operators safety as well as the risks to damage the machine.

Do not operate the machine unless you are not certain to have understood properly the meaning of these indications.

#### WARNING!

For clarity, some illustrations in this Manual show the equipment or parts of it with the panels or casings removed.

Do not use the machine in such conditions. The machine has to be used only when all guards are in place.

This manual cannot be reproduced, even partially, without the consent of the manufacturer and its contents can not be used for purposes not permitted by the manufacturer.

Any violation of the copyright mentioned above could lead to prosecution under law.

### 1.2 Preserving and using the manual

The purpose of this manual is to give the users by means of texts and images the recommendations and essential criteria related to transport, handling, use and maintenance of the machine. Read this manual carefully prior to using the machine.

The Manual must be preserved in a known easily accessible place, available for consultation whenever required. If the Manual is lost, damaged or becomes illegible, contact your reseller or directly manufacturer for a copy.

If the equipment concerned changes ownership, the Manual has to be handed over to the new owner.

This manual reflects the state of the techniques at the moment the machine has been placed on the market and it doesn't has to be considered obsolete just because not yet updated according to the new expertise. The manufacturer reserves the right to update the production and related manuals without updating the production and the previous manuals, except for special cases. In case of doubts, please contact the nearest Customer Assistance Service of the manufacturer.

The manufacturer aims to continuously improve its products.

For this reason, the manufacturer is keen to receive any report or proposal aimed at improving the machine and / or the manual. The equipment has been delivered to the user under warranty conditions at the moment of the purchase.

Please contact the manufacturer for further details.

### 1.3 Warranty

Under no circumstances the user is allowed to tamper with the machine. In case of fault refer to your supplier.

Any attempt of the user or unauthorized personnel to disassemble, modify or more generally tamper with any part of the machine will cause the Declaration of Conformity drawn up in accordance with **EEC Directives 2006/42** to lapse, it shall void the warranty and will relieved the Manufacturer from damages caused by such behaviour.

The Manufacturer shall be relieved of all liability in the following situations:

- incorrect installation;
- improper use of the equipment by inadequately trained personnel;
- use contrary to regulations in force in the country where the equipment is used;
- omitted or poor maintenance;
- use of non-original spares or not specific for the model;
- total or partial non-compliance with these instructions- with spare parts that are not original or are not specific for the model.

#### 1.4 Description of the machine

The machine in your possession is a simple, compact, highly efficient and powerful equipment.

Since it must be used in food applications, the components were carefully chosen to provide maximum hygiene.

- The basin is made of electropolished stainless steel.
- The tools are made of stainless steel to ensure durability and maximum hygiene.
- Cast stainless steel spout
- Copper extruders.
- Ventilated single-phase motors offering the following advantages:
  - consistency, high performance and durability of the motor;
  - increases the real operation time due to fewer interruptions;
- It provides two operation modes: mixing and extruding.
- Maximum mixing capacity 4.2 kg (3 kg flour 1.2 kg egg)
- Pre-arranged for dough-cutter installation.

The version represented in this manual have been built in compliance with **EC Directive 2006/42** and further modifications.

In case of accident, no responsibility can be charged to the manufacturer if the machine has been modified, tampered with, if it has been used with the safety guards removed or for purposes not permitted by the manufacturer.

#### 1.5 Permitted use

The machine was designed and built for fresh pasta production.

It is to be used in professional environments; the machine operator has to be specialize in the field and have read and understood this manual. Do not use the machine unless safely fixed to a solid workbench.

#### 1.6 Improper use not permitted

The machine must be used exclusively for the purposes intended by the manufacturer; in particular:

- **do not** use the machine for food products other than those indicated by the manufacturer.
- **do not** use the machine unless it has been properly installed with all the protections intact and properly assembled to avoid the risk of severe injury.
- **do not** access the electrical components without having previously disconnected the machine from the mains: **ones risks electrocution.**
- **Follow** the indicated flour / liquid quantities. Wrong quantities of ingredients can generate permanent damage to the machine.
- Do not wear clothing which do not follow the safety regulations.

Check with your employer as regards the safety regulations and safety equipment to be provided with.

#### 7.3 - Removing the locking ring, extruder, spiral and cleaning the spout

- Loosen the nut by means of the special spanner (supplied) unscrew it manually completely and then remove it.
- Pull out the extruder and wash it thoroughly. Dip it in a bowl containing water and vinegar
- Remove the spiral from the spout, clean it and wash it thoroughly
- Remove from the inside of the overflow spout all dough residues.

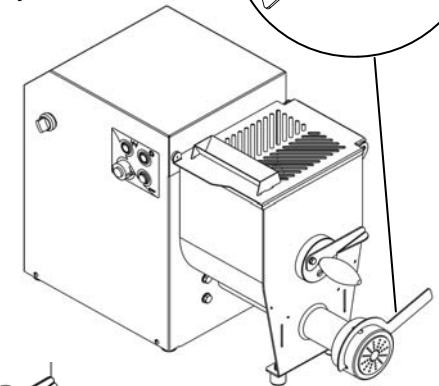
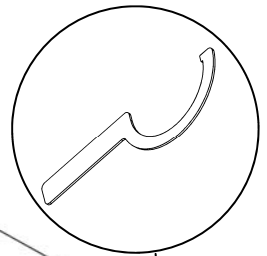


Fig. 7.3.1

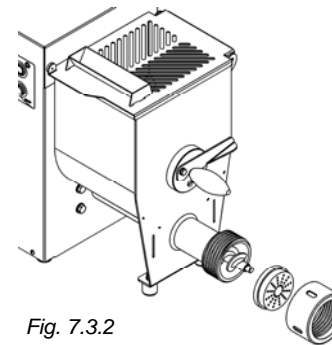


Fig. 7.3.2

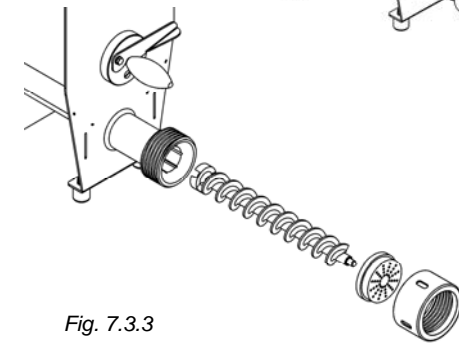


Fig. 7.3.3

##### 7.3.1 - Extruder maintenance

When not in use, it is recommended to keep the extruders soaked in a vessel containing water and vinegar to prevent any pasta residues from drying out and block the extruded pasta outlet.

##### 7.3.2 - Assembling the spiral, the extruder and the locking ring

- Insert the propeller in the spout
- Fit the extruder to the locking ring (fig. 7.3.4)
- Fasten the locking ring to the spout
- Loosen the locking ring by means of the special spanner

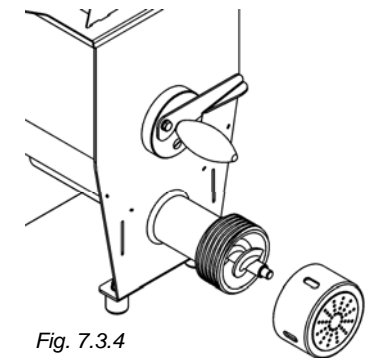


Fig. 7.3.4

### 6.3 - Extrusion

- Ensure the proper extruder is fitted on the locking ring
- Start the machine in mixer mode by means of the button 3 (fig 3.1.1)
- The spiral will process the dough. Once the pasta will reach an adequate pressure the extruding will begin.
- Cut with a knife the dough that comes out of the extruder to the necessary length
- When the basin is empty, shut off the machine.

### 6.4 - Using the dough cutter

- Fit the dough cutter "1" (fig 6.4.1) to the machine by inserting it in the slits at the sides of the product outlet.
- Plug the connector "2" (fig. 6.4.1) into the connector "3" (fig 6.4.1)
- Start the machine in extruding mode
- Use the potentiometer "4" (fig 6.4.1) to vary the rotation speed of the cutter so as to cut the dough to the desired length

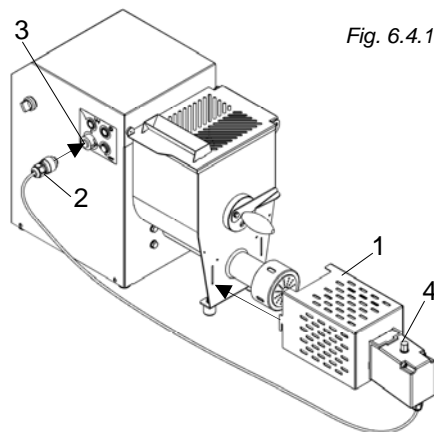


Fig. 6.4.1

## 7 - Maintenance

### 7.1 Prescriptions

**WARNING!** All maintenance and cleaning intervention must only be carried out with the machine shut down and disconnected from the mains.

The area where maintenance is performed must always be clean and dry.

Do not allow unauthorized personnel to operate on the machine.

Any possible replacement of components, including the replacement tools, must be carried out with original spare parts by authorized workshops or directly by the manufacturer.

#### 7.1 - Lubrication

The machine does not require lubrication.

### 7.2 Cleaning the machine

**WARNING!**

Unplug the machine from the mains before cleaning.

Do not wash the machine with pressurized water jet.

With a sponge soaked in water and suitable non toxic neutral degreasers (pH 7), remove any residues off the machine.

Do not use gasoline, solvents or other flammable liquids as detergents; use authorized commercial solvents, non-toxic and not flammable, expressly intended for the cleaning of food components.

Adjust the protections to be used in cleaning and disinfection on the basis of the product used. Follow the instructions for the products used.


- **Do not** use the equipment if damaged.
  - Before using the machine make sure that any dangerous condition has been appropriately cleared. In case of abnormal operation, stop the machine and warn the persons in charge with maintenance.
  - **Do not** allow unauthorized persons to operate on the equipment.
- The emergency treatment in case of an accident caused by electrical shock implies to first remove the contact between the injured person from the conductor (since usually the person faints). This is dangerous operation. The victim in this case is a conductor: touch him/her could imply being electrocuted.
- It should therefore first be remove contacts directly from the supply valve, otherwise move the victim using insulating materials (wood or PVC stick, cloth, leather, etc.). It is recommended to call for medical staff, the patient has to be transferred to a hospital.


### 1.7 - Identification of the equipment

Providing an exact description of the "Version", the "Serial Number" and the "Year of manufacture" of the machine will allow rapid and effective answer from our customer service. It is recommended to indicate the machine version and serial number whenever you call for service.

Collect these data from the plate shown in Fig. 1.7.1. It is suggested to insert the machine identification data in the following table:

|                          |
|--------------------------|
| Machine version.....     |
| Serial No.....           |
| Year of manufacture..... |
| Type.....                |

|   |   |         |
|---|---|---------|
| MOD:  | A |         |
| VOLT:   | B | WATT: C |
| HZ:   | D | KG: E   |
| AMPS: F   |   | ANNO: G |
| SERIAL NO:  | H |         |
|   | I |         |
|  |   | L       |



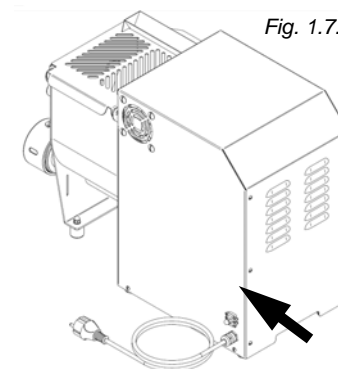


Fig. 1.7.1

A = machine version  
B = Voltage  
C = motor power  
D = motor frequency Hz  
E = Weight  
F = Amperage  
G = Year of manufacture  
H = Serial No.  
I = Manufacturer  
L = Barcode

### WARNING!

Do not alter the data on the identification plate under any any circumstances.

### 1.7.1 - Warning plates (fig. 1.7.2)

#### **WARNING!**

Do not intervene on electrical components when the machine is connected to the mains. **Ones risks electrocution. Follow the indications on the plates.**

**Failure to comply to the recommendations could result in personal injury.**

Make sure the plates are always in place and readable. Otherwise apply or re-place them.

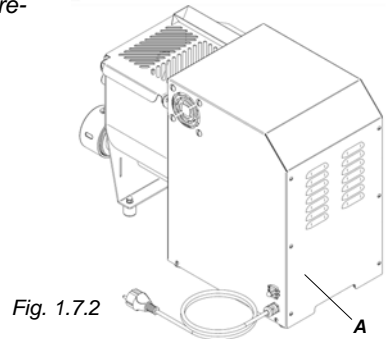


Fig. 1.7.2



### 1.8 - Safety devices and protections

#### **WARNING!**

Before use ensure that all the safety devices are installed and working properly. Before each working shift ensure that all the safety devices are installed and that they are working properly. Otherwise contact the person in charge with maintenance activity.

1 - Cover sensor.

It prevents the starting up of the machine in case the cover is up.

#### **WARNING!**

Do not tamper with the safety devices.

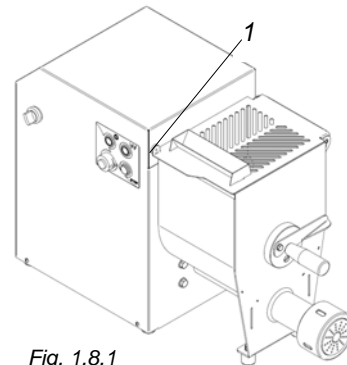


Fig. 1.8.1

### 1.9 Operating station

The correct position that the operator must occupy to optimize the working with the machine is shown in fig. 1.9.1.

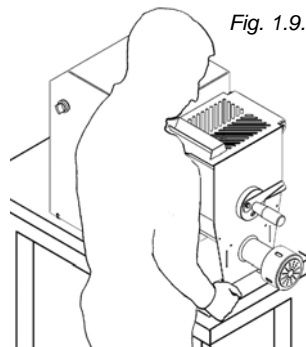


Fig. 1.9.1

## 5 Starting-up and shutting-down

### 5.1 - Checking the electrical connections

Connect the plug to the mains and press the start button (3 Fig. 3.1.1). The machine gets enable in extruding mode; ensure the spiral direction of rotation is counter-clockwise.

Otherwise, disconnect the machine from the mains and contact your supplier.

**Note:** In the machines connected to a single phase line, manufactured for this specific power supply, the correct direction of rotation is determined directly by the manufacturer.

### 5.2 - Checking presence and effectiveness of safety devices and protections

#### 1 - Interlocked cover.

Ensure the machine stops when the upper cover is open.

When the cover is open the machine **must not** run.

### 5.3 - Checking the effectiveness of the emergency button (5 fig. 3.1.1)

When machine is connected to the mains and tools are in movement, press the shut down button (5 Fig. 3.1.1). The machine must shut down.

### 5.4 - Machine start up (1 or 3 fig. 3.1.1)

After having properly connected the machine to the mains, push the mixing button (1 Fig. 3.1.1) or push the extruding button (3 Fig. 3.1.1), to have the machine started up.

### 5.5 - Machine shut down (fig. 3.1.1)

TO shut down the machine, push the shut down button, "5" Fig. 3.1.1.

## 6 Description of the machine

### 6.1 Prescriptions

#### **WARNING!**

Only authorized personnel can operate on the machine.

Prior to the start up the operator must first ensure all the guards are in place and all the safety devices are present and effective. Otherwise, shut the machine down and contact the operator in charge with maintenance.

Ensure that the of flour / egg ratio is always

1kg of flour / 400g of egg.

Prior to start up, arrange the machine with the suitable extruder, spiral and mixing paddle

### 6.2 - Dough preparation

- Pour the flour mix in the mixing basin
- Close the top cover and insert the funnel "4" (Figure 2.1.1) on the feeder cap
- Start the machine in mixer mode by means of the button "1" (Figure 3.1.1)
- Start the motor fan by means of the air vent switch "7" (Figure 3.1.1)
- Start pouring the eggs already beaten in the feeder funnel
- After the eggs where poured, wait for the dough to be ready (about 15 min)
- Shut down the machine



age to the packaging, the carrier shall sign the notice of receipt for instance which should sound like this: "I tentatively accept..." and the reason.  
ON opening the packaging, in case of badly damaged components of the machine, file a complaint to the shipping company within three days from the date indicated on the documents.

4.3 - Installation

WARNING!

The machine installation area has to be sturdy and the surface has to ensure a safe support. When positioning the machine keep extensive space around it. This allows greater manoeuvrability during operation and ensures access for maintenance. Prepare suitable lighting around the machine to ensure proper visibility to the machine operator.  
- Remove the cellophane wrapping off the machine and other packaging present on the inside.

4.3.1 - Disposing the packaging

The components such as cardboard, nylon, wood products are comparable to municipal solid wastes. They can therefore be freely disposed off. The Nylon is a pollutant material that produces toxic fumes when burned. Do not burn it; dispose it off in accordance with the laws in force regarding the matter. If the machine is delivered in countries where special rules are implemented, the packaging must be disposed off according to such regulations.

4.3.2 - Handling the machine

WARNING!

Handle the machine with care and attention, avoid accidental falls that could damage it. To avoid muscle strain, when lifting the machine, use the force of the legs.


4.4 - Electrical connections

WARNING!

Ensure the mains match the voltage given on the equipment's ID plate. All interventions must be carried out exclusively by specialized and expressly authorized personnel. Carry out the electrical connection to properly earthed mains.

4.4.1 - Single phase machine 220 Volt-50 Hz

In this version the machine is supplied with a power cable having 3 x 1.5 mm cross section. The cable is connected to a three-poles single-phased plug. Connect the cable to single phase 220 Volt-50 Hz mains; interpose a differential circuit breaker of 16 amps.

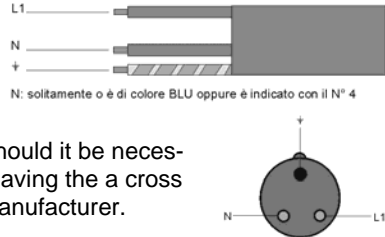


In installations with voltages other than those mentioned, please consult the manufacturer. Should it be necessary to lengthen the power cable, use a cable having the a cross section that matches the one installed by the manufacturer.

2 -Technical features

2.1 - Main components

To facilitate the understanding of the manual, hereafter there are listed below and shown in fig. 2.1.1. the main parts of the machine


- 1 - Feet
- 2 - Dough basin
- 3 - Copper extruders
- 4 - Feeder funnel
- 5 - Commands
- 6 - Fan switch
- 7 - Casing
- 8 - Interlocked cover
- 9 - Paddle release

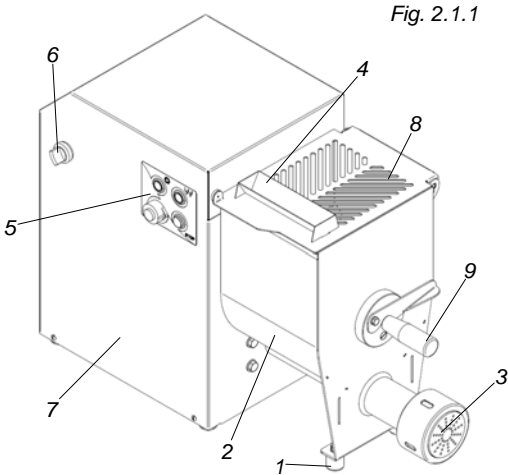

2.2 - Technical features

| Motor   | Supply | Hourly capacity | Extruders |
|---------|--------|-----------------|-----------|
| watt/hp | V/Hz   | kg/h.           | ø mm      |
| 750/1   | 230/50 | 8.4             | 70        |

2.3 - Dimensions and weight of the machine

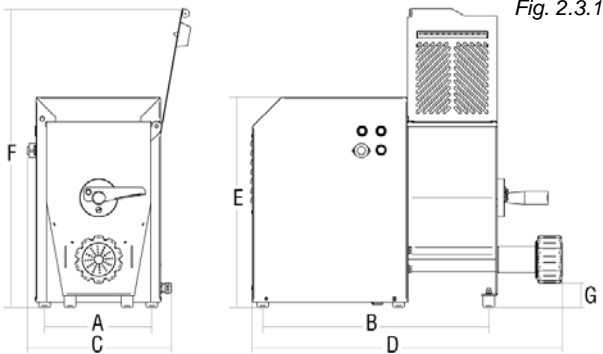


| A   | B   | C   | D   | E   | F   | G  | Net weight |
|-----|-----|-----|-----|-----|-----|----|------------|
| mm  | mm  | mm  | mm  | mm  | mm  | mm | kg         |
| 226 | 476 | 305 | 665 | 442 | 630 | 50 | 42         |

2.4 - Noise level

The measured machine equivalent noise level does not exceed 70 dB.

## 2.5 - Electrical diagrams

### 2.5.1 - Single phase electrical diagram

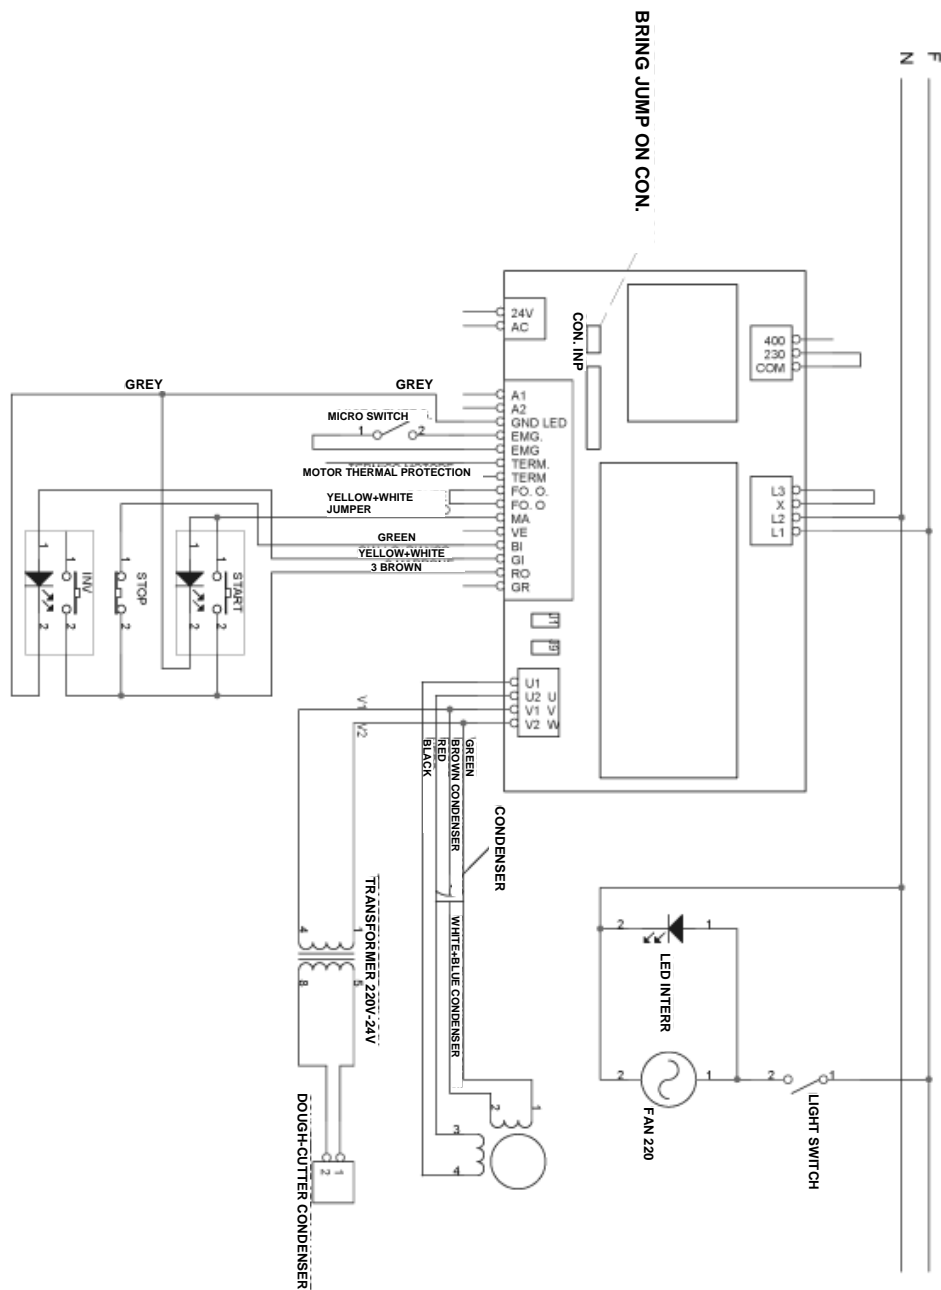

## 3 - List of controls and indicator lights

### 3.1 - List of controls and indicator lights

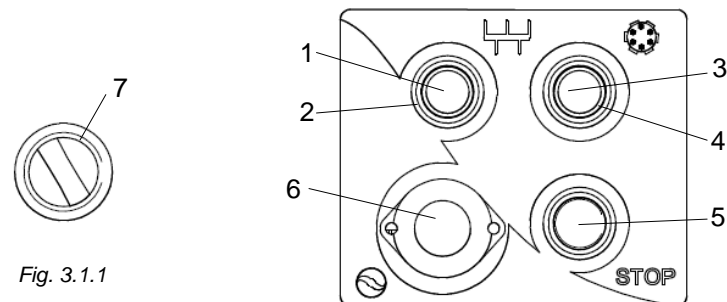


Fig. 3.1.1

#### - Start mixer button (1 fig. 3.1.1)

By pushing the button the machine starts in mixer mode: it enables the paddle which, by rotating clockwise, brings the ingredients contained inside the basin towards its bottom and allows though the mixing.

When the button is pressed, the LED gets lit (2 fig. 3.1.1) and it will remain so throughout the mixing process.

#### - Start extruding button (3 fig. 3.1.1)

By pushing the button the machine starts in extruding mode: it enables the spiral that rotates anticlockwise, pushes the product previously mixed contained inside the basin, towards the extruder.

The pasta will start being extruded. When the button is pressed, the LED gets lit (4 fig. 3.1.1) and it will remain so throughout the extruding process.

#### 5 - Shut- down button

Push this button to shut down the machine.

#### 6 - Connector for dough-cutter application

Required to apply the dough-cutter if envisaged.

#### 7 - Fan switch

Rotate clockwise to start the fan for internal ventilation; it has the function of cooling the motor. When enabled this switch, a LED inside the knob gets lit.

## 4 - Inspection, shipping, delivery and installation

### 4.1 Inspection

The equipment in your possession has been tested at our factory to verify that all moving parts work properly and it is properly adjusted. The tests are carried out with materials similar to those processed by the user.

### 4.2 - Shipping and handling the machine

All materials shipped have been thoroughly checked before delivery to the shipping company. Unless otherwise agreed upon with the customer, the machine is wrapped with nylon and fixed with steel straps on the bench, cover by a box which is also fixed with steel straps to the pallet. On receiving the machine, check the integrity of the packaging. In case of dam-

## 8 - Trouble-Shooting


### 8.1 - Trouble-shooting

| Problem                       | Cause   | Solutions  |
|-------------------------------|---|--|
| The machine does not start up | The differential switch is positioned to "0".     | Bring the switch to "I" position                         |
|                               | The main switch is positioned to "0"              | Bring the switch to "I" position                         |
|                               | The start up button is faulty                     | Contact the Technical Assistance                         |
|                               | Safety devices not present or incorrectly mounted | Check the safety devices and protections                 |
| The fun is nor working        | The motor must still reach 60°                    | It is not a problem                                      |
|                               | The bimetal switch has broken                     | Contact the Technical Assistance                         |
|                               | The fun got burnt out                             | Contact the Technical Assistance                         |
| The dough does not flow out   | The extruder is dirty                             | Clean the extruder                                       |
|                               | The machine is running in mixing mode             | Shut the machine down and push the extruding mode button |

**SERVICE CENTRE  
AUTHORISED RETAILER**



## ***Fresh pasta machine- LLKPME20***

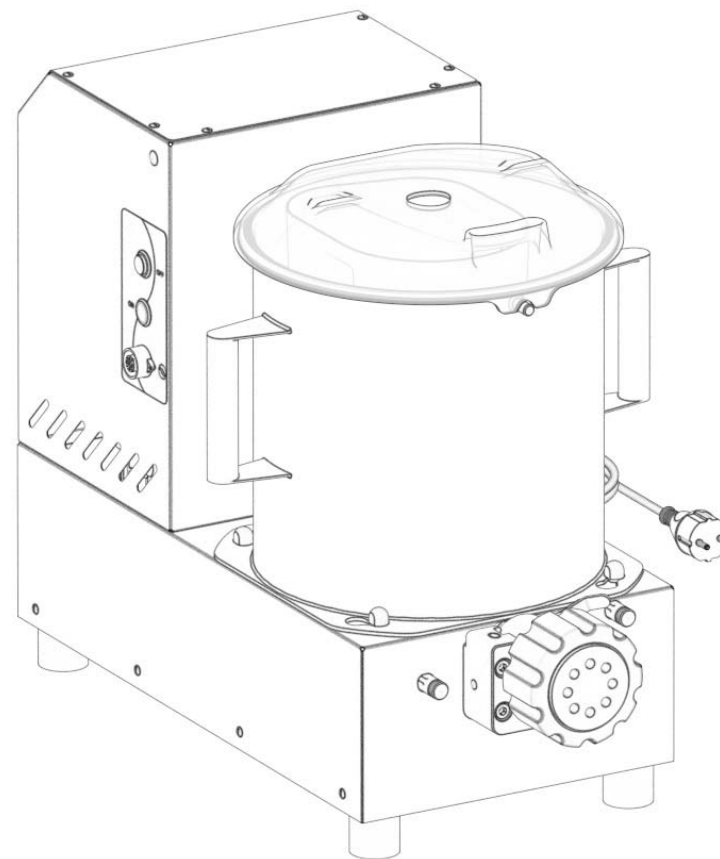

Ed. 001 - 04/2018

**INSTRUCTIONS, USE AND MAINTENANCE MANUAL**

#### 7.4 - Waste Electrical and Electronic Equipment WEEE




***Pursuant to article 13 of the Legislative Decree n. 151, July 25<sup>th</sup>, 2005  
"implementation of Directive 2002/95/EC, 2002/96/EC and 2003/108/EC, related to  
the restrictions on the use of hazardous substances in electrical and electronic  
equipment, as well as waste disposal"***

*The crossed bin symbol on the device or its packaging indicates that, at the end  
of their life, the product must be collected separately from other waste.*

*The separate collection at the end of this machinery life is organized and managed by  
the manufacturer. The user who wishes to dispose of this equipment must contact the  
manufacturer and follow the procedure adopted to allow separate collection at the end  
of life.*

*Appropriate separate collection and subsequent decommissioning for recycling,  
treatment and environmentally compatible disposal helps prevent negative impact on  
the environment and health, and promotes the reuse and / or recycling of materials the  
equipment is made of.*

**Illegal disposal of the product involves  
application of administrative sanctions provided by law.**

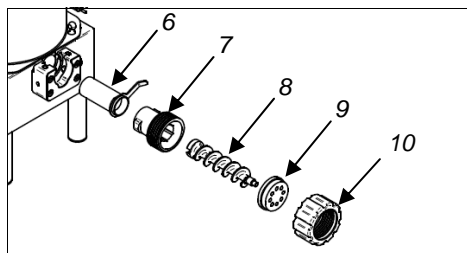

### **WARNING!**

After each kneading, ensure the propelling pivots are thoroughly cleaned so the blade and Archimedean screw can be properly assembled (fig 7.2.2)

## **CONTENTS**

|           |  |           |
|-----------|--|-----------|
| <b>1.</b> | <b>Delivery and warranty</b>   | <b>4</b>  |
| 1.1       | Foreword   |           |
| 1.2       | Preserving and using the manual  |           |
| 1.3       | Warranty   |           |
| 1.4       | Description of the machine   |           |
| 1.5       | Permitted use  |           |
| 1.6       | Improper use not permitted   |           |
| 1.7       | Identification of the equipment  |           |
| 1.7.1     | Warning plates   |           |
| 1.8       | Safety devices and protections   |           |
| 1.9       | Operating station  |           |
| <b>2.</b> | <b>Technical features</b>  | <b>10</b> |
| 2.1       | Main components  |           |
| 2.2       | Technical specifications   |           |
| 2.3       | Dimensions and weight of the machine                                   |           |
| 2.4       | Noise level  |           |
| 2.5       | Electrical diagrams  |           |
| 2.5.1     | 230V / 50 Hz 1 ph  |           |
| <b>3.</b> | <b>Controls and indicator lights</b>                                   | <b>13</b> |
| 3.1       | List of controls and indicator lights                                  |           |
| <b>4.</b> | <b>Inspection, shipping, delivery and installation</b>                 | <b>13</b> |
| 4.1       | Inspection   |           |
| 4.2       | Shipping and handling the machine                                      |           |
| 4.3       | Installation   |           |
| 4.3.1     | Disposing of the packaging   |           |
| 4.3.2     | Handling the machine   |           |
| 4.4       | Electrical connections   |           |
| 4.4.1     | Single-phase machine   |           |
| <b>5.</b> | <b>Start up and shut down</b>  | <b>15</b> |
| 5.1       | Checking the electrical connections                                    |           |
| 5.2       | Checking the presence and effectiveness of safety devices and guards   |           |
| 5.3       | Checking the effectiveness of the emergency button                     |           |
| 5.4       | Machine start up   |           |
| 5.5       | Machine shut down  |           |
| <b>6.</b> | <b>Using the machine</b>   | <b>16</b> |
| 6.1       | Instructions   |           |
| 6.2       | Dough preparation  |           |
| 6.3       | Extrusion  |           |
| 6.4       | Using the dough cutter   |           |
| <b>7.</b> | <b>Maintenance</b>   | <b>17</b> |
| 7.1       | Prescriptions  |           |
| 7.2       | Lubrication  |           |
| 7.3       | Cleaning the machine   |           |
| 7.3.1     | Disassembling the tank, spiral, ring and rotor and cleaning the outlet |           |
| 7.4       | Waste Electrical and Electronic Equipment WEEE                         |           |
| <b>8.</b> | <b>Trouble-shooting</b>  | <b>20</b> |
| 8.1       | Trouble-shooting   |           |

## 1 - Delivery and warranty

### 1.1 - Foreword

#### **WARNING!**

The symbols used in this manual are intended to draw the reader's attention to points and dangerous operations as regards personnel and operators safety as well as the risks to damage the machine.

Do not operate the machine unless you are not certain to have understood properly the meaning of these indications.

#### **WARNING!**

For clarity, some illustrations in this Manual show the equipment or parts of it with the panels or casings removed.

Do not use the machine in such conditions. The machine has to be used only when all guards are in place.

This manual cannot be reproduced, even partially, without the consent of the manufacturer and its contents can not be used for purposes not permitted by the manufacturer.

Any violation of the copyright mentioned above could lead to prosecution under law.

### 1.2 - Preserving and using the manual

The purpose of this manual is to give the users by means of texts and images the recommendations and essential criteria related to transport, handling, use and maintenance of the machine. Read this manual carefully prior to using the machine.

The Manual must be preserved in a known easily accessible place, available for consultation whenever required. If the Manual is lost, damaged or becomes illegible, contact your reseller or directly manufacturer for a copy.

If the equipment concerned changes ownership, the Manual has to be handed over to the new owner.

This manual reflects the state of the techniques at the moment the machine has been placed on the market and it doesn't has to be considered obsolete just because not yet updated according to the new expertise. The manufacturer reserves the right to update the production and related manuals without updating the production and the previous manuals, except for special cases. In case of doubts, please contact the nearest Customer Assistance Service of the manufacturer.

The manufacturer aims to continuously improve its products.

For this reason, the manufacturer is keen to receive any report or proposal aimed at improving the machine and / or the manual. The equipment has been delivered to the user under warranty conditions at the moment of the purchase. Please contact the manufacturer for further details.

### 1.3 - Warranty

Under no circumstances the user is allowed to tamper with the machine. In case of fault refer to your supplier.

## 7 - Maintenance

### 7.1 - Prescriptions

**WARNING!** All maintenance and cleaning intervention must only be carried out with the machine shut down and disconnected from the mains.

The area where maintenance is performed must always be clean and dry.

Do not allow unauthorized personnel to operate on the machine.

Any possible replacement of components, including the replacement tools, must be carried out with original spare parts by authorized workshops or directly by the manufacturer.

### 7.2 - Lubrication

The machine does not require lubrication.

### 7.3 - Cleaning the machine

#### **WARNING!**

- Unplug the machine from the mains before cleaning.
- Do not wash the machine with pressurized water jet.
- With a sponge soaked in water and suitable non toxic neutral degreasers (pH 7), remove any residues off the machine.
- At the end of each working cycle for cleaning, remove the following parts.

#### 7.3.1 - Disassembling the tank, spiral, ring and rotor and cleaning the outlet

- Turn the tank counterclockwise (1) and lift it upwards (2).
- Undo the ring (3), then remove the pasta screw (4).
- Slacken off the ring (10) with the provided wrench, then unscrew it by hand until it comes off completely.
- Extract the extruder (9) and screw (7) from the outlet (6).
- Pull the handwheel out (5), rotate the outlet tube and extract it (7).
- Extract the opening/closing tube (6).
- Remove the any pasta residue from inside the outlet port.
- Once all parts are clean and washed, reassemble the machine.

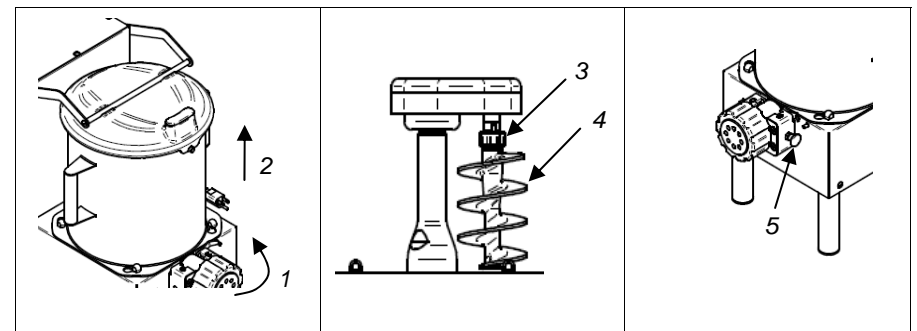


Fig. 7.2.1

## 6 - Description of the machine

### 6.1 - Prescriptions

#### WARNING!

Only authorized personnel can operate on the machine.

Prior to the start up the operator must first ensure all the guards are in place and all the safety devices are present and effective. Otherwise, shut the machine down and contact the operator in charge with maintenance.

Ensure that the of flour / egg ratio is always  
1kg of flour / 400g of egg.

Assemble the machine's pasta extruder, screw and blade before starting.

### 6.2 - Dough preparation


1. Make sure the pasta shutter lever is set to "C"
2. Pour the flour mix in the mixing basin
3. Close the top cover
4. Start the machine mode with button "1" (Fig. 3.1.1)
5. Start pouring the eggs already beaten in the feeder funnel
6. After the eggs where poured, wait for the dough to be ready (about 15 min)

### 6.3 - Extrusion

1. Ensure the proper extruder is fitted on the locking ring
2. Turn the shutter lever to "O"
3. The spiral will process the dough. Once the pasta will reach an adequate pressure the extruding will begin.
4. Cut with a knife the dough that comes out of the extruder to the necessary length
5. When the basin is empty, shut off the machine.

### 6.4 - Using the dough cutter

1. Attach the pasta cutter accessory "1" (Fig. 6.4.1) to the front pins of the pasta machine.
2. Insert connector "2" (Fig. 6.4.1) into connector "6" (Fig. 3.1.1).
3. Start the machine in die mode.
4. Intervene on potentiometer "3" (Fig. 6.4.1) to adjust the speed of the pasta cutter to cut the pasta to the desired length.

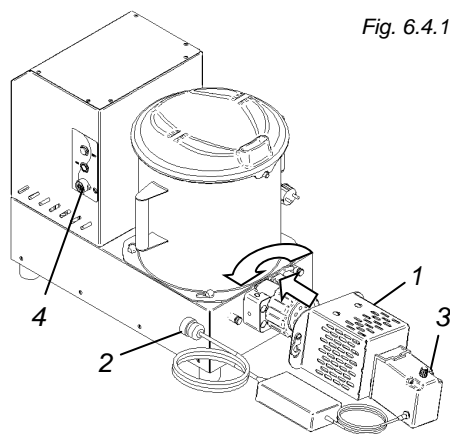

Any attempt of the user or unauthorized personnel to disassemble, modify or more generally tamper with any part of the machine will cause the Declaration of Conformity drawn up in accordance with **EEC Directives 2006/42** to lapse, it shall void the warranty and will relieved the Manufacturer from damages caused by such behaviour.

The Manufacturer shall be relieved of all liability in the following situations:

- incorrect installation;
- improper use of the equipment by inadequately trained personnel;
- use contrary to regulations in force in the country where the equipment is used;
- omitted or poor maintenance;
- use of non-original spares or not specific for the model;
- total or partial non-compliance with these instructions- with spare parts that are not original or are not specific for the model.

### 1.4 - Description of the machine

The machine in your possession is a simple, compact, highly efficient and powerful equipment.

- Since it must be used in food applications, the components were carefully chosen to provide maximum hygiene.
- Stainless steel tank.
- The tools are made of stainless steel to ensure durability and maximum hygiene.
- Bronze outlet and dies.
- Extruder outlet shutter system.
- Maximum mixing capacity 4.2 kg (3 kg flour 1.2 kg egg)
- Pre-arranged for dough-cutter installation.
- Ventilated single-phase motors offering the following advantages:
  - consistency, high performance and durability of the motor;
  - increases the real operation time due to fewer interruptions.

The version represented in this manual have been built in compliance with **EC Directive 2006/42** and further modifications.

In case of accident, no responsibility can be charged to the manufacturer if the machine has been modified, tampered with, if it has been used with the safety guards removed or for purposes not permitted by the manufacturer.

### 1.5 - Permitted use

The machine was designed and built for fresh pasta production.

It is to be used in professional environments; the machine operator has to be specialize din the field and have read and understood this manual. Do not use the machine unless safely fixed to a solid workbench.

### 1.6 - Improper use not permitted

The machine must be used exclusively for the purposes intended by the manufacturer; in particular:

- **do not** use the machine for food products other than those indicated by the manufacturer.
- **do not** use the machine unless it has been properly installed with all the

protections intact and properly assembled to avoid the risk of severe injury.

- **do not** access the electrical components without having previously disconnected the machine from the mains: **ones risks electrocution.**
- **Follow** the indicated flour / liquid quantities. Wrong quantities of ingredients can generate permanent damage to the machine.
- Do not wear clothing which do not follow the safety regulations. Check with your employer as regards the safety regulations and safety equipment to be provided with.
- **Do not** use the equipment if damaged.
- Before using the machine make sure that any dangerous condition has been appropriately cleared. In case of abnormal operation, stop the machine and warn the persons in charge with maintenance.
- **Do not** allow unauthorized persons to operate on the equipment. The emergency treatment in case of an accident caused by electrical shock implies to first remove the contact between the injured person from the conductor (since usually the person faints). This is dangerous operation. The victim in this case is a conductor: touch him/her could imply being electrocuted.  
It should therefore first be remove contacts directly from the supply valve, otherwise move the victim using insulating materials (wood or PVC stick, cloth, leather, etc.). It is recommended to call for medical staff, the patient has to be transferred to a hospital.

## 5 - Starting-up and shutting-down

### 5.1 - Checking the electrical connections

Connect the plug to the mains and press the start button (1 Fig. 3.1.1). The machine gets enable in extruding mode; ensure the spiral direction of rotation is counter-clockwise.

Otherwise, disconnect the machine from the mains and contact your supplier.

**Note:** In the machines connected to a single phase line, manufactured for this specific power supply, the correct direction of rotation is determined directly by the manufacturer.

### 5.2 - Checking presence and effectiveness of safety devices and protections

#### 1 - Interlocked cover

Ensure the machine stops when the upper cover is open.

When the cover is open the machine **must not** run.

#### 5.3 - Checking the effectiveness of the emergency button (5 fig. 3.1.1)

When machine is connected to the mains and tools are in movement, press the shut down button (3 Fig. 3.1.1). The machine must shut down.

#### 5.4 - Machine start up (1 or 3 fig. 3.1.1)

To start the machine, connect it to mains power, then press the start button (1) Fig. 3.1.1.

#### 5.5 - Machine shut down (fig. 3.1.1)

To shut down the machine, push the shut down button, "3" Fig. 3.1.1.



maintenance. Prepare suitable lighting around the machine to ensure proper visibility to the machine operator.

- Remove the cellophane wrapping off the machine and other packaging present on the inside.

**4.3.1 - Disposing the packaging**

The components such as cardboard, nylon, wood products are comparable to municipal solid wastes. They can therefore be freely disposed off. The Nylon is a pollutant material that produces toxic fumes when burned. Do not burn it; dispose it off in accordance with the laws in force regarding the matter. If the machine is delivered in countries where special rules are implemented, the packaging must be disposed off according to such regulations.

**4.3.2 - Handling the machine**

**WARNING!**

Handle the machine with care and attention, avoid accidental falls that could damage it. To avoid muscle strain, when lifting the machine, use the force of the legs.


**4.4 - Electrical connections**

**WARNING!**

Ensure the mains match the voltage given on the equipment's ID plate. All interventions must be carried out exclusively by specialized and expressly authorized personnel. Carry out the electrical connection to properly earthed mains.

**4.4.1 - Single phase machine 220 Volt-50 Hz**

In this version the machine is supplied with a power cable having 3 x 1.5 mm cross section. The cable is connected to a three-poles single-phased plug. Connect the cable to single phase 220 Volt-50 Hz mains; interpose a differential circuit breaker of 16 amps.

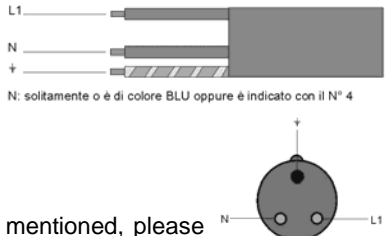

In installations with voltages other than those mentioned, please consult the manufacturer. Should it be necessary to lengthen the power cable, use a cable having the a cross section that matches the one installed by the manufacturer.

**1.7 - Identification of the equipment**

Providing an exact description of the "Version", the "Serial Number" and the " Year of manufacture" of the machine will allow rapid and effective answer from our customer service. It is recommended to indicate the machine version and serial number whenever you call for service.

Collect these data from the plate shown in Fig. 1.7.1. It is suggested to insert the machine identification data in the following table:

|                          |
|--------------------------|
| Machine version.....     |
| Serial No.....           |
| Year of manufacture..... |
| Type.....                |

MOD: **A**  
VOLT: **B** WATT: **C**  
HZ: **D** KG: **E**  
AMPS: **F** ANNO: **G**  
SERIAL NO: **H**  
**I** **L**

*Fig. 1.7.1*

A = machine version  
B = Voltage  
C = motor power  
D = motor frequency Hz  
E = Weight  
F = Amperage  
G = Year of manufacture  
H = Serial No.  
I = Manufacturer  
L = Barcode


**WARNING!**

Do not alter the data on the identification plate under any any circumstances.

### 1.7.1 - Warning plates (fig. 1.7.2)

#### **WARNING!**

Do not intervene on electrical components when the machine is connected to the mains. **Ones risks electrocution. Follow the indications on the plates.**  
**Failure to comply to the recommendations could result in personal injury.**  
Make sure the plates are always in place and readable.  
Otherwise apply or replace them.

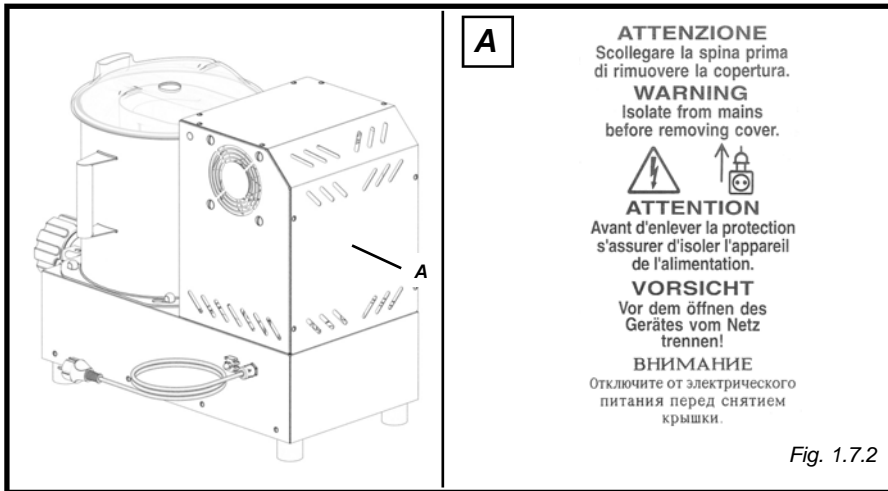

## 3 - Controls and indicator lights

### 3.1 - List of controls and indicator lights

#### 1 - Start mixer button (1 fig. 3.1.1)

By pushing the button the machine starts in mixer mode

#### 2 - Extrusion start button led

Lights up when the button is pressed. (2 fig. 3.1.1)

#### 3 - Shut- down button


Push this button to shut down the machine.

#### 4 - Connector for dough-cutter application

Required to apply the dough-cutter if envisaged.

#### **CAUTION!**

The machine is equipped with a forced ventilation system (fan) controlled by a bimetallic switch connected to the motor. When the motor reaches 60 °C, the fan starts autonomously and continues operating until the motor's temperature drops down to 40 °C.

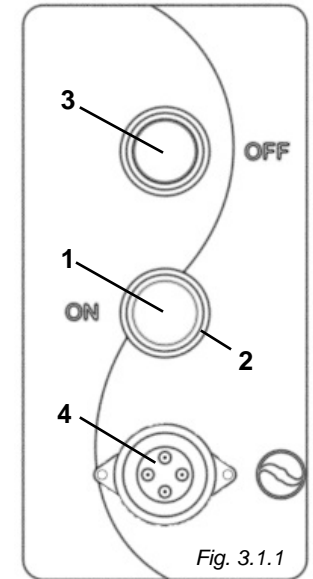

## 4 - Inspection, shipping, delivery and installation

### 4.1 Inspection

The equipment in your possession has been tested at our factory to verify that all moving parts work properly and it is properly adjusted.

### 4.2 - Shipping and handling the machine

All materials shipped have been thoroughly checked before delivery to the shipping company. Unless otherwise agreed upon with the customer, the machine is wrapped with nylon and fixed with steel straps on the bench, cover by a box which is also fixed with steel straps to the pallet. On receiving the machine, check the integrity of the packaging. In case of damage to the packaging, the carrier shall sign the notice of receipt for instance which should sound like this: "I tentatively accept..." and the reason.

ON opening the packaging, in case of badly damaged components of the machine, file a complaint to the shipping company within three days from the date indicated on the documents.


### 4.3 - Installation

#### **WARNING!**

The machine installation area has to be sturdy and the surface has to ensure a safe support. When positioning the machine keep extensive space around it. This allows greater manoeuvrability during operation and ensures access for

## 2.5 - Electrical diagrams

### 2.5.1 - 230V / 50 Hz 1 ph

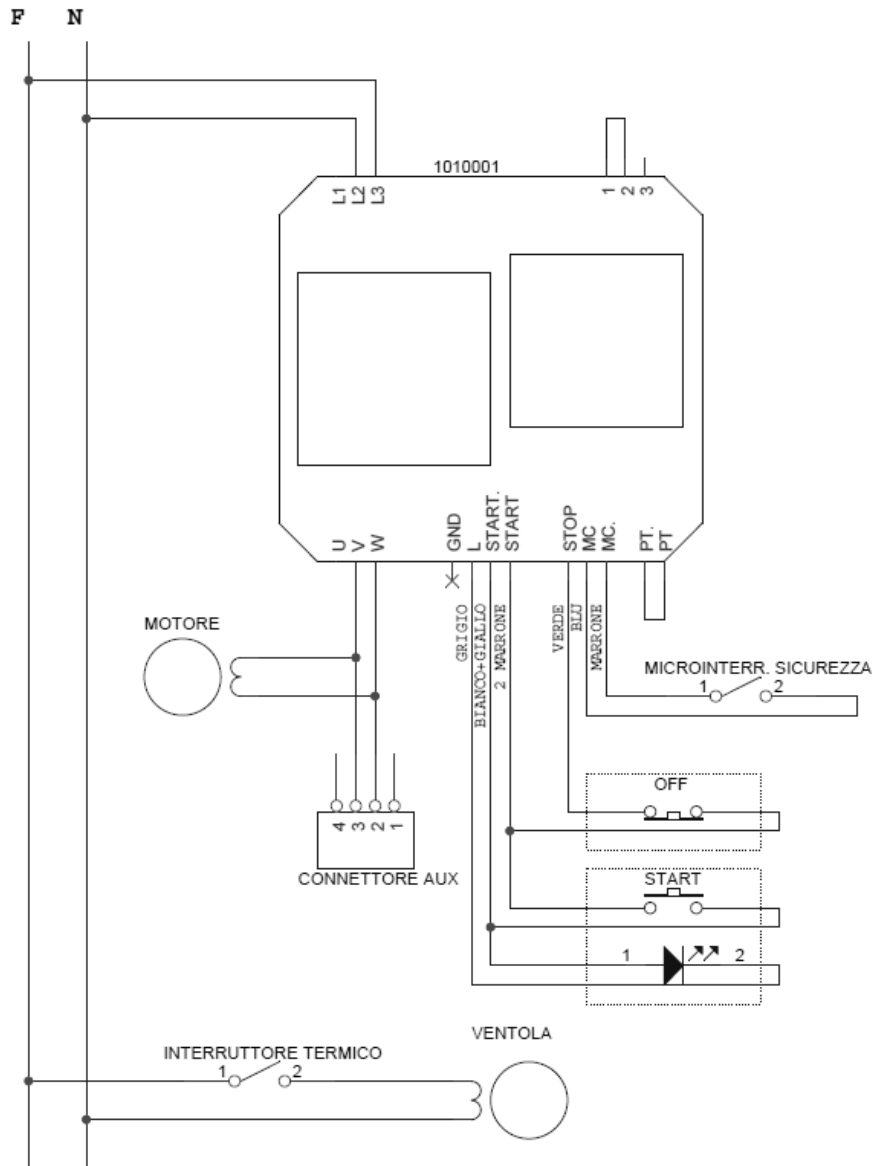

## 1.8 - Safety devices and protections

### WARNING!

Before use ensure that all the safety devices are installed and working properly. Before each working shift ensure that all the safety devices are installed and that they are working properly. Otherwise contact the person in charge with maintenance activity.

#### 1 - Cover sensor.

The machine cannot be turned on when the cover is removed.

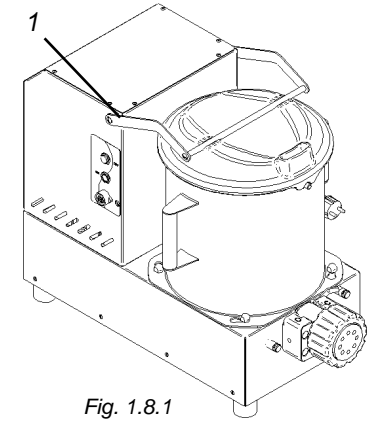


Fig. 1.8.1

### WARNING!

Do not tamper with the safety devices.

## 1.9 - Operating station

The correct position that the operator must occupy to optimize the working with the machine is shown in fig. 1.9.1.

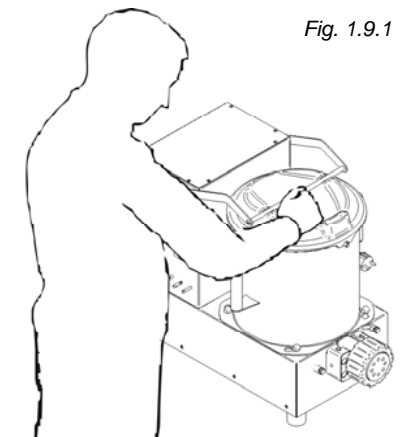



Fig. 1.9.1

# 2 - Technical features

## 2.1 - Main components

To facilitate the understanding of the manual, hereafter there are listed below and shown in fig. 2.1.1. the main parts of the machine.


1. Feet
2. Dough basin
3. Bronze dies
4. Safety sensor
5. Feeder funnel
6. Pasta shutter lever
7. Casing
8. Interlocked cover

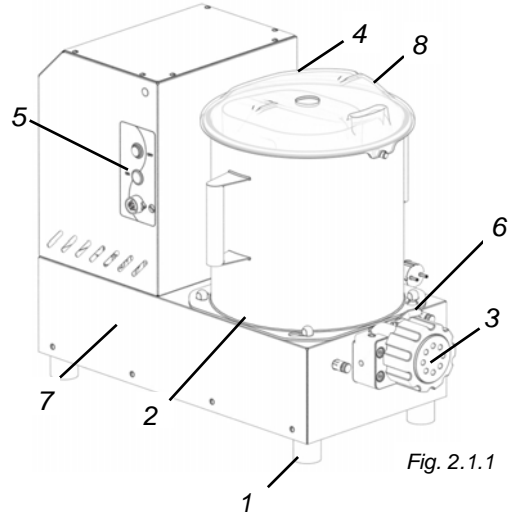

## 2.2 - Technical features

| Motor   | Supply | Hourly capacity | Extruders |
|---------|--------|-----------------|-----------|
| watt/hp | V/Hz   | kg/h.           | ø mm      |
| 750/1   | 230/50 | 8,4             | 75        |

## 2.3 - Dimensions and weight of the machine

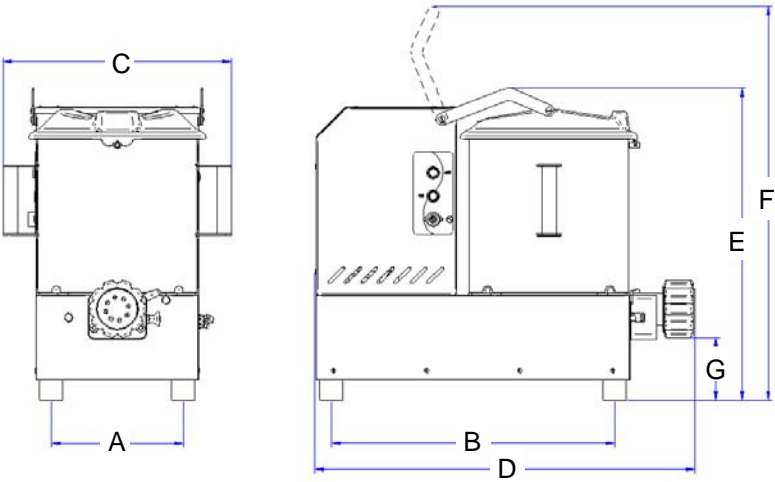

| A   | B   | C   | D   | E   | F   | G   | Net weight |
|-----|-----|-----|-----|-----|-----|-----|------------|
| mm  | mm  | mm  | mm  | mm  | mm  | mm  | kg         |
| 227 | 487 | 393 | 653 | 535 | 680 | 107 | 67         |

## 2.4 - Noise level

The measured machine equivalent noise level does not exceed 70 dB.