

Uppsetning á Netsímanum fyrir Linksys box.

Hægt er að nota tölvusímann með hefðbundnu POTS símtæki en til þess þarf að nota svo til kölluð ATA Box. Síminn selur eina tegund af þessum boxum frá Linksys. Hér eru leiðbeiningar hvernig boxið er sett upp svo að hægt sé að nota hefðbundið POTS símtæki við tölvusímann.

1. Innihald

Auk þessara leiðbeininga innihalda umbúðirnar utan um Tölvusímaboxið eftir- farandi búnað, sem nauðsynlegur er til að geta tengt Tölvusímann við boxið.

- Boxið sjálft
- Spennubreytir, 100-240 Volt
- Netsnúra (blá)
- Símasnúra (grá)



2. Tengingar

Byrja skal á því að tengja boxið við rafmagn með spennubreytinum. Því næst skal tengja netsnúruna í blá tengið á boxinu (Internet) og hinn endann við beini (router) eða í nettengil sem tengdur er við Internetið.



Að lokum þarf að tengja hefðbundið símtæki græna tengið á boxinu (Phone 1) með símasúru.

Til þess að geta sett boxið upp verður tölva að vera tengd sama beini eða neti (með snúru eða þráðlaust) og boxið er tengt við.

3. Leiðbeiningar

- Til að komast inn á boxið þarf að slá inn 4 stjórnur (****) á takkaborði símans sem er tengdur við boxið.
- Því næst heyrir rödd sem biður um að valin sé aðgerð (athugið að röddin talar ensku). Þá á að slá inn á takkaborði símans eftirfarandi skipun: 110# Hægt er að endurtaka aðgerðina til að hlusta aftur.
- Við þetta les röddin upp IP-tölu sem notuð er til að tengjast boxinu (gott er að skrifa töluna niður). Dæmi um IP-tölu: 192.168.10.1
- Nú þarf að fara í tölvuna sem er tengd við sama net og boxið og opna vafra, t.d. Chrome, Safari, Edge eða Firefox.



Athugið að tölvan þarf að vera tengd sama neti og boxið (í sambandi við sama router/beini).

Ef rétt IP tala var valin og tölvan er tengd sama neti og boxið, þá opnast vefsíða fyrir uppsetningu á boxinu.




The screenshot shows the Linksys web interface for a PAP2 device. The page title is "Phone Adapter with 2 Ports for Voice-Over-IP" and the model is "PAP2". The firmware version is 3.1.15(LS). The interface is divided into sections: "Voice", "System Information", "Product Information", and "System Status". The "Admin Login" link is circled in red.

System Information	Value	Value	Value
DHCP:	Enabled	Current IP:	172.21.4.79
Host Name:	LinksysPAP	Domain:	siminn.is
Current Netmask:	255.255.254.0	Current Gateway:	172.21.4.1
Primary DNS:	172.21.1.10		
Secondary DNS:	172.21.1.11		

Product Information	Value	Value	Value
Product Name:	PAP2T	Serial Number:	FLI00J212205
Software Version:	3.1.15(LS)	Hardware Version:	0.3.5
MAC Address:	0021290CBC2A	Client Certificate:	Installed
Customization:	Open		

Hérna þarf að smella á tengil ofarlega til hægri þar sem stendur **Admin login**

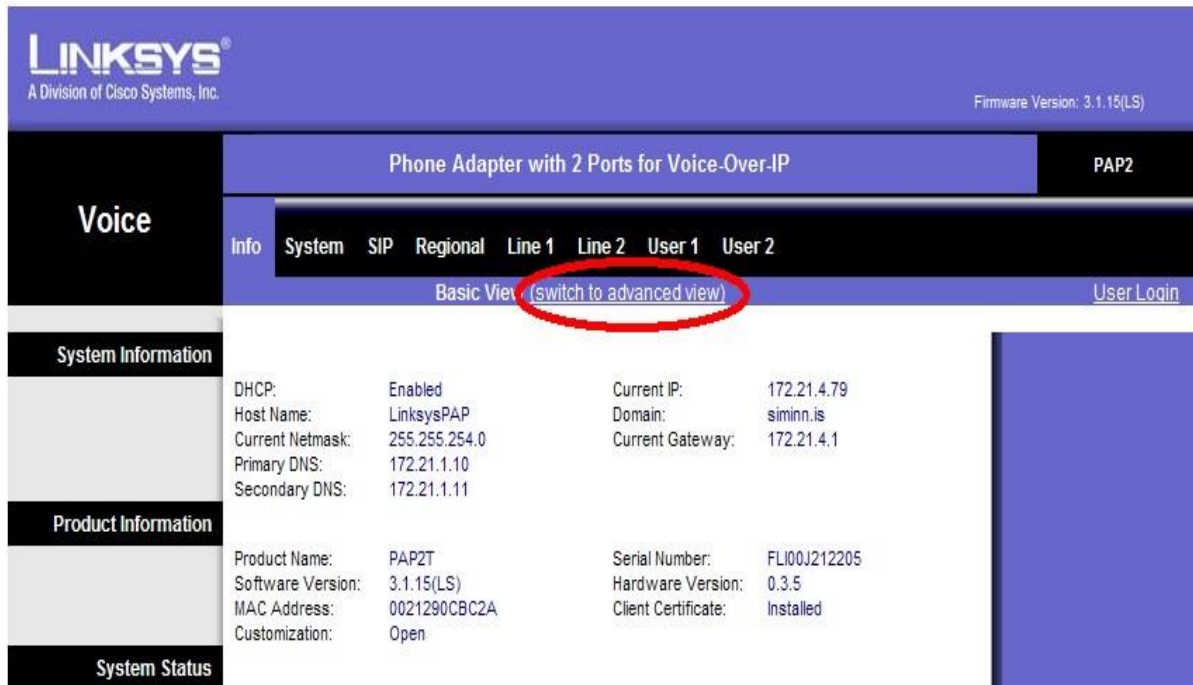

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 3.1.15(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice

Info System SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to advanced view) User Login

System Information


DHCP:	Enabled	Current IP:	172.21.4.79
Host Name:	LinksysPAP	Domain:	siminn.is
Current Netmask:	255.255.254.0	Current Gateway:	172.21.4.1
Primary DNS:	172.21.1.10		
Secondary DNS:	172.21.1.11		

Product Information

Product Name:	PAP2T	Serial Number:	FLI00J212205
Software Version:	3.1.15(LS)	Hardware Version:	0.3.5
MAC Address:	0021290CBC2A	Client Certificate:	Installed
Customization:	Open		

System Status

Næst á að smella á t,,Switch to advanced view“.

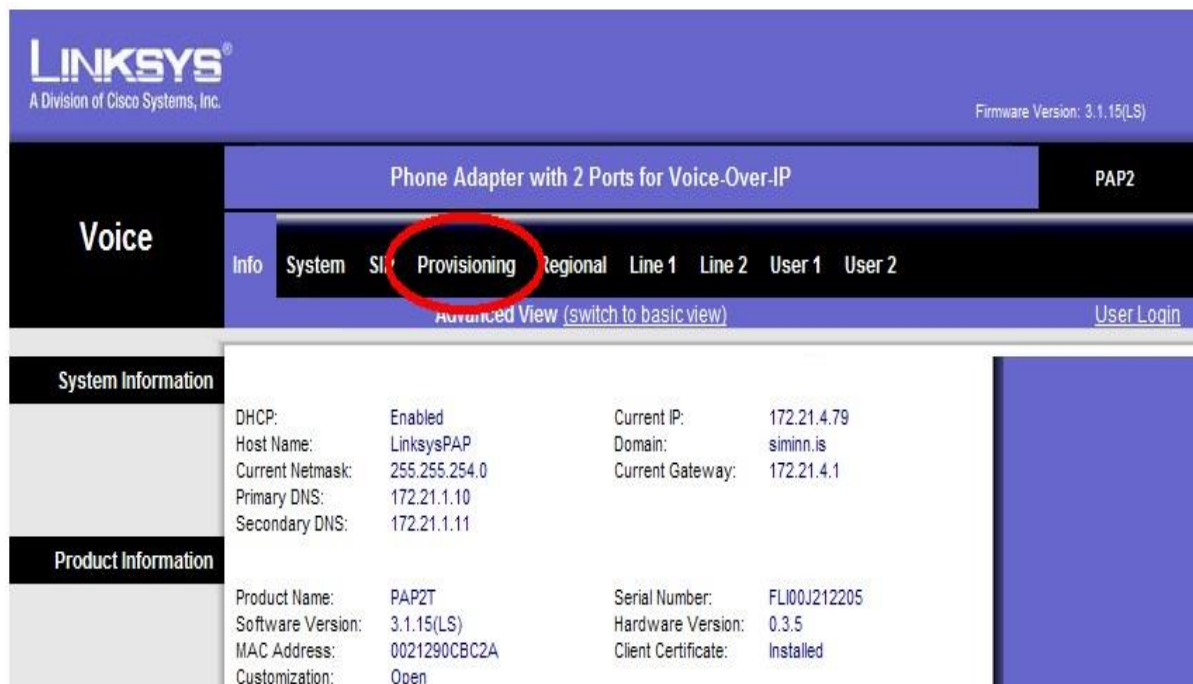

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 3.1.15(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice

Info System SIP **Provisioning** Regional Line 1 Line 2 User 1 User 2

Advanced View (switch to basic view) User Login


System Information

DHCP:	Enabled	Current IP:	172.21.4.79
Host Name:	LinksysPAP	Domain:	siminn.is
Current Netmask:	255.255.254.0	Current Gateway:	172.21.4.1
Primary DNS:	172.21.1.10		
Secondary DNS:	172.21.1.11		

Product Information

Product Name:	PAP2T	Serial Number:	FLI00J212205
Software Version:	3.1.15(LS)	Hardware Version:	0.3.5
MAC Address:	0021290CBC2A	Client Certificate:	Installed
Customization:	Open		

Því næst er smellt á „Provisioning“.

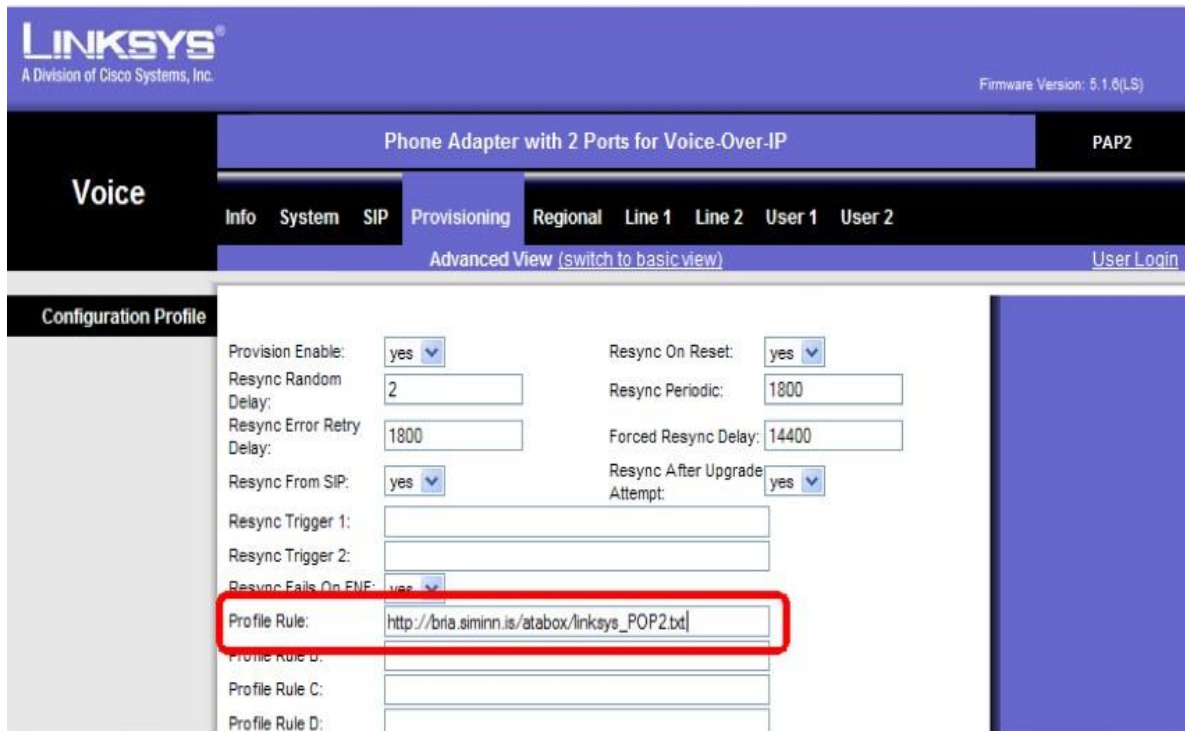

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 5.1.6(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice Info System SIP Provisioning Regional Line 1 Line 2 User 1 User 2


Advanced View (switch to basic view) User Login

Configuration Profile

Provision Enable: yes
Resync Random Delay: 2
Resync Error Retry Delay: 1800
Resync From SIP: yes
Resync Trigger 1:
Resync Trigger 2:
Resync Fails On FNF: yes
Profile Rule: http://bria.siminn.is/atabox/linksys_POP2.txt
Profile Rule B:
Profile Rule C:
Profile Rule D:

Resync On Reset: yes
Resync Periodic: 1800
Forced Resync Delay: 14400
Resync After Upgrade Attempt: yes

Í gluggann „Profile Rule“ þarf að setja eftirfarandi slóð inn:
http://bria.siminn.is/atabox/linksys_POP2.txt

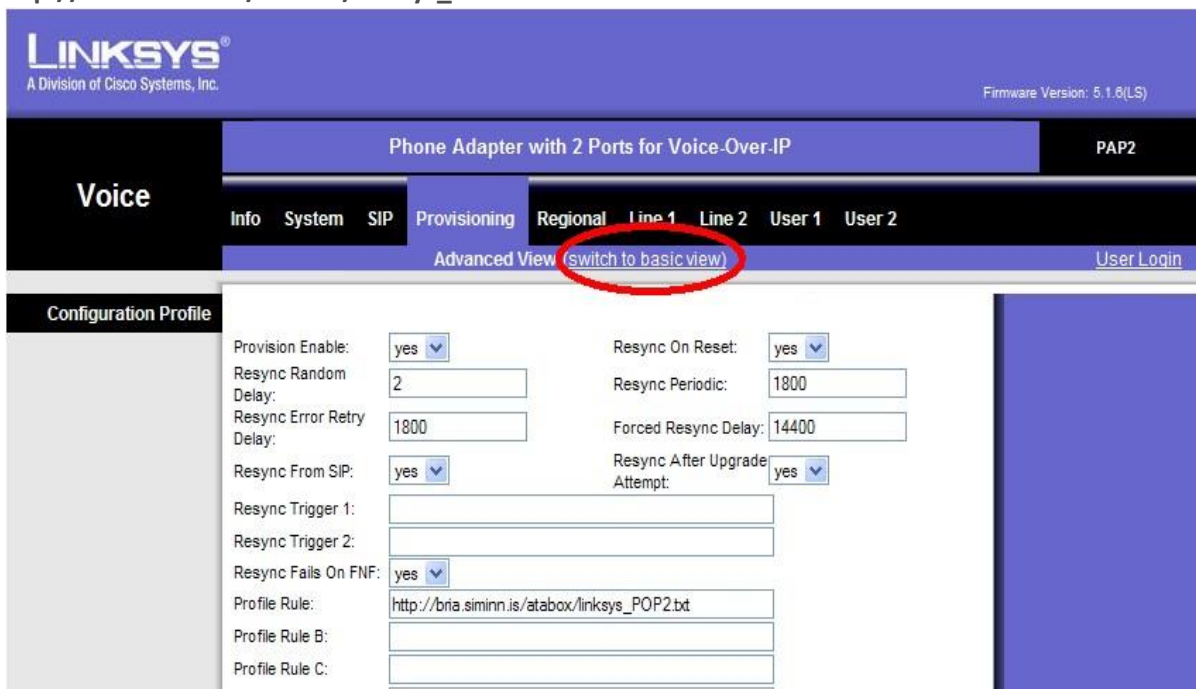

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 5.1.6(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice Info System SIP Provisioning Regional Line 1 Line 2 User 1 User 2


Advanced View (switch to basic view) User Login

Configuration Profile

Provision Enable: yes
Resync Random Delay: 2
Resync Error Retry Delay: 1800
Resync From SIP: yes
Resync Trigger 1:
Resync Trigger 2:
Resync Fails On FNF: yes
Profile Rule: http://bria.siminn.is/atabox/linksys_POP2.txt
Profile Rule B:
Profile Rule C:

Resync On Reset: yes
Resync Periodic: 1800
Forced Resync Delay: 14400
Resync After Upgrade Attempt: yes

Næst er valið „Switch to basic view“

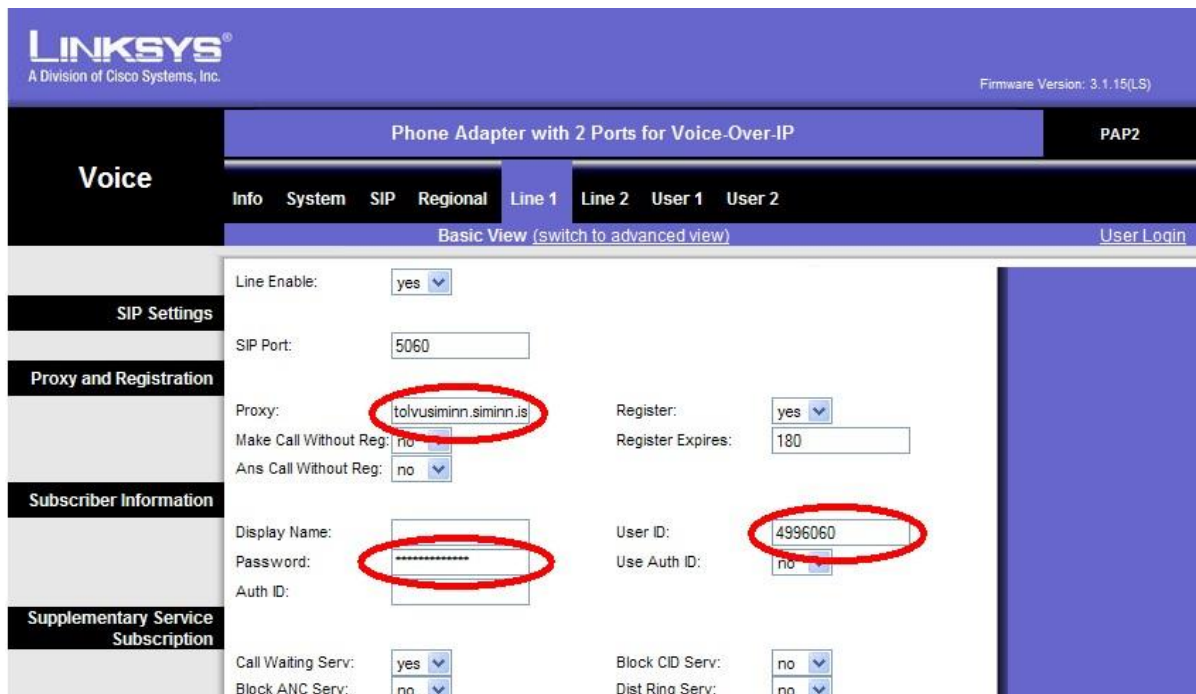

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 3.1.15(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice

Info System SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to advanced view) User Login

Line Enable: yes

SIP Port: 5060

Proxy: tolvusiminn.siminn.is

Register: yes

Register Expires: 180

Make Call Without Reg: no

Ans Call Without Reg: no

Display Name:

Password: *****

User ID: 4996060

Use Auth ID: no

Auth ID:

Call Waiting Serv: yes

Block CID Serv: no

Block ANC Serv: no

Dist Ring Serv: no

Því næst er smellt á „Line 1“. Hér er slegið inn símanúmer (User ID) og lykilorð (Password) og því næst „Save Settings“, neðst á síðunni. Nú ætti Tölvusímaboxið að vera klárt til notkunar.

4. Endurstilling

- Til að komast inn á boxið þarf að slá inn 4 stjörnur (****) á takkaborði símans sem er tengdur við boxið.
- Því næst heyrir rödd sem biður um að valin sé aðgerð (athugið að röddin talar ensku). Þá á að slá inn á takkaborði símans eftirfarandi skipun: 877778
- Smellt er á (1) til að staðfesta og tækið mun endurræsa sig eða (*) til að hætta við.