



W110x130 S

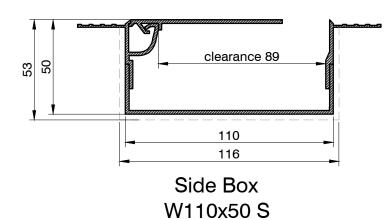


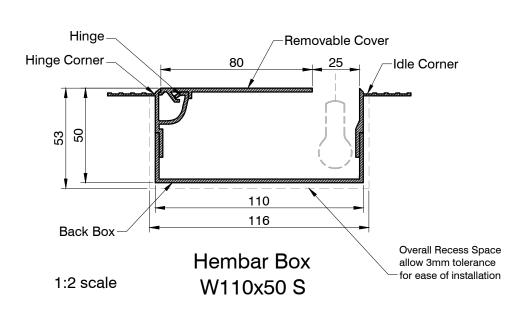

INSTALLATION NOTE:


Make sure there is space for window/door handles. Boxes and blinds can also be mirrored in vertical plane for opening towards the room.

Sample Installation Detail

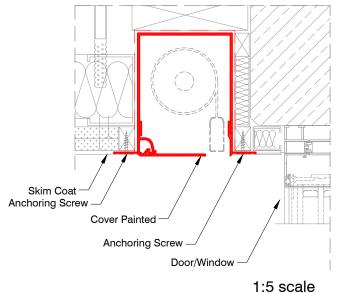


head box

Skim Coat Flanges **Location Options:**

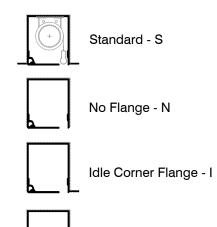


Hinge Corner Flange - H

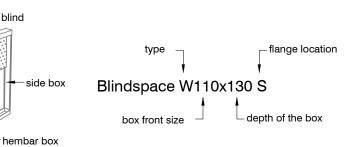


Frame Layout

Top down configuration of blinds is shown. Bottom up configuration is also possible. For bottom up configuration the frame layout should be mirrored in horizontal plane.

side box

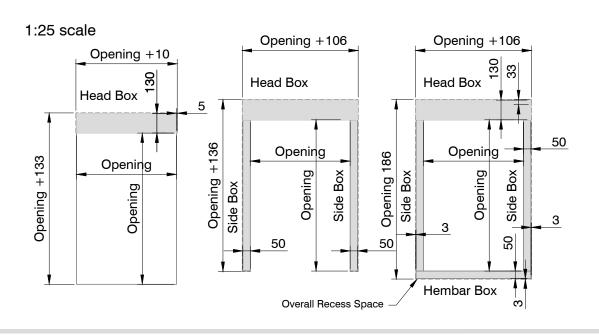

Blindspace W110x130 Product Recessed aluminium boxes and covers designed to conceal window blinds. Anodized Aluminium, grade: front plate: EN 6063 T6 back plate: EN AW-1050A H14/H24 - Unfinished for site painting - Primed for site painting - Pre-finished to RAL colour Blind sizes Blind Sizes to fit inside the box: Benthin Large Standard Roller Blind RL01 Opening Width max: 4000mm Opening Height max: 3800mm Boxes should be fixed on both sides. The finished plaster level should be flush with chamfered edge. Anchoring countersink screws through skim coat flanges are recommended. Drawing Standard Blindspace Boxes W110x130 for Window Blinds W110x130, W110x50 October, 2017 Dimensions in mm Notes Do not scale from drawing M. Kozak, J. Dobosz A. Sundelin R-0: first issue

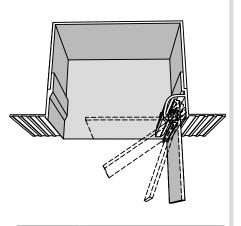

Print date	2017-10-20
Print file	
Page size	ISO A3 420x297
Remarks	RWE

BL'NDSPACE®