



Head Box W110x170 S

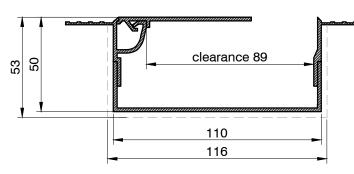


Side Box W110x50 S

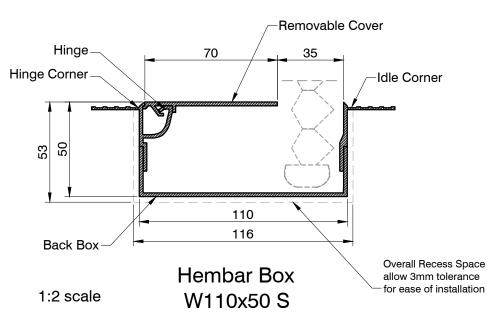


INSTALLATION NOTE:


Make sure there is space for window/door handles. Boxes and blinds can also be mirrored in vertical plane for opening towards the room.

Sample Installation Detail

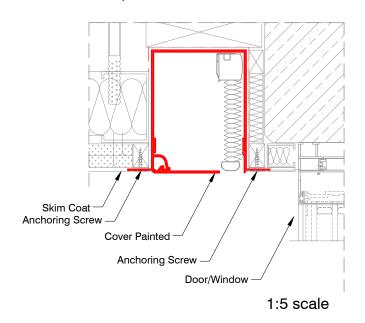

Skim Coat Flanges Location Options:

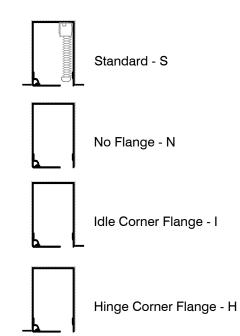

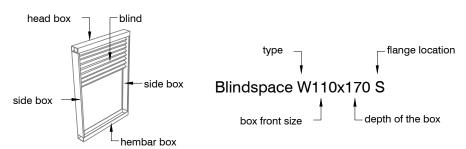


Frame Layout


Top down configuration of blinds is shown.


Bottom up configuration is also possible.

For bottom up configuration the frame layout should be mirrored in horizontal plane.

1:25 scale

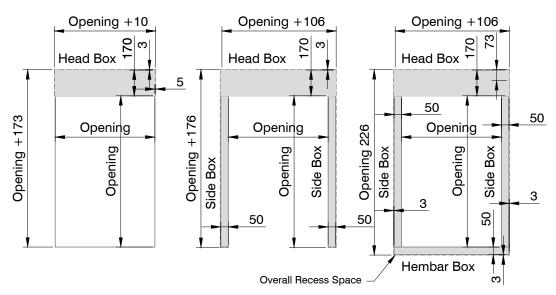

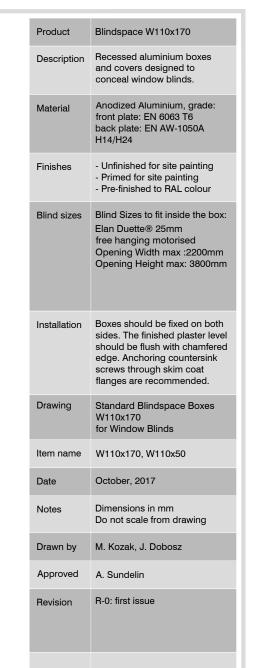

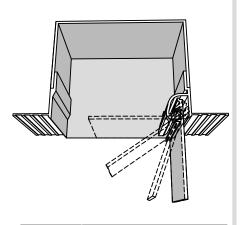

Print date	2017-10-20
Print file	
Page size	ISO A3 420x297
Remarks	PWE

BL'NDSPACE®