



INSTALLATION NOTE:

Make sure there is space for window/door handles. Boxes and blinds can also be mirrored in vertical plane for opening towards the room.


Sample Installation Detail

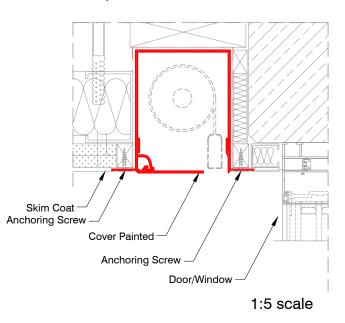

Skim Coat Flanges Location Options:

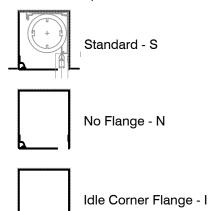




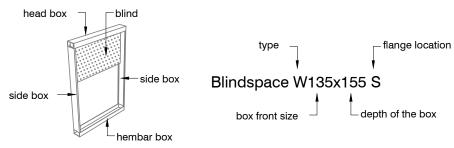



Frame Layout

Top down configuration of blinds is shown.
Bottom up configuration is also possible.
For bottom up configuration the frame layout should be mirrored in horizontal plane.

1:25 scale

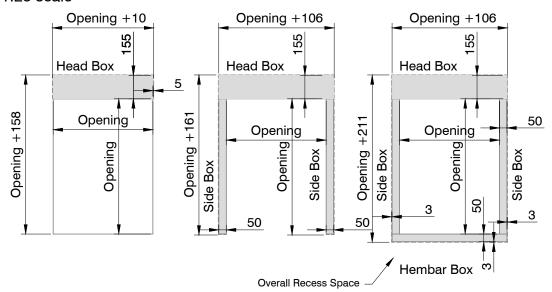

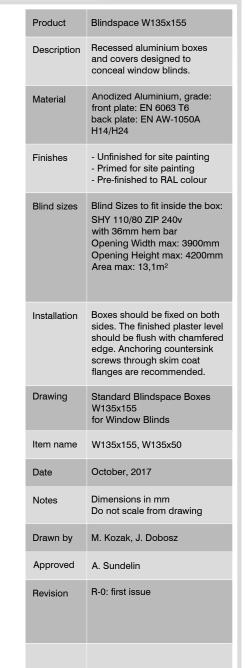

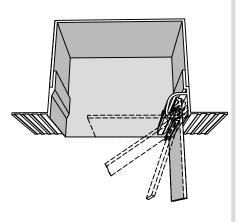

Print date	2017-10-20
Print file	
Page size	ISO A3 420x297
Remarks	ZWE

BL'NDSPACE®