

Instruction Sheet – Ozone/UV Sanitizer Add-On Kit, M-Series Spas



(1 EA) OZONE/UV SANITIZER, UNIVERSAL VOLTAGE, 4-PIN AMP

(2 EA) SCREW,PAN HD,PHIL,#8-16 X 3/4", SHEET METAL, TYPE AB, ZP

(1 EA) OZONE LIQUID GAS MIXER, 3/4" BARB X 3/4" BARB

(2 EA) COUPLING, 3/4" SB X 3/4" SB, PVC, SCH40, WHT (SHUR-GRIP)

(6 FT) TUBING, PVDF, 1/4" ID X 5/16" OD, KYNAR-FLEX 2750

(1 EA) INSTRUCTION SHEET, OZONE/UV SANITIZER ADD-ON KIT, M-SERIES SPAS

WARNING: This kit should only be installed by an authorized spa technician!

1. Remove existing DEL Ozone/UV as described below.



Remove Screw

Remove Screw



Remove 1/4" hose

2. Remove red T as described below.




1. Remove 1/4" hose.

2. Remove brackets.

3. Cut 3/4" hose at least 1ft away from edge of the red T.

3. Place red T as shown below.

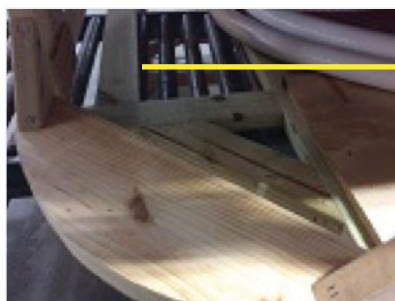

Re-mount red T
in area shown




4. To install DEL Ozone/UV.



Remove Screws

Remove Screws

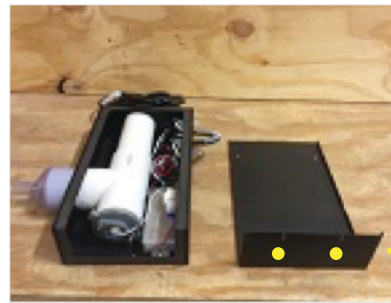

Drill 2 holes as marked in picture

5. Install DEL Ozone/UV as shown below



Insert Screws to Attach Ozone cover to spa.



Re-assemble Ozone and insert the top screws.

6. Insert check valve into 16" piece of $\frac{3}{4}$ " hose and insert the $\frac{3}{4}$ " hose to the top side of the Ozone/UV. (Follow flow arrow on check valve)



7. Connect $\frac{3}{4}$ " hose coming from the suction into black check valve.

8. Using white coupling shown below connect bottom side of Ozone/UV into the red T. See step 9 for image.



9.



Bottom side of
Ozone

White coupling

Red T


10. Open control pack



Remove Screws



11. Insert Del Ozone/UV plug into Control Pack (J24)

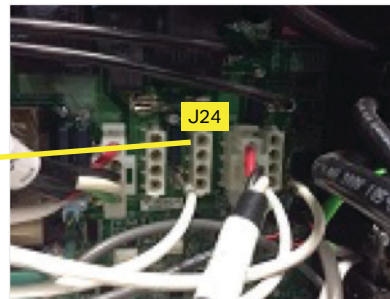

12. Installation is completed.