



**STRONGWALL &  
STRONGFENCE  
INSTALLATION  
GUIDE**

## INSTALLATION INSTRUCTIONS

Check bases, StrongWall tops & metal StrongFence tops for signs of damage before and after use. Damaged goods should not be used.

1




Ensure that the side marked "FRONT" is traffic-facing.

2




Place the bases next to one another.

3

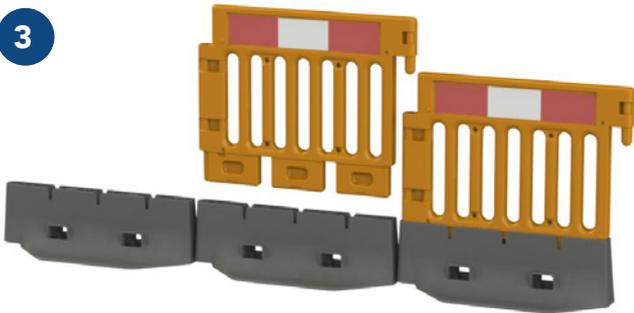

Ensure the side marked "FRONT" is traffic-facing, then insert the first StrongWall top into the base.

4

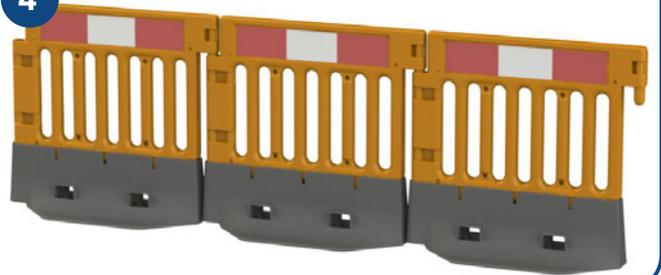

Insert the next StrongWall top so that the connecting pin slots into the locator hole of the previous base.

5



Insert the metal StrongFence top into the StrongWall. Ensure the StrongFence top is pushed down as far as possible.

6



Once installed connect the StrongFence tops together using standard metal fence clamps.

7



Deploy StrongFence at a right angle for stability.

8



For wind speeds over 40mph brace the barrier configuration with 1 StrongFence for every 5, connected via a fence clamp.