

EXOSHIELD **ONE**

INSTALLATION INSTRUCTIONS

Welcome
to your ExoShield ONE kit!

Your film has been pre-shrunk and pre-moulded to fit the windshield. Follow the instructions on the inside of this card for a fast and pain-free installation experience.

Before you get started...

Keep your space clean! Clear away any dirt and debris with soapy water and a lint free cloth.

Prepare your slip solution. Per 1 gallon of water, add 10 drops of Dawn® dish soap or a window film mounting solution such as Tint Slime®.

Grab your tools. Check the list of tools to make sure you have everything you'll need for the install!


TOOLS CHECKLIST:

- Squeegee (e.g. Blue Max or Black Fusion Turbo)
- Heat gun (1000 °F - 12 CFM)
- High quality glass cleaner
- MACTAC Felt Squeegee or a wrapped hard card
- Lint-free, non-abrasive cloths
- Basic white scrub pad

HOW TO INSTALL EXOSHIELD ONE:


1 CLEAN

Thoroughly clean the windshield with a glass cleaner or alcohol-based solution. Follow this with a quick clean with soapy water, taking care to flush out the gaskets.

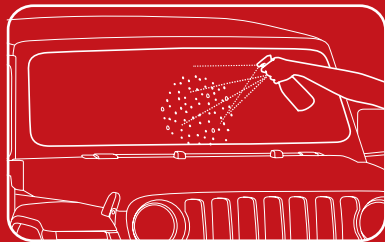

2 INITIAL FIT

Spray the windshield with your soapy water solution & position the film (liner on the outside) to check the fit.

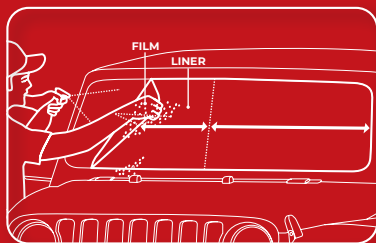

3 PEEL THE LINER

Peel back the plastic liner halfway across the windshield & spray the film with soapy water. Replace the liner and repeat on the other half of the film.


4 PREP THE FILM

With the liner facing out, roll the film tightly. Thoroughly clean and wet the windshield with the soapy water solution.

5 APPLY THE FILM (REVERSE ROLL)

Release a corner of the liner (with film side facing out) and place the film adhesive onto the glass. Unroll by gently pulling the liner while guiding the film into place.

Hint: Watch how it's done using the QR code on the back of this card.

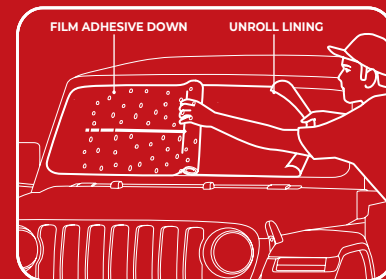


6 POSITION THE FILM

Position the film on the windshield leaving a 1/16" gap between the film and windshield edge on all four sides.

7 TACK & SQUEEGEE

Use a hard squeegee across the center of the film horizontally to tack the film. Firmly squeegee out all fingers, bubbles and excess water from the film.

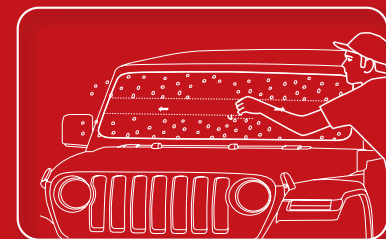

8 FINAL TOUCHES

You may need to touch up the edges by using a heat gun & soft squeegee. This will take care of any remaining fingers and help make sure that the edges of the film stay down.

9 LET IT DRY

We recommend letting the film dry for at least **3 hours** before driving to ensure optimal visibility.



@exoshield



@exo.shield



getexoshield.com

#protectedbyexoshield

Need More Help?



Visit

getexoshield.com/exoshieldone/support

for more resources

Designed in Canada. Made in USA.