



## ASSEMBLY INSTRUCTIONS RPM EZ HAND RAKE

### TOOLS YOU WILL NEED

1. Vise (if you do not have a vise, a pipe wrench will work to hold the handle and prevent turning).
2. 1/2" socket or open-end wrench
3. 9/16" socket or open-end wrench

### ASSEMBLY




**1** After handle is secured with vise/pipe wrench, slip brace on to handle.



**2** Place rake head with teeth pointing downwards.




**3** Insert lag screw through middle tine and into the handle.

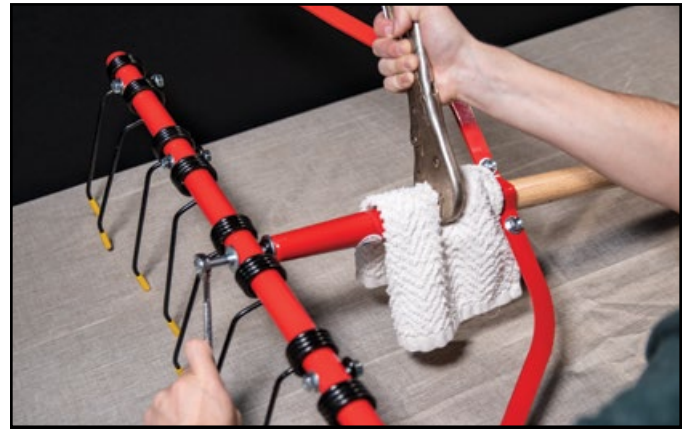


**4** Tighten with 9/16" wrench.



**5** Lag screw should be screwed in completely and very snug.

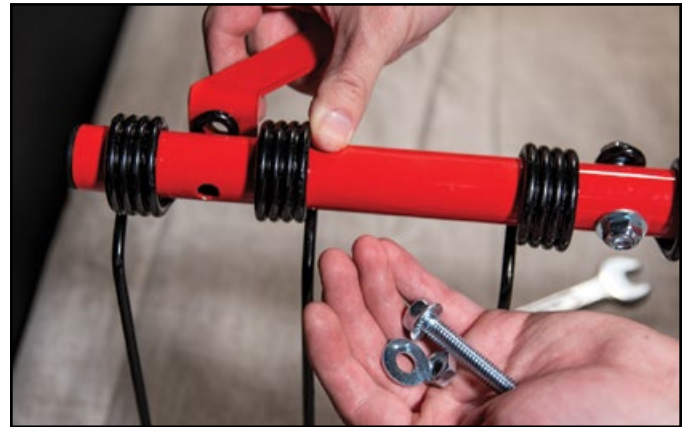


**6** Take the nuts, bolts, and washers off each end of the rake head (bar).

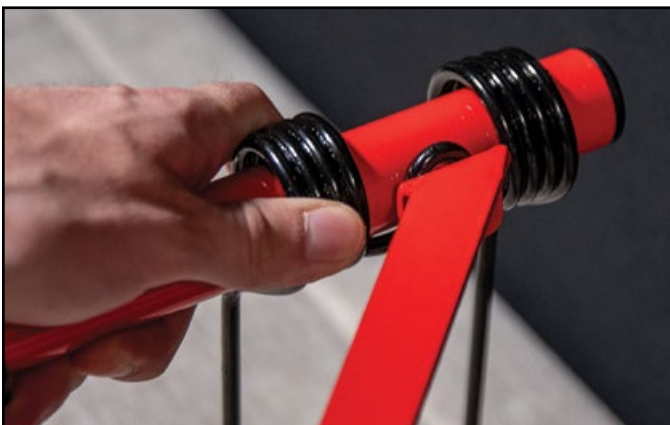

**7** Slide the brace down to the bar and line up the drill hole of the brace to the tine and drill hole on the bar.



**8** Do not tighten the nuts on the brace at this time.

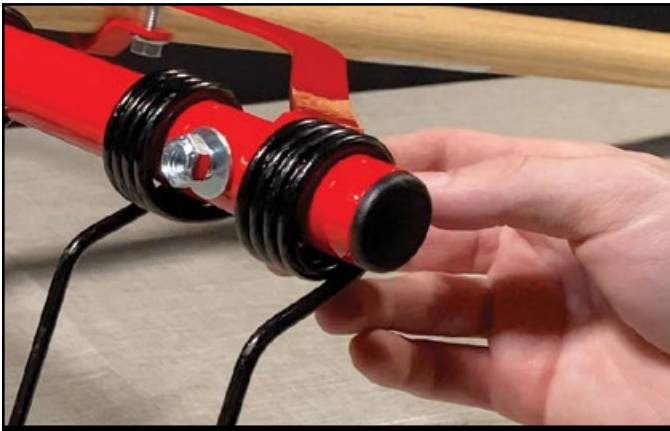

**9** Insert washer and bolt through the tine, bar, and brace.



**10** Secure with the nut on the back of the brace using 1/2" wrench until snug.



**11** Tighten all tines using 1/2" wrench.



**12** Tighten the nuts on the brace where it is attached to the handle.

## ADDITIONAL HELP

If additional help is required, please feel free to contact us at 1-530-870-4290 or visit our website at [www.rpmhandrake.com](http://www.rpmhandrake.com) and fill out our contact form.



RPM EZ HANDRAKE  
P.O. Box 5005 • Oroville, CA 95966  
[www.rpmhandrake.com](http://www.rpmhandrake.com)