

# Instructions for Aluminum Post Bracket

For 36" and 42" Height Aluminum Railings



www.colorguardrailing.com

## Component List:

- A) Aluminum Post Bracket - 1
- B) Post Bracket Leveling kit - 1
- C) Post Collar - 1
- D) Post Cap - 1

## Tools Required:

- Level
- Rubber Mallet or Wood Block
- Tape Measure
- Touch-up Paint - optional
- 8" File
- Silicone Adhesive - optional
- Always wear safety goggles*

*Installer is responsible for quality workmanship and meeting all building codes.*


MADE IN THE USA

ezTIPS

- Read and understand all instructions before starting your installation.
- Plan your railing project completely. A drawing or sketch is recommended.
- Check local building codes.
- Check all cartons for proper components.
- Paint all cut ends to protect from the environment.
- Wear personal protective equipment, such as safety glasses, gloves, etc.

# 1

## Aluminum Post Installation

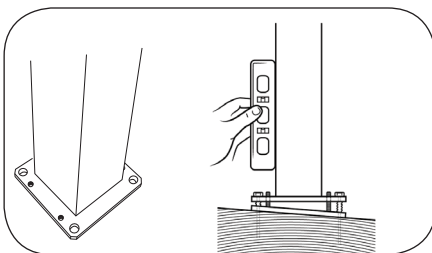

1. Measure and locate all posts.
2. Install posts into frame of deck. Standard deck boards do not provide enough support. Additional blocking is required for proper post installation.
3. Level your posts using the kit provided. Posts must be straight, plumb, and at the same height.
4. Use all 4 holes in all posts. The posts will accept bolts up to 3/8" diameter. Bolts are not provided.