



Rotofast Cloud Installation Instructions

1. Spread **clean** paper or plastic covering onto floor.
2. Remove panels from the crating.
3. Arrange cloud panels onto floor face down where they are to be installed in the ceiling.
4. After proper placement use Laser Beam aimed up to the ceiling to mark (with a pencil) the suspension spot on ceiling or deck.
5. Install brackets in ceiling.
6. Install Rotofast Loops into Rotofast Anchors on panels using Caddy Speed Link Wire Kit SLD15L2TP (or similar kit).
7. Install and adjust to desired height and level.

Rotofast Cloud Anchors:

Follow [Rotofast](#) Instructions included with wall anchors. Use Sonus North America placement recommendation sheet included with panel order for quantity and anchor location on panels and clouds.

Using Rotofast Cloud Anchors:


Insert loop into flat side of anchor until it snaps into locked position. Using the loop as a handle, screw clouds/anchor into fiberglass back.






Notes:

If cloud has a perforated white vinyl back (used for white light reflection), cut a small slot in vinyl to start anchor thru.

When installing the screw with the black ratchet into either the white screw anchor, or into the wall with the screw only, leave the ratchet slightly loose for easier alignment.

Each Roto-fast anchor will hold up to 43 lbs. Each square foot of panel weighs approximately ½ lb.

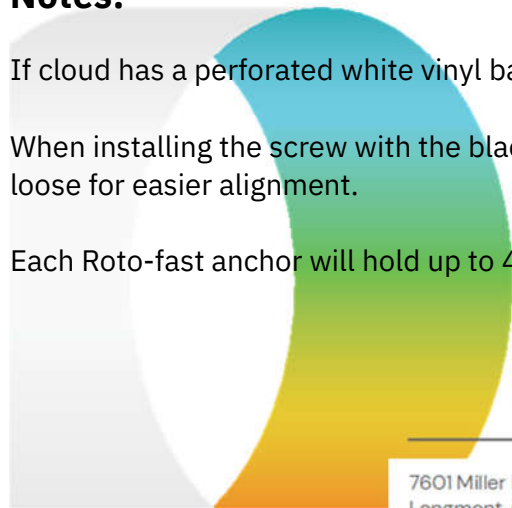

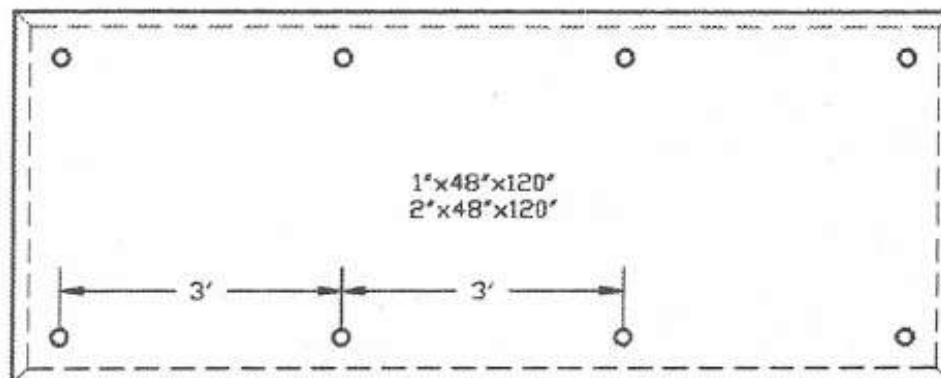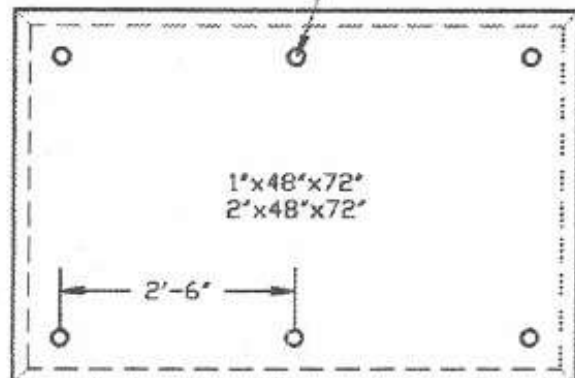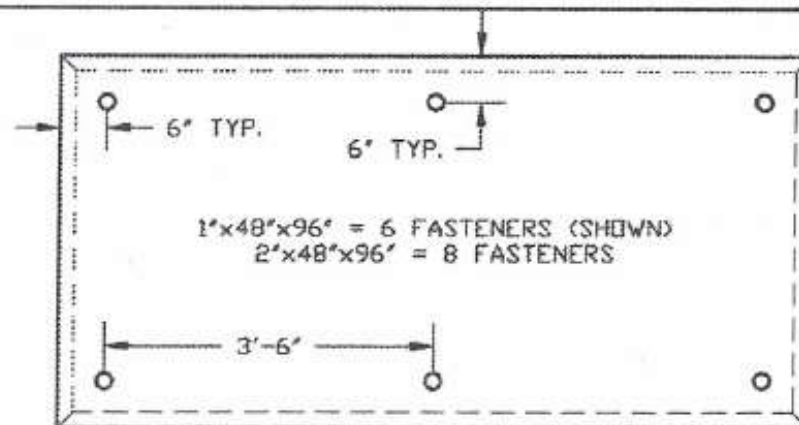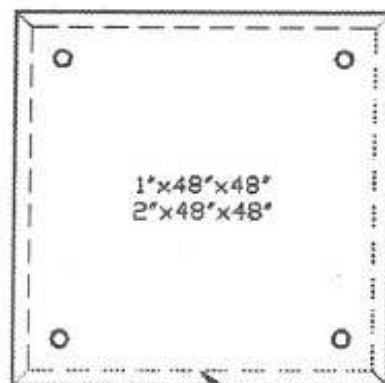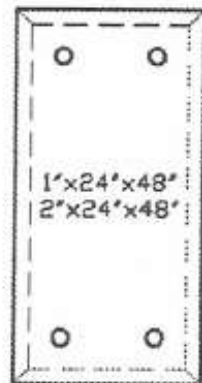

ROD/FACT ANCHOR

HIDDEN LINE REPRESENTS
FABRIC WRAP AROUND