



QUICK START GUIDE

V4 ■

(NOTE: MODELS MAY VARY)

Scan this QR Code for a direct link to all LiveView Packing and Quick Start Guides, or visit liveviewtech.com/install

LiveView Technical Support: 888-588-9408




STEP
1

Trailer must be positioned where solar panels can be facing south and have full sunlight with no obstructions from buildings, trees or other obstacles. Once in position, pull spring pins and extend outriggers. Lower all the jacks (4) to support the trailer.




STEP
2

Deploy solar panels by pulling the release handle. Lift solar panel until locking rod resets and locks the solar panel in its upright position.

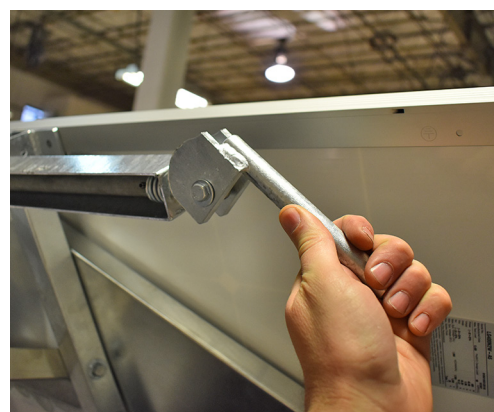

STEP
3

Pull spring pin (P) to rotate panels to allow access to the Head Unit Box.

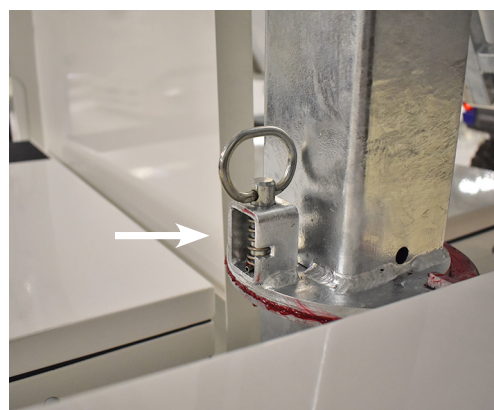


STEP
4

Open the camera box and remove the large top pad and place it on top of the closed box next to it. Then place the head unit, cameras (3), floodlight, and speaker onto the pad. Do not place items on the ground. Once items have been removed from the box, close lid to make room to rotate solar panels.



STEP
5

Adjust solar panels to be out of the way of the mast. Then carefully lift the head unit directly onto the mast (pole tenon) as pictured. Use handles on the mast to assist you as you step up on to the trailer. Make sure not to pinch any wires.

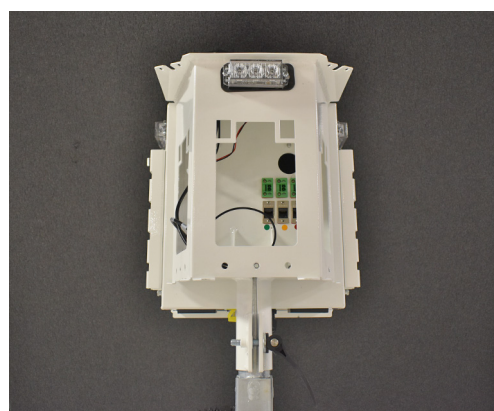

STEP
6

Attach the floodlight to the top of the head unit as pictured, and tighten the black knob. Floodlight may be placed on the left or right, depending on the location. Adjust floodlight to aim slightly downward as pictured.



STEP
7

Insert the wire from the head unit directly into the speaker slot and tighten the speaker wire cap. Then attach the speaker to the back of the head unit as pictured, then tighten the black knob in place. Make sure not to pinch any wires.




STEP
8

Slide the top hooks of left camera (labeled left) into the top slots of head unit (labeled left) as pictured. Insert left camera plug (red) into the slot marked with the red dot. Insert red/black wire into top green slot above it as pictured. Lower camera into place and tighten black knob.




STEP
9

Repeat: Connect right camera wire (green) to slot marked with green dot, and green/black wire to green slot above it as pictured. Lower into place and tighten knob.

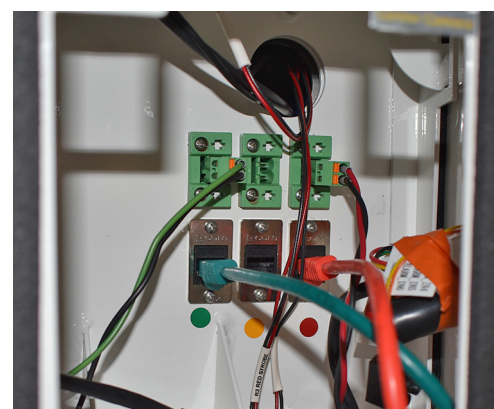

STEP
10

With the head unit complete, rotate it to the desired orientation. When in place, tighten and clamp the black quick release lever. Check to make sure the lever is clamped tight to prevent unit from rotating.

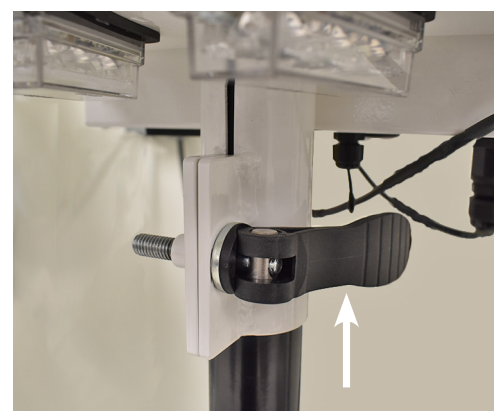

STEP
11

Plug the yellow power cord into the head unit as pictured.

Note: Unit will not power on until the power switch is flipped on in STEP 12.



STEP
12


Use the keys to open the control box on the mast. Flip the cameras and strobe light switches to the on position.

Close and lock Control Box.



STEP
13


Take the guy wire (included in a brown burlap sack inside of the battery box on the passenger side), and attach the clips on the ends of the guy wire to the outriggers on each side as pictured.

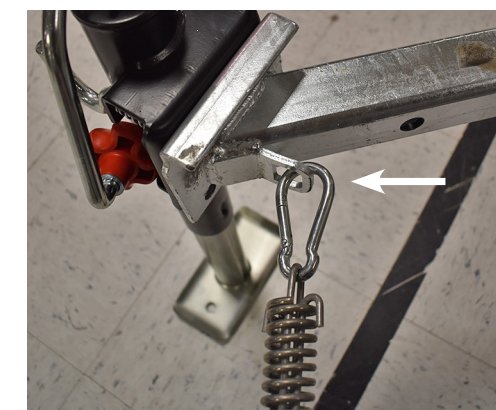

STEP
14

Place the middle of the guy wire across the guy wire hook at the top of the telescoping mast as pictured.

Make sure guy wire is free of any entanglements before moving to STEP 15.

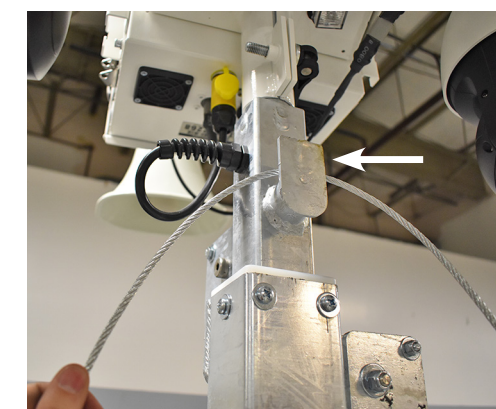


STEP
15

Use hand crank to raise mast until guy wire is almost tight. Allow wire to unspool as mast is raised. DO NOT overtighten. When the mast is fully raised, make sure the crank arm is positioned to the left of the mast as pictured. This allows room for the tongue to fold into place in STEP 16.




STEP
16

Pull trailer tongue locking pin and lift trailer tongue up until it locks flat against the base of the mast. Once locked into place, insert trailer tongue locking pin back in place. If needed, you can unlock the tongue by lifting the latch in the control box.

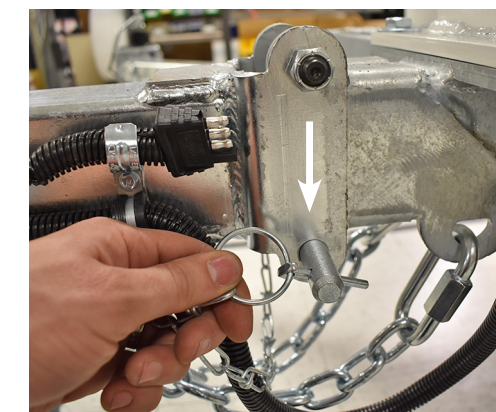

STEP
17

(If applicable) Unlock each jack lock box (4), and place over each outrigger jack (4). The lock box pin must be open and facing downward, and the jack handle and pin must be oriented exactly as shown for the lock box to fit in place. Once in place, swing bottom arm shut and lock the box

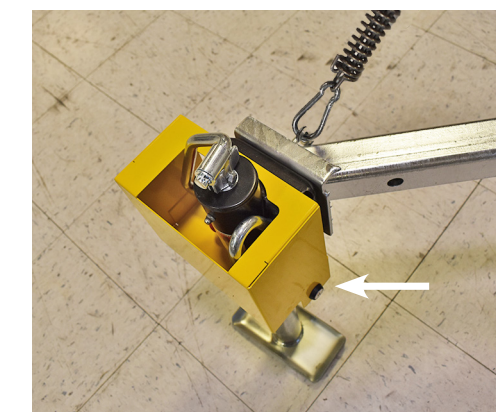

STEP
18

Rotate solar panel so that it faces SOUTH.

Make sure swivel pin is locked in place once panel is in South position.



STEP
19

Make sure each box and jack lock box is closed and locked. Use key to lock each box. After everything is locked, return key to the key lock box located above the left wheel. You will need to enter the code to open and close the key box. Push the clear button to clear the code when complete.



STEP
20

After STEPS 1-19 are complete, call LiveView Technical Support to complete onboarding.

Phone: 888-588-9408

