

## Installation Instructions


### BaseGrille SS-858 and SS-898 with hidden clips

#### **Guidelines:**

Before any installation is started, be sure to verify:

- Model of grille and frame
- Size of grille and frame
- That there are no visual defects or damage from shipment

**FAILURE TO FOLLOW THESE INSTALLATION INSTRUCTIONS MAY VOID YOUR WARRANTY.**

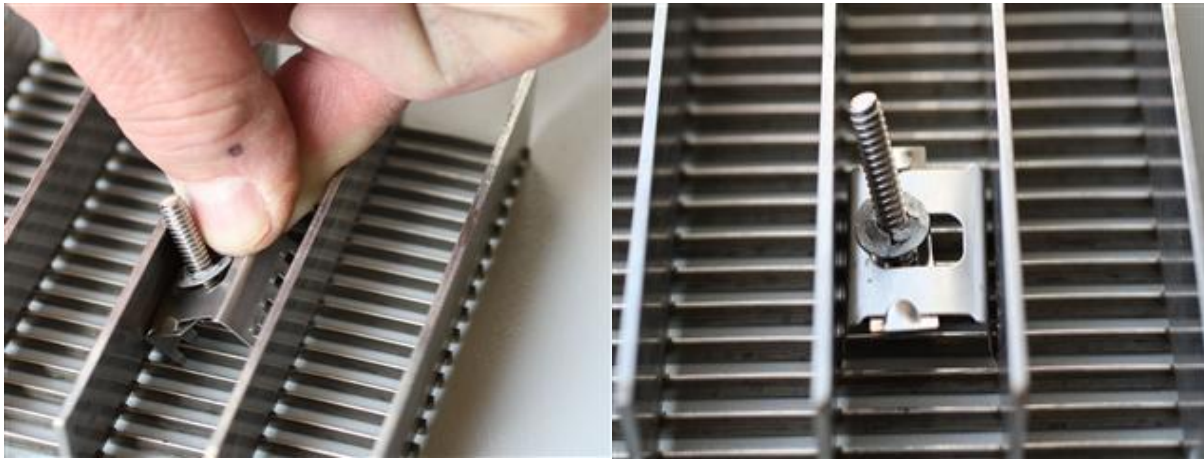

**1.** Select areas on the panels to install hold-downs clips (pre-assembled hardware) Typically at the four corners will suffice but be sure that the hold downs will not interfere with the existing frame piece. For cosmetic reasons locate the clips on each panel in the same areas.



**2.** Carefully place the panels in the recess. Adjust fit as needed and place exactly for final location.



**3.** Dip one end of 1/8" Allen wrench in puddle of pen ink or marking paint.



**4.** Carefully feed wrench through surface wires and mark cement floor at center keyhole of clip. These will be the location spots to install lead anchors.



**5.** Carefully remove panels from the recess. Keep in mind that these panels are not interchangeable. They will need to be re-installed in identical locations after the anchors are placed.



**6.** At the marked location on the floor, drill with a 3/8" concrete drill to the proper depth to fit the anchor. The holes must be free of dust and debris and oil prior to installing anchors.



**7.** Mix epoxy in separate tray and place adequate amount in each hole just prior to installing anchor. Preferred epoxy is Red Head Epcon A7 Fast Curing Acrylic.



**8.** Install anchor making sure the threaded part is upright and straight and free of excess epoxy. After anchors have set in place and cured, carefully re-install panels in original positions



**9.** Feed the 1/8" Allen wrench through surface wires and tighten cap screws to hold panels in position



**10.** The BaseGrille is now secured using lock downs.