


# MTG-\* Stick Probe Pre-Assembly Drawing

## MTG-\* Stick Probe Parts


Part: Spacer Brackets  
QTY: 4

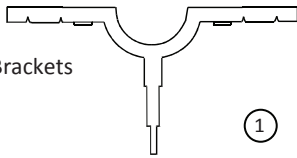


Part: Foot Adaptor  
QTY: 1




Part: Foot  
QTY: 1




Part: Screws  
QTY: 4



Part: 6' Extension  
Cable  
QTY: 1

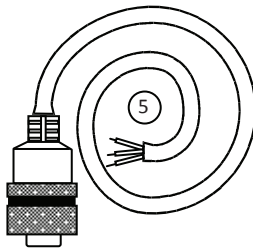


Part: Cathodic Boot  
QTY: 1




Part: Buna  
4" Product Float  
QTY: 1



Part: Buna  
4" Water Float  
with Ballast  
(DIESEL=95 GAS=85)  
QTY: 1



Part: 4" Cap  
QTY: 1

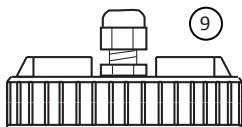

## Installation Instructions

1. Install spacer brackets as shown on right. Lower spacer should be placed 8" from the top of the probe. The upper spacer should be placed as high as possible, just below the head of the probe.
2. Install the 4" product float followed by the 4" water float. Check that your water float has the proper ballast (DIESEL=95 GAS=85).
3. Install cathodic boot
4. Install foot adaptor (foot adaptor locks onto the foot)
5. Install foot adaptor
6. Attach yellow cable to head of probe.
7. Pull yellow cable through 4" cap. Tighten 4" cap down on riser pipe.
8. See SK-4 Connector Sealing Kit Instruction Sheet

## For standard 4" Buna Floats

TOP VIEW

