


MTG-STK-* Stick Probe Pre-Assembly Drawing for SSF-2

MTG-STK-* STICK PROBE PARTS


Part: Spacer Brackets
QTY: 4

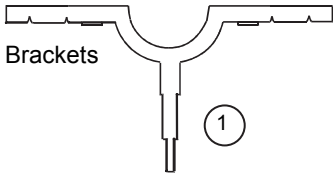


Part: Foot Adaptor
QTY: 1




Part: Foot
QTY: 1

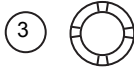

Part: Screws
QTY: 4

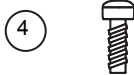


Part: 6' Extension Cable
QTY: 1

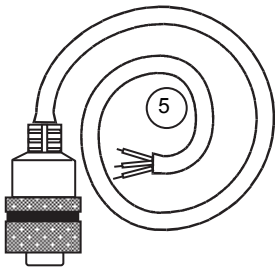


Part: Cathodic Boot
QTY: 1




Part: Stainless Steel Float
QTY: 2

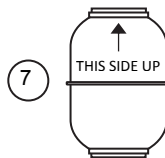

Part: Ballast (see illustration)
QTY: **IMPORTANT:**
3 spacers for Gas,
or 4 for Diesel

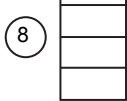

Part: 2" cap
PART# 2IN-CAP
QTY: 1

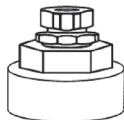


Part: Spacer*
QTY: 1




Installation Instructions

1. Install spacer brackets as shown on right. Lower spacer should be placed 8" from the top of the probe. The upper spacer should be placed as high as possible, just below the head of the probe.
2. Install one of the 2"SS floats
3. Install ballast (3 for Gas, 4 for Diesel)
4. Install the other 2" SS float
5. Install one single spacer (Part 9)
6. Install Cathodic boot (Part 6)
7. Install foot adaptor (Part 2)
8. Install Foot (Part 3)


DIESEL BALLAST

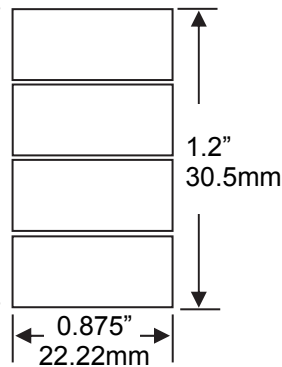

GAS BALLAST


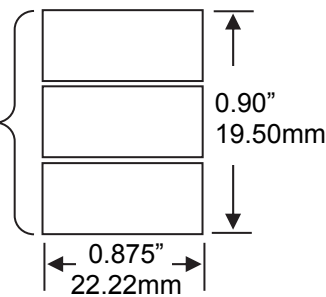


SPACER*

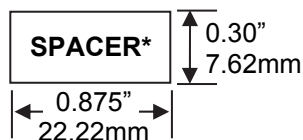

For SSF-2
2" 316 stainless steel floats

TOP VIEW

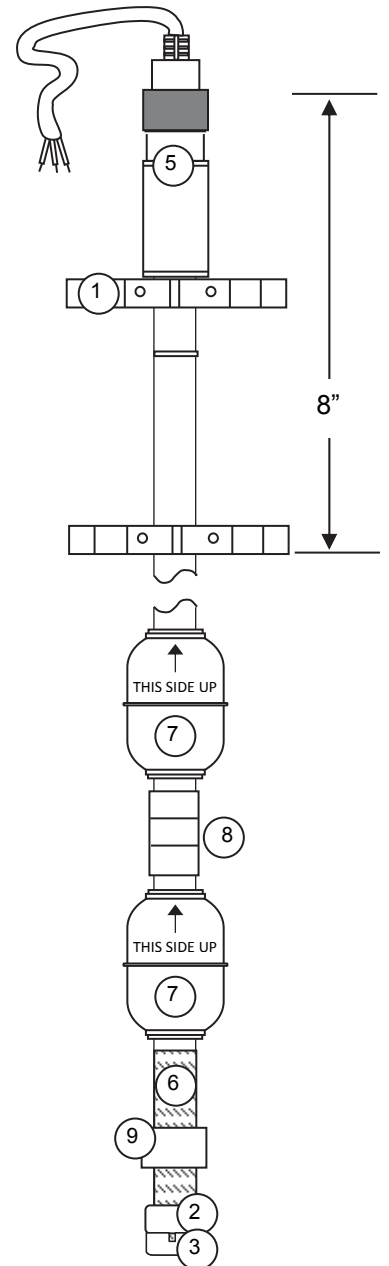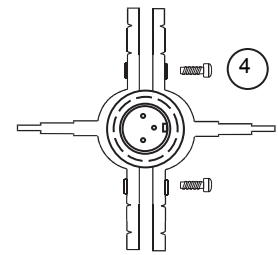


*Spacer only required for floats without the up arrow.

MTG-STK-* Stick Probe Pre-Assembly Drawing for SSF-2

MTG-STK-* STICK PROBE PARTS


Part: Spacer Brackets
QTY: 4

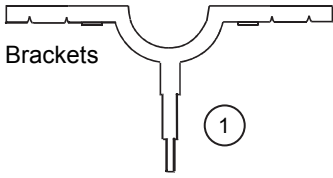


Part: Foot Adaptor
QTY: 1




Part: Foot
QTY: 1

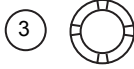

Part: Screws
QTY: 4

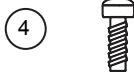


Part: 6' Extension Cable
QTY: 1

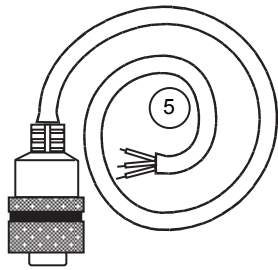


Part: Cathodic Boot
QTY: 1



Part: Stainless Steel Float
QTY: 2

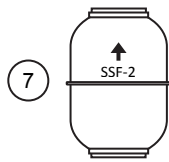

Part: Ballast (Diesel and Gas shown)
QTY: 1

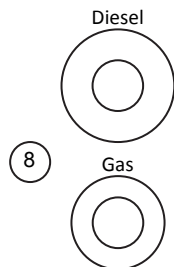


Part: 2" cap
PART# 2IN-CAP
QTY: 1




Installation Instructions

1. Install spacer brackets as shown on right. Lower spacer should be placed 8" from the top of the probe. The upper spacer should be placed as high as possible, just below the head of the probe.
2. Install one of the 2" SS Floats (Part 7)
3. Install Ballast (Gas or Diesel - Part 8)
4. Install the other 2" SS Float (Part 7)
5. Install Cathodic Boot (Part 6)
6. Install Foot Adaptor (Part 2)
7. Install Foot (Part 3)

DIESEL BALLAST

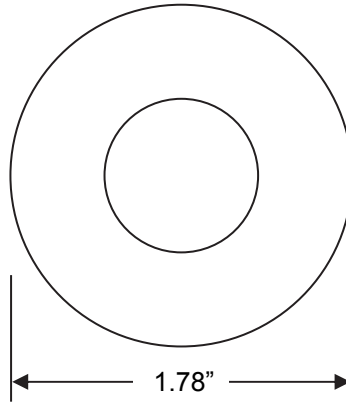

GAS BALLAST

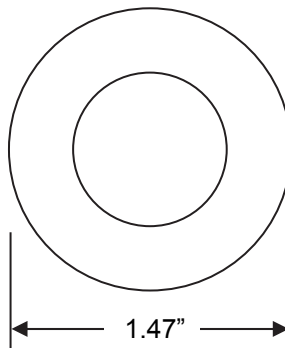

For SSF-2
2" 316 stainless steel floats

TOP VIEW

