


# MTG-420 Stick Probe Pre-Assembly Drawing

## MTG-420 STICK PROBE PARTS


Part: Spacer Brackets  
QTY: 4

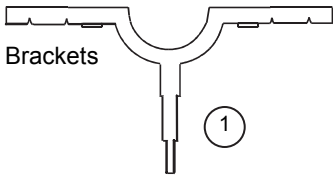


Part: Foot Adaptor  
QTY: 1




Part: Foot  
QTY: 1




Part: Screws  
QTY: 4



Part: 6' Extension Cable  
QTY: 1

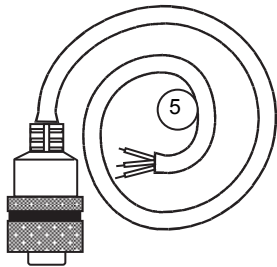

Part: 2" Stainless Steel Float  
QTY: 1

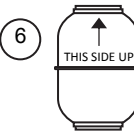


Part: Metal Spacer  
QTY: 1



## Installation Instructions

1. Install spacer brackets as shown on right. Lower spacer should be placed 8" from the top of the probe. The upper spacer should be placed as high as possible, just below the head of the probe.
2. Install 2" SS float
3. Install spacer
4. Install foot adaptor (foot adaptor locks onto the foot)
5. Install foot
6. Attach yellow extension cable to head of probe

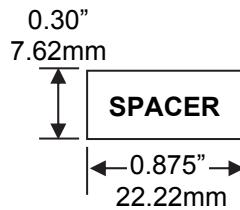

For **SSF-1-2**  
2" 316 Stainless Steel Float

### TOP VIEW

