



MTG-420 Stick Probe Pre-Assembly Drawing

MTG-420 STICK PROBE PARTS


Part: Spacer Brackets
QTY: 4

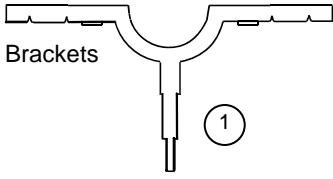


Part: Foot Adaptor
QTY: 1




Part: Foot
QTY: 1



Part: Screws
QTY: 4



Part: 6' Extension Cable
QTY: 1

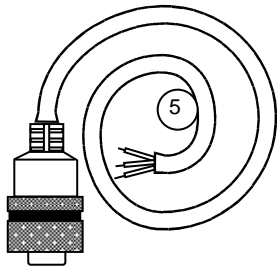

Part: 4" Buna Float
QTY: 1



Installation Instructions

1. Install spacer brackets as shown on right. Lower spacer should be placed 8" from the top of the probe. The upper spacer should be placed as high as possible, just below the head of the probe.
2. Install 4" buna float
3. Install foot adaptor (foot adaptor locks onto the foot)
4. Install foot
5. Attach yellow extension cable to head of probe

For **BNF-1-4**
4" Buna Float

TOP VIEW

