



A	1 X3/4 BUSHING	F	3/8 HOSE 2 FT IN LENGTH
B	3/4 NIPPLE	G	3/4 COUPLING
C	3/4 JUNCTION BOX	H	1/2 COUPLING
D	3/4 X 1/2 BUSHING (2)	I	LIQUID TIGHT STRAIN RELIEF
E	3/8 LIQUID TIGHT FITTING (2)	J	WIRELESS MAST (not included in kit)

DS-S PROBE WITH 2IN CAP

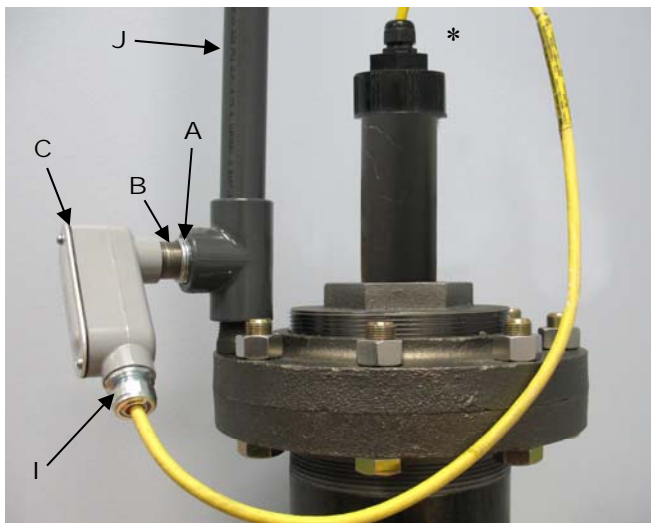


DS-S PROBE WITH 4IN CAP

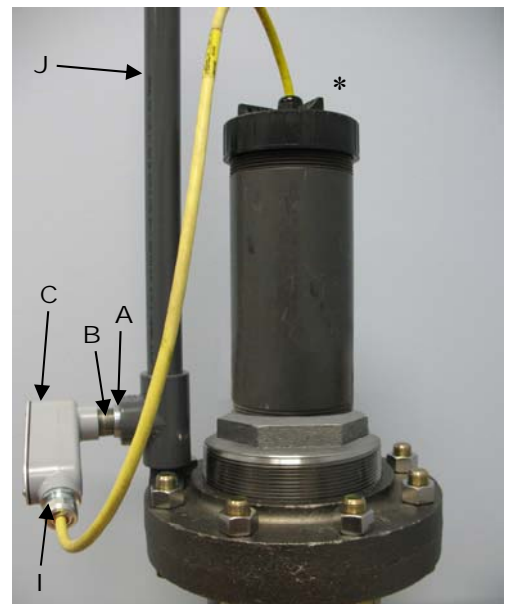


*2IN and 4IN cap not included with junction box kit, but available at OMNTEC

FIXED BOTTOM D-VB / *MTG-FB

*A and B not required with MTG-FB probe installation. *J not used in installation of MTG-FB probe.

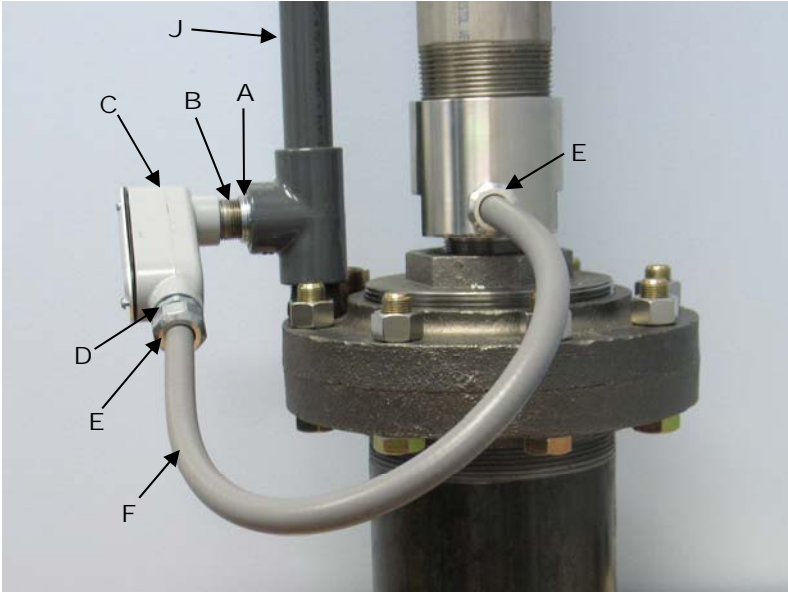


VERSA LEVEL

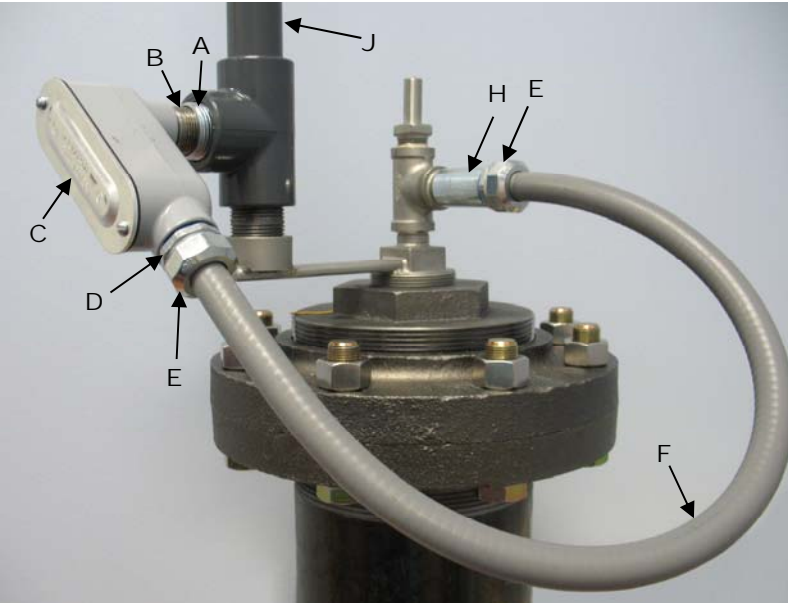


FIXED BOTTOM D-V / *MTG-F

*A and B not required with MTG-F probe installation. *J not used in installation of MTG-F probe.

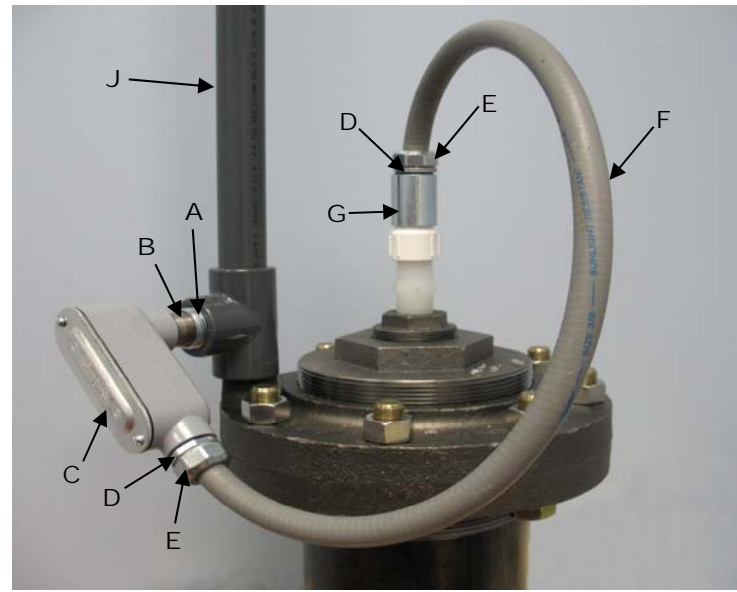

DUO CHECK

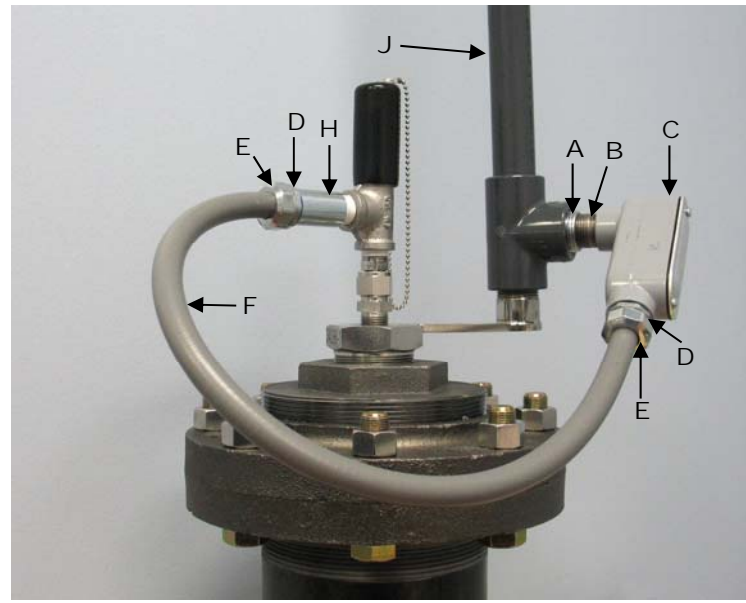

DS-S SWAGE LOCK APPLICATION

