


CANZAC®

Under Slab - In Slab - On Slab®

SPEED BASKET INSTRUCTIONS


- 1) Measure and mark (notch or nail) the saw-cut location on the forms.
- 2) Pull string lines then spray paint saw-cut locations on the sub-grade.
- 3) Lay out one row of baskets over painted marks on the sub-grade. Keep Dowel Plates a minimum of 300mm away from the intersection of two joints.
- 4) Place concrete ensuring that baskets maintain alignment over painted marks.
- 5) Vibrate screed and finish concrete as normal.
- 6) Using notches or nails on forms, snap chalk lines to mark locations of saw-cut. Ensure you have located the saw-cuts on the sleeve side of the dowels.
- 7) Saw-cut joints along chalked lines to the specified depth, normally at least 25% of the slab thickness. Softcut within 12 hours of the start of the pour.

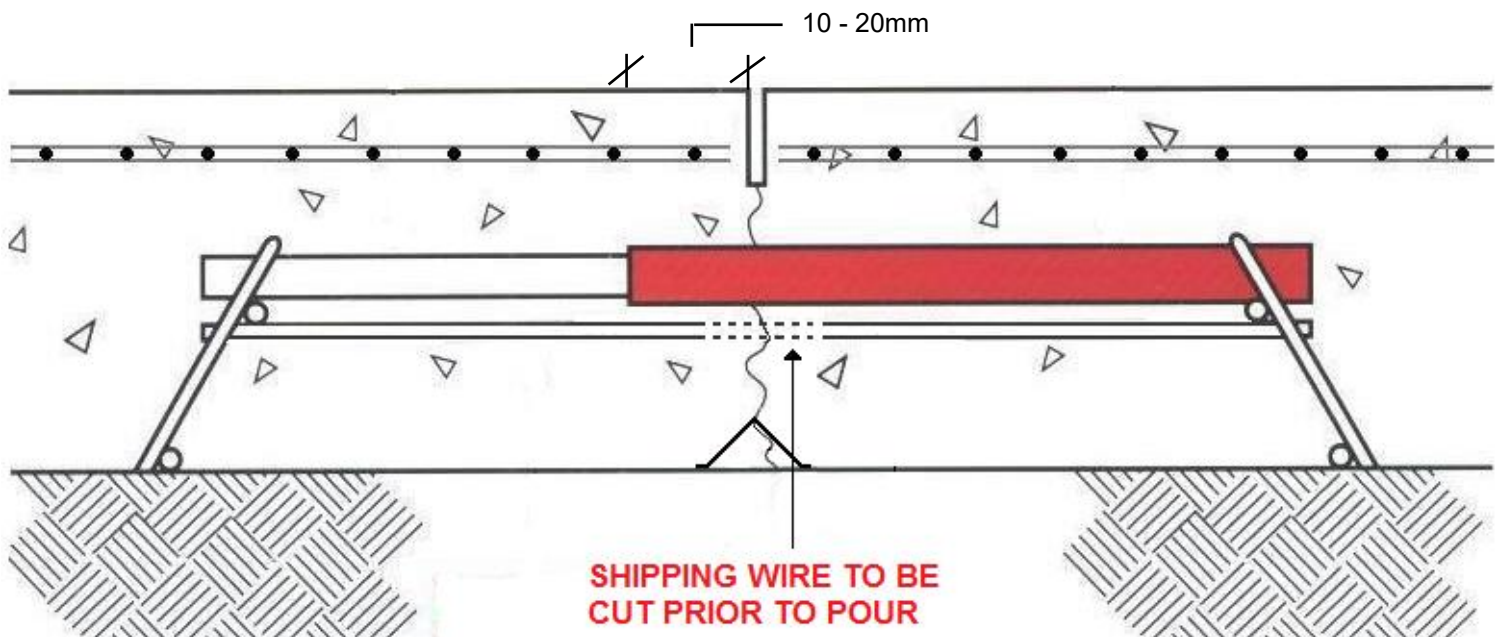

CANZAC®

PO Box 3181, 3 Parkhouse Road, Wigram, Christchurch, New Zealand
Phone: 03 343-4254 • Fax: 03 343-4237 • Freephone: 0800 422 692
info@canzac.com • www.canzac.com

PLEASE CUT SHIPPING WIRE BEFORE POURING CONCRETE

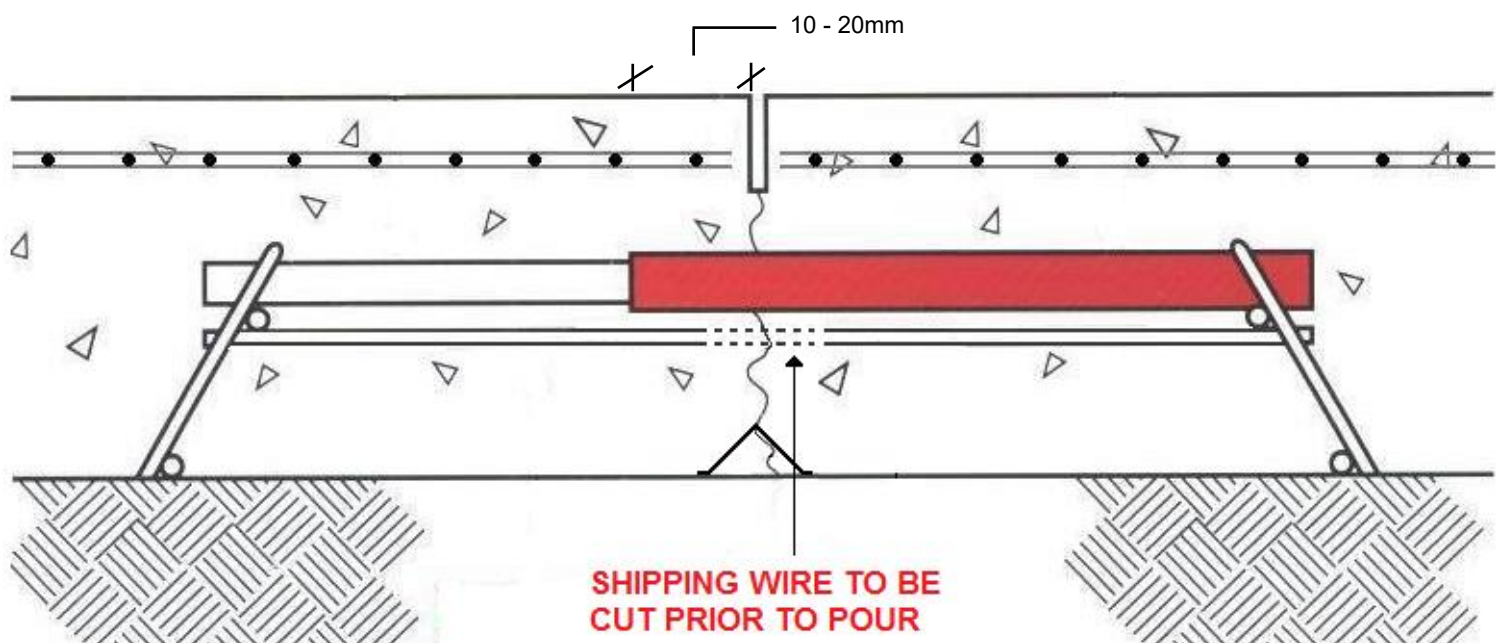

CANZAC[®]

PO Box 3181, 3 Parkhouse Road, Wigram, Christchurch, New Zealand
Phone: 03 343-4254 • Fax: 03 343-4237 • Freephone: 0800 422 692
info@canzac.com • www.canzac.com