




# Si EN a ECO Bond Vinyl Installation


## Installation Guide




- 1.
- 
- Store adhesive at a minimum temperature of 68° F (20° C) for 24 hours prior to installation.
  - Condition flooring per manufacturer's recommendations.

- 2.
- 
- Ensure substrate, flooring and surrounding areas are clean and dust free.
  - Damp-mop substrate if dust is present.
  - Only use Portland based patching and leveling compounds.

- 3.
- 
- Wipe hand across surface.
  - If dust transfers, substrate is not clean.


- 4.
- 
- HVAC must be continuously operated for a minimum of 72 hours at a temperature of no less than 68° F (20° C) prior to installation.

- 5.
- 
- Protect from overspray with a spray shield, drop cloths, paper or masking.

- 6.
- 
- 
- Shake aerosol can well for 30 seconds.
  - Remove white cap.

- 7.
- Attach hand lever.
  - Slide under lip.
- OR**
- Use your finger.



- 8.
- 
- Stand straight up, bend over only when necessary.
  - Adhesive should spray out in a wide mist and fall similar to snow towards desired surface.
  - Hold can upside down slightly away from the body as illustrated, approximately 20-30 inches (50-76 cm) horizontally from the substrate. Aim at floor and press hand lever or press tip with finger.

Avoid extremely heavy application. For proper coverage refer to spray pattern photo on back.


- 9.
- Smoothly walk back and forth to uniformly apply adhesive and achieve results in the photo on the reverse side.

### NOTE

- Spraying in a sweeping motion may result in an inconsistent spray pattern.
- Excess buildup or inconsistent spray pattern on substrate may cause telegraphing.




10.




- To ensure optimal spray pattern, remove any adhesive build up that may occur during the application process.

13.




- Open time after application is 4 hours. While open, ensure that adhesive is not contaminated by dust.

11.




- Wipe overspray off with a damp cloth. If overspray dries, remove with mineral spirits.

14.

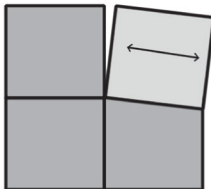


- Follow flooring manufacturer's recommendations for installation.
- Position Tile or Plank.
- Ensure proper alignment before application of pressure.
- Reposition as necessary.

12.

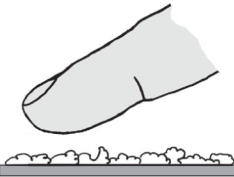


- Allow adhesive to dry until there is no adhesive transfer when lightly touched.
- High humidity and/or low temperature increases tack time.

15.

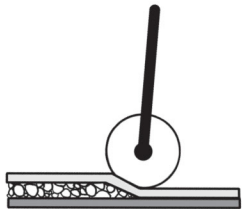

- Roll flooring with a 100 lb. (45 kg) roller within 1 hour after installation to complete the bonding process.
- After rolling, floor is ready for all access.

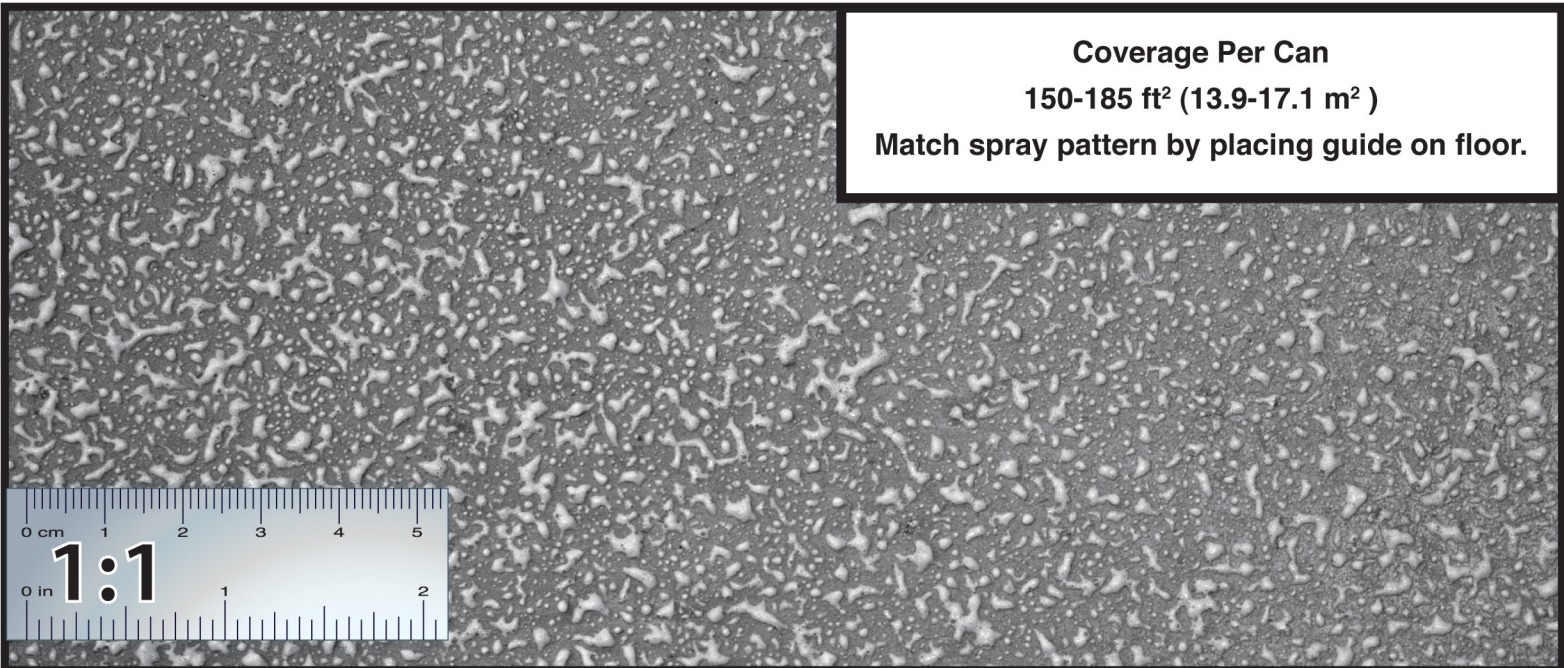

**Coverage Per Can**  
**150-185 ft<sup>2</sup> (13.9-17.1 m<sup>2</sup>)**  
**Match spray pattern by placing guide on floor.**