

Ronick Entrance Mat- Reducing Mat Width

1




Tools Needed: Circular Saw, Rotary Metal Blade
Clamps, Straight Edge, Ear/Eye Protection

Optional: Propane Torch, Scissors

Note: Installation times may vary depending upon the size and installation type of your mat.

*Product shown is Pedimat M2- use as a reference for other products.

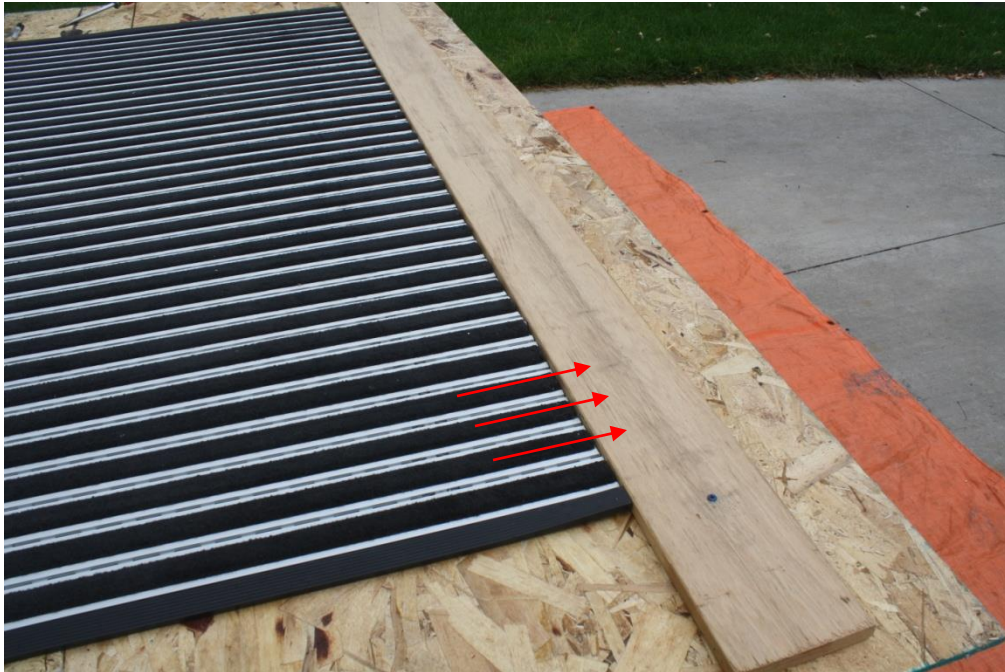

Unroll your mat and line-up one side against a fence. Push all rails towards fence to ensure to no gaps.



Set the metal straight edge using Clamps and use as a guide for cutting. Remember to include the Circular saw offset in your measurement.




Clamps holding straight edge for cutting.




Cut using your circular saw. Following the straight edge as your guide.



Post view of cut rail

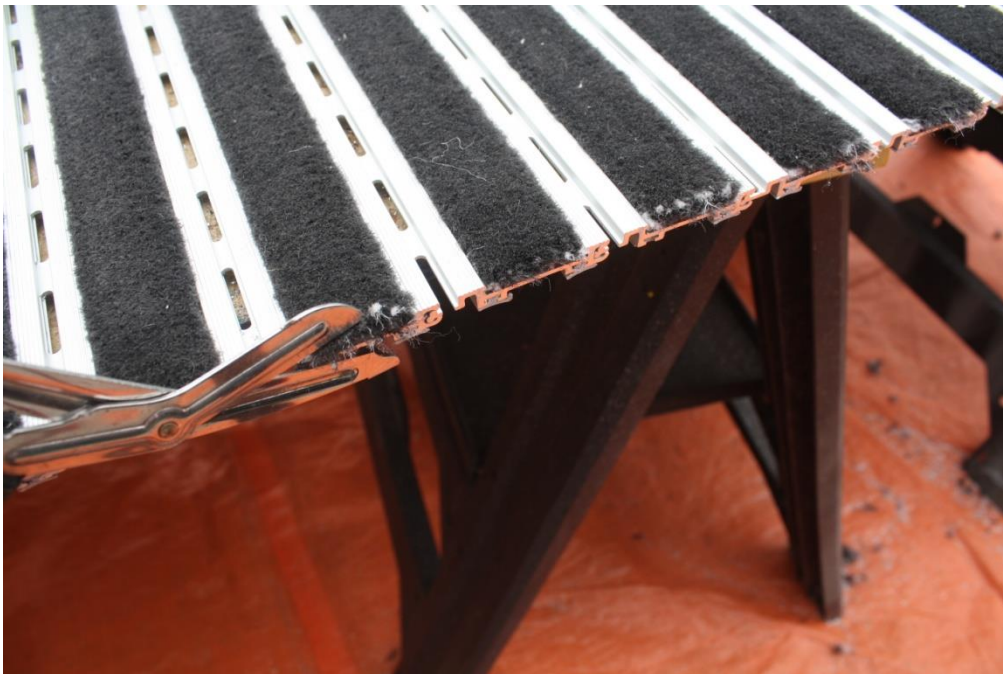

*Optional- Cut carpet with scissors to remove fiber build up and strands.

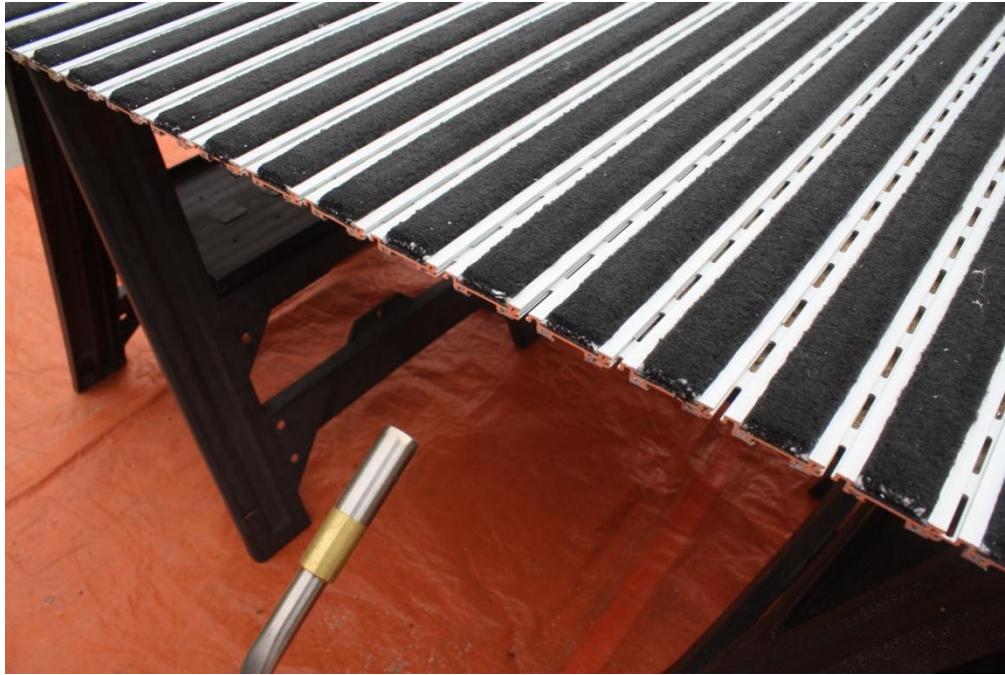

5

*Optional- Use a torch to lightly burn carpet insert edges.