

# Ronick Measuring for Pedimat, PediTred, Pedigrid Replacement

1



**Tools Needed:** Measuring Tape, Razor, Straight Edge



There are two ways to measure your mat:

### 1. Mat Size


Measure the exact size of the existing mat. Measure the **Rail Direction** in three places -- at the top, middle, and bottom of the mat. Repeat for the **Traffic Direction** of the mat by taking measurements at the right side, the center and the left side. The three dimensions are needed so that the shortest measurements are used to ensure mat fitting in recess.

2

OR

### 2. Rough Opening

By Rough Opening we mean the INSIDE dimensions of the existing recess area -- inside frame to inside frame. Measure the **Rail Direction** at the top, middle, and bottom of the mat. Repeat for the **Traffic Direction**, taking measurements at the right side, the center and the left side. Do NOT add or subtract any measurements for accommodating mat installation/mat fitting. The dimensions you submit will take into account the necessary adjustments necessary for a custom fit.

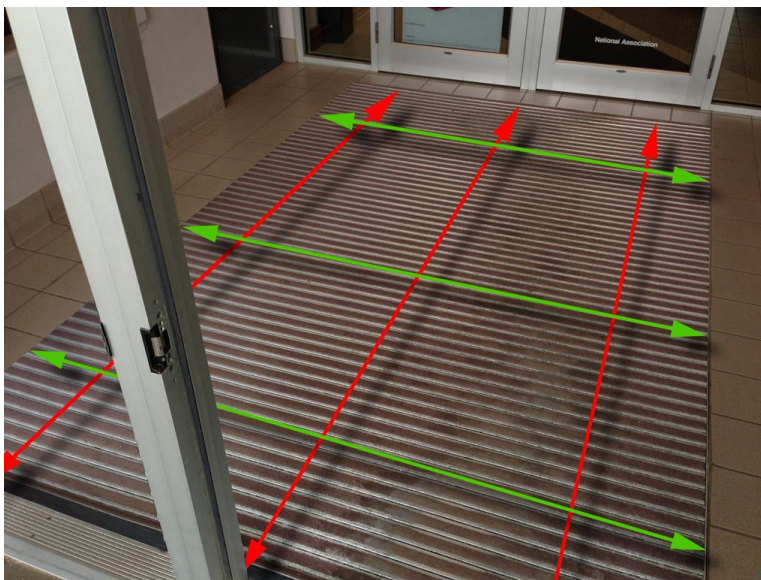

Provide the dimensions by measuring the **Rail Direction** and **Traffic Direction**. Ronick provides a shop drawing to verify the dimensions for your new mat is correct. Once ordered your mat will arrive in approximately 4-6 weeks.



The new entrance mat's measurements, top-to-bottom (traffic direction) might not be the exact length (i.e. Pedimat rails are 2" on center). For those installations, your mat will have black vinyl filler.



This filler is provided so that you can do an on-site custom fitting of your new mat. As illustrated, the filler can be easily cut using a razor and a straight edge, ensuring a snug, custom fit





When “dry fitting” your new mat, take notice of any necessary vinyl filler adjustment required. Take into account that these vinyl filler alterations should be done from both ends of the mat -- ensuring a balanced appearance.



The finished look of your new aluminum entrance mat.