



FRONT ELEVATION


GLASS POOL FENCING 1200MM

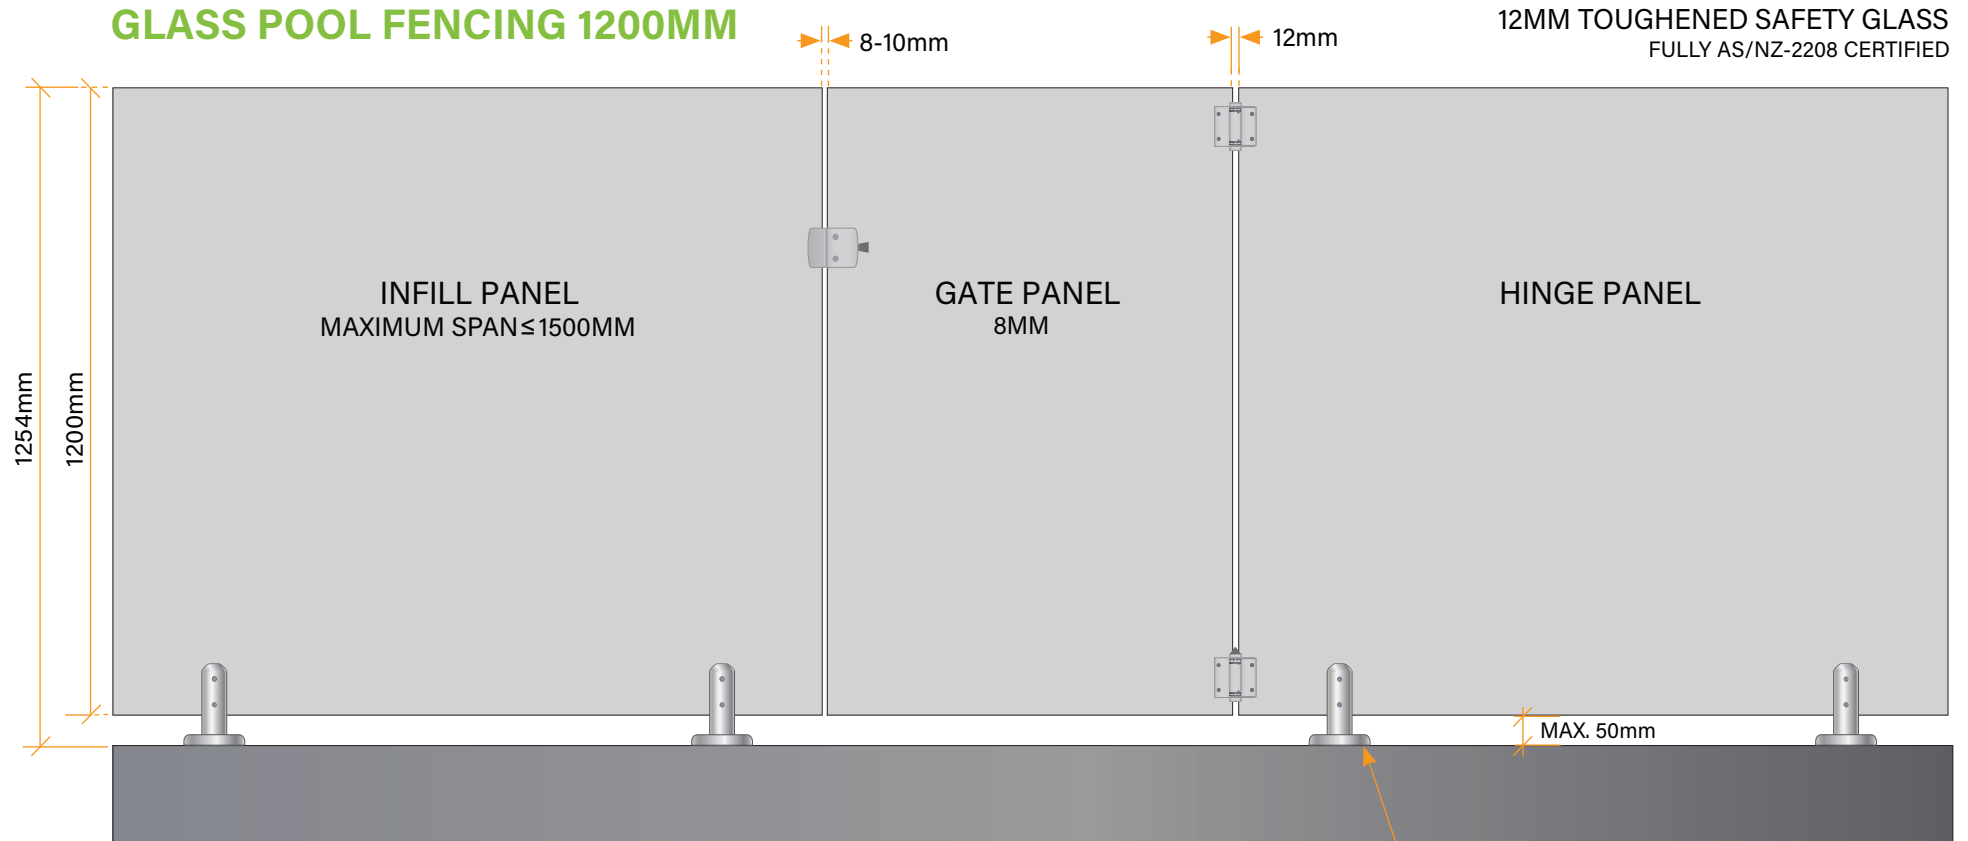

Please refer to PS1 for footing and installation details.

Always check with your local council before installation.

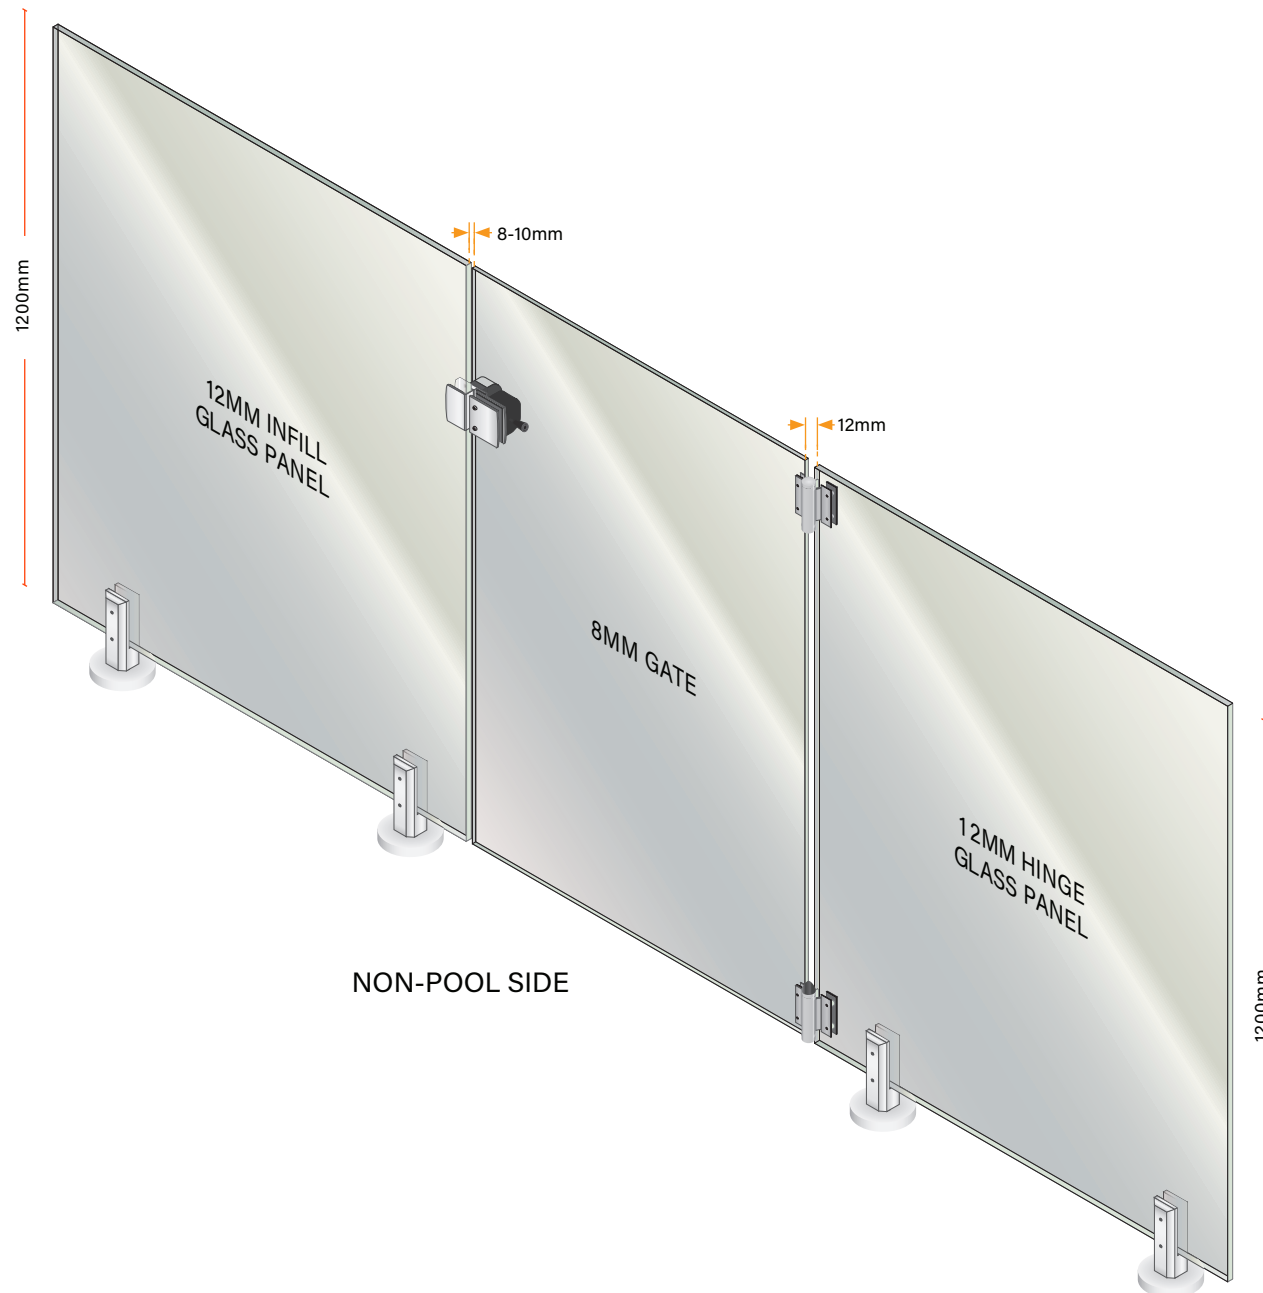


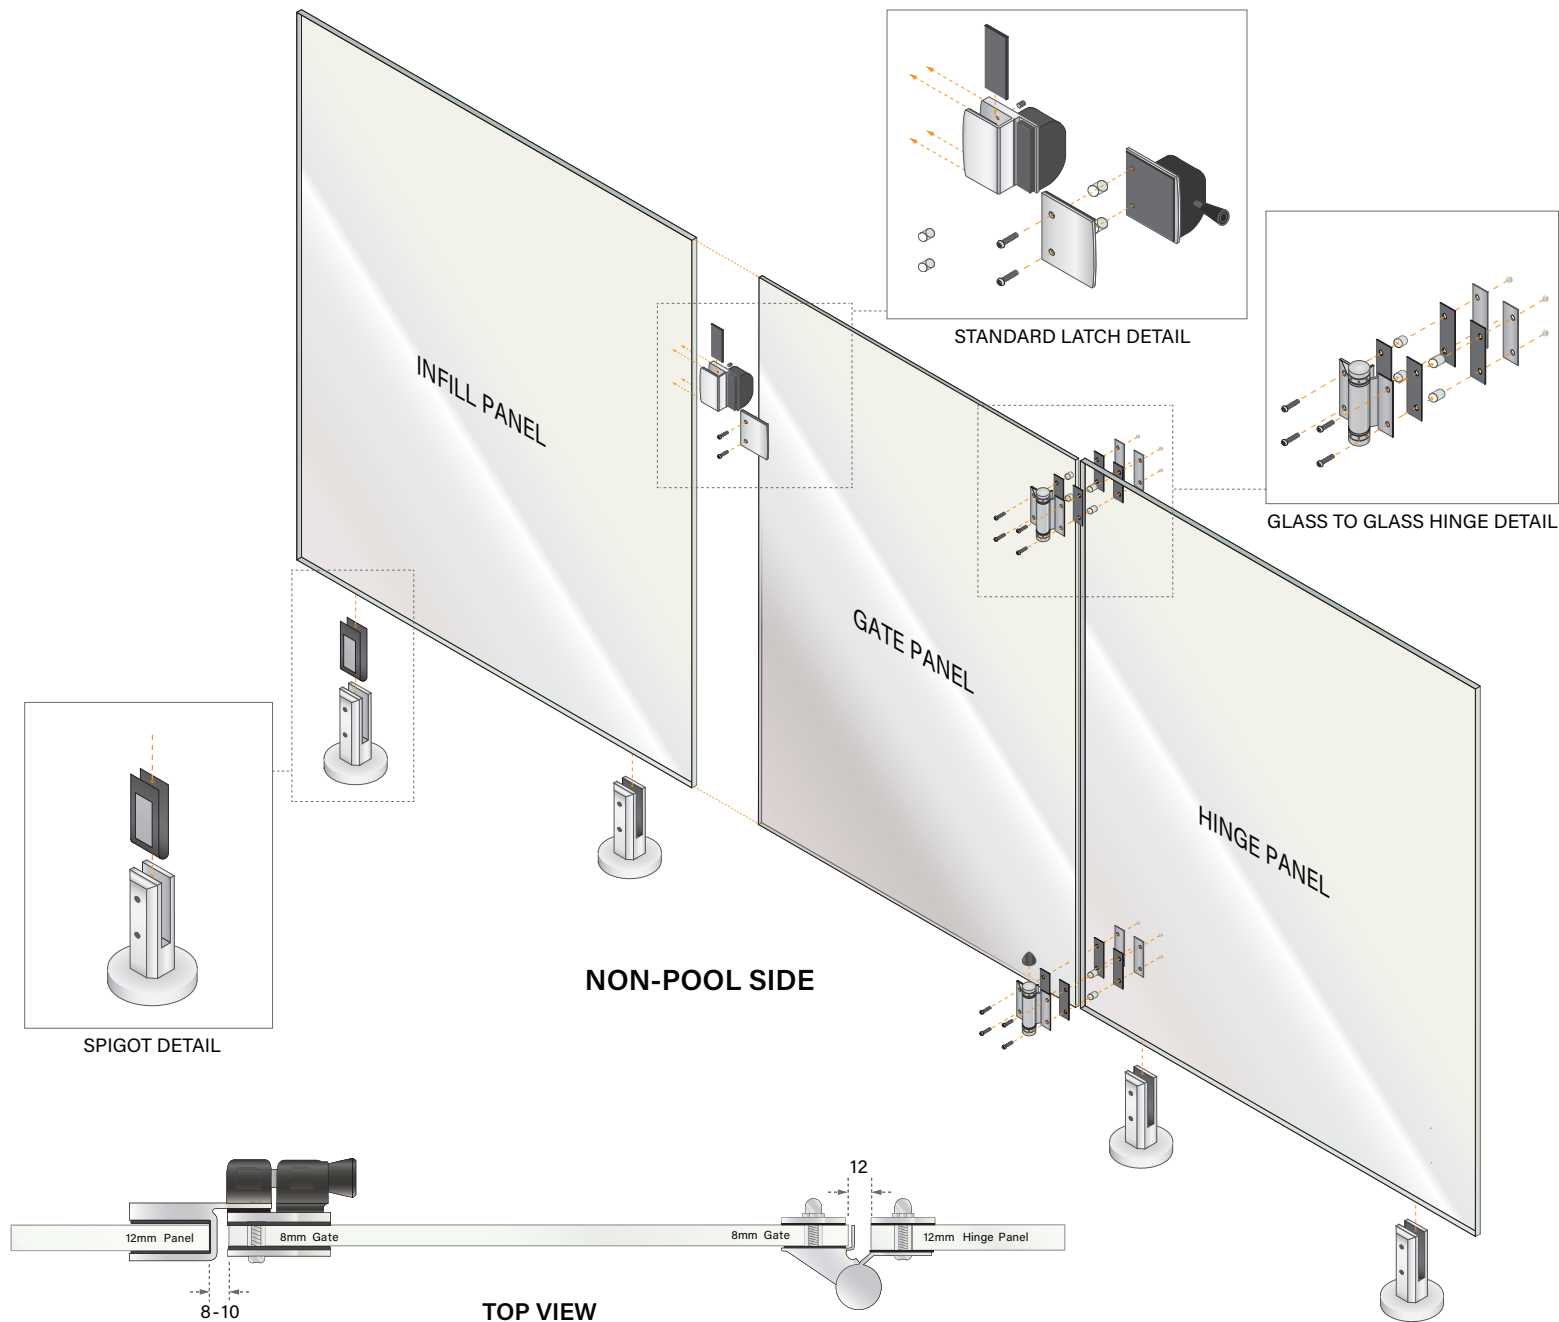


STEP 1

- A. 4 x M6 x 20mm Stainless Steel pan Head Hex Drive Screw (Panel side)
- B. 2 x Glass to Glass Gate Flt Stainless Steel hinge (Pair)
- C. 8 x Clear Protective Bolt Sleeves
- D. 8 x M6 Stainless Steel Dome Nuts
- E. 4 x Stainless Steel Backing Plates
- F. 8 x Rubber Gaskets (Black)
- G. 4 x M6 x 25mm Stainless Steel Pan Head Hex Drive Screw (Gate Side)
- H. 12mm Toughened Glass Hinge Panel
- I. 8mm Toughened Glass Gate


TIPS:
The round rubber gasket is not required for installation.

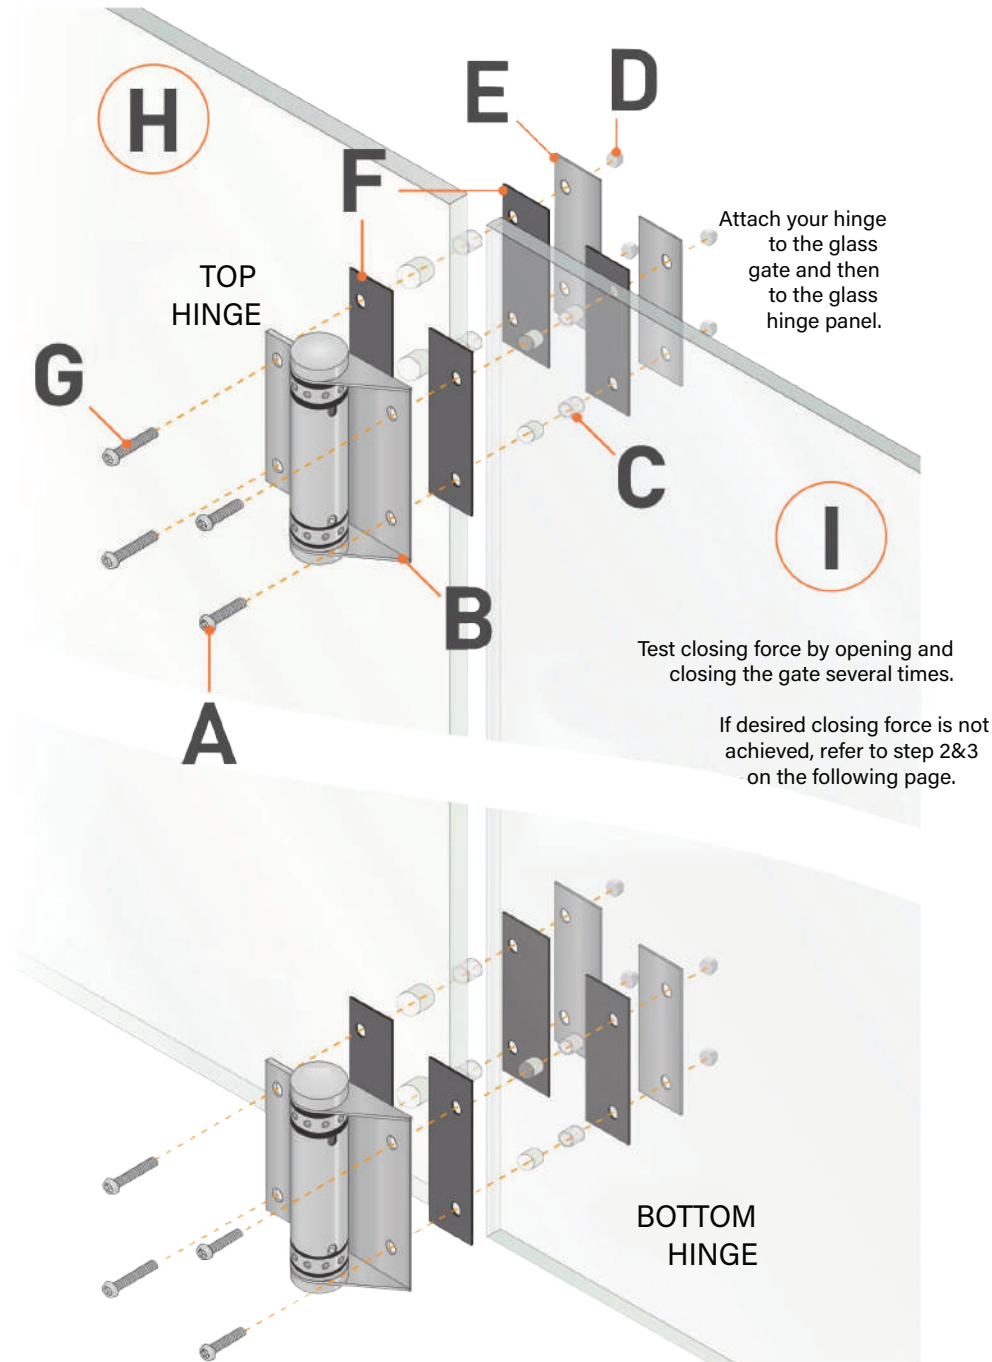

STEP 2

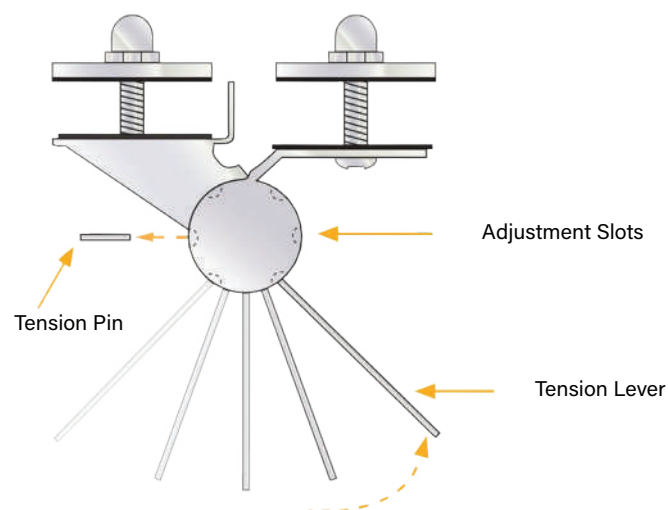


Insert tension lever tool into one of the centre adjustment slots. Gently twist anti-clockwise to untension and remove the tension Pin.

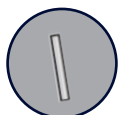

KEEP THE TENSION PIN, YOU WILL NEED IT!

STEP 3

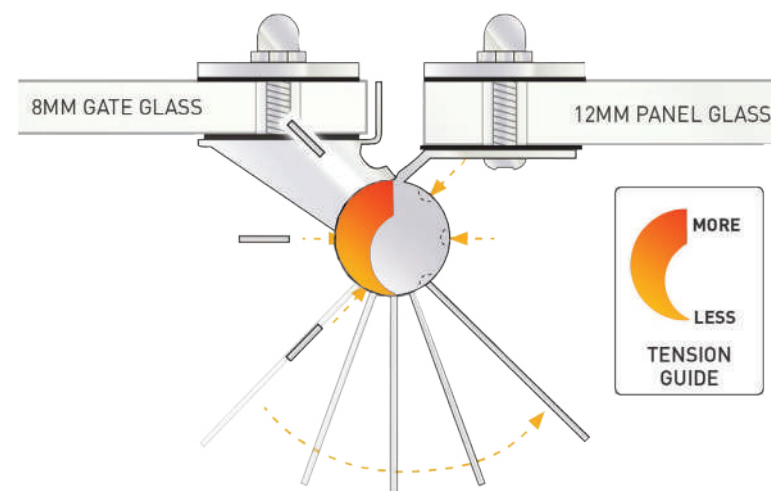

Insert tension lever tool into one of the centre adjustment slots, twist anti-clockwise and re-insert the pin shown.

The closer you insert the pin to the gate, the more rigid the gate's opening and closing tension will be.

