

Screening

The Portable Solution for Vascular Screening

VICORDER®



Ankle Brachial Index (ABI)


- Detecting PAD through automated oscillometric testing
- Easy setup, evaluation and concise reporting

PULSE WAVE VELOCITY (PWV)

- Identifying cardiovascular risk by measuring arterial stiffness within minutes

CENTRAL BLOOD PRESSURE MEASUREMENT (PWA)

- Assisting in hypertension management with complimentary parameters

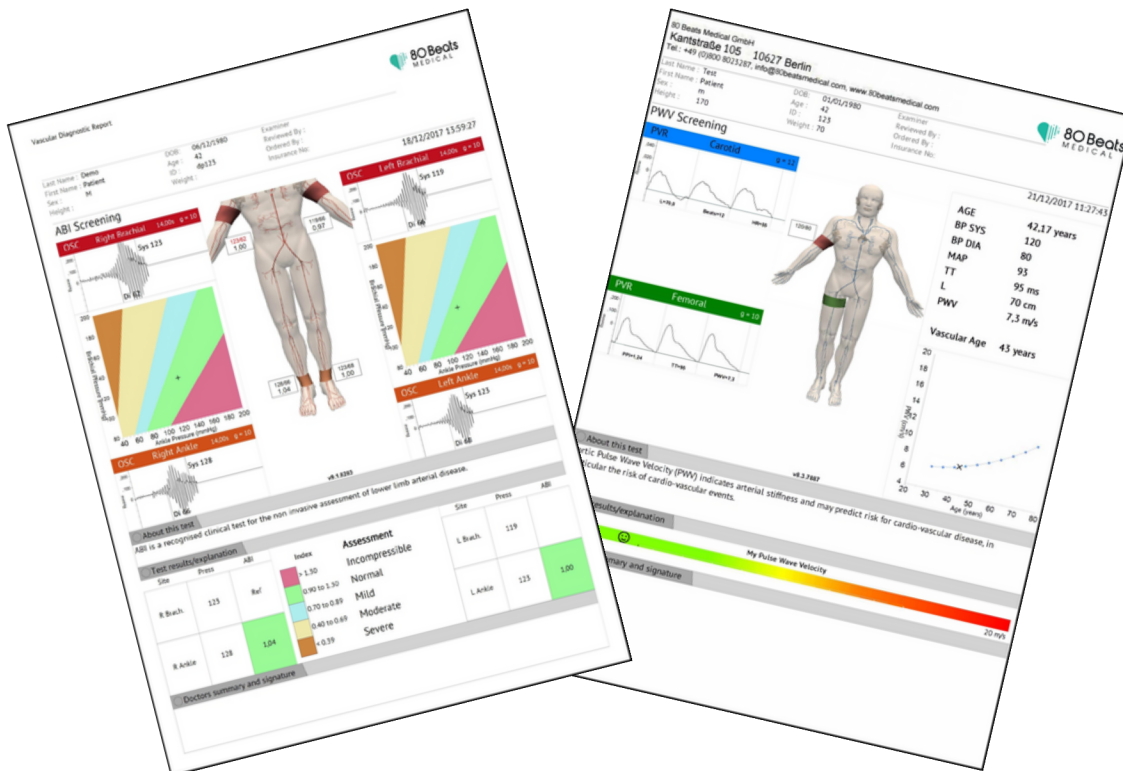

Contact

80 Beats Medical GmbH
www.80beatsmedical.com

