



DRUG PRECURSOR TESTING KITS

Procedure Card for IDT0260T

ACETIC ANHYDRIDE IDENTIFICATION


Substance Test

Read 
Before Use

As a precaution, gloves and eye protection should be worn when handling drug substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive. If necessary, further testing by a competent drug testing lab can provide additional identification.

Test Preparation

1 Remove the Smart-Tip™ probe from test unit.




2 Sample suspected substance.

Liquid

Place the absorbent paper of Smart-Tip™ probe into liquid. Make sure paper is completely wet.



3 Lock Smart-Tip™ probe into test unit. Press firmly.

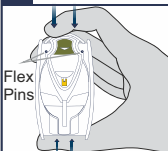


STOP

Do not continue unless probe is locked below the Flex Pins and cannot be removed from the test unit.

Identification

4 With **thumb and forefinger**, squeeze chamber 1 until capsule breaks.

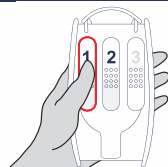


5 Gently shake test unit for 2-3 seconds.



Identification

6 With **thumb and forefinger**, squeeze chamber 2 until capsule breaks.

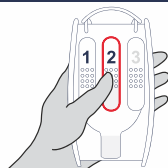

7 Gently shake test unit for 2-3 seconds.



Results



The appearance of a yellow color indicates the presence of **Acetic Anhydride**.



If no yellow color develops, Acetic Anhydride is not present.



Disposal

The test kit is safe to dispose of in the trash.

0739